## REASSEMBLY

1. **INSTALL NO. 1 SEAT CUSHION FRAME SUB-ASSEMBLY**
   (a) Install the seat cushion frame with the bolt.
   **Torque: 20.6 N*m (210 kgf*cm, 15 ft.*lbf)**

2. **INSTALL RECLINING CONTROL LINK SUB-ASSEMBLY**
   (a) Install the reclining control link with the E-ring.
   (b) Install the nut.

3. **INSTALL REAR SEAT TRACK ADJUSTING HANDLE**
   (a) Install the seat track adjusting handle.

4. **INSTALL REAR SEAT RECLINING ADJUSTER ASSEMBLY RH**
   (a) Install the seat reclining adjuster with the bolt.
   **Torque: 55 N*m (561 kgf*cm, 41 ft.*lbf)**

5. **INSTALL NO. 1 REAR SEAT BELT ASSEMBLY OUTER RH**
   (a) Install the reclining sensor together with the seat belt with the nut.
   **Torque: 4.0 N*m (41 kgf*cm, 35 in.*lbf)**

6. **INSTALL RECLINING CONNECTING PIPE**

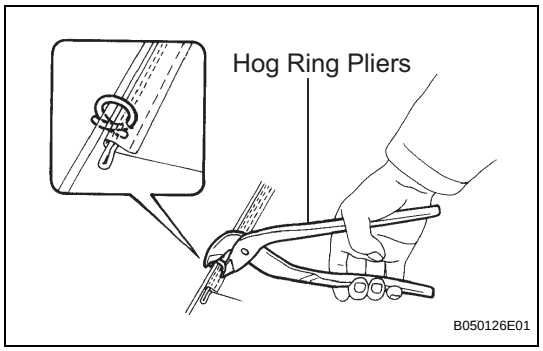
7. **INSTALL REAR SEAT RECLINING ADJUSTER ASSEMBLY LH**
   (a) Install the seat reclining adjuster with the bolt.
   **Torque: 43.1 N*m (439 kgf*cm, 32 ft.*lbf)**
   (b) Install the reclining remote control cable.

8. **INSTALL REAR SEAT HINGE COVER**
   (a) Install the seat hinge cover with the screw.

9. **INSTALL REAR SEAT HINGE COVER LH**
   (a) Install the seat hinge cover with the screw.

10. **INSTALL NO. 1 SEATBACK FRAME SUB-ASSEMBLY**
    (a) Install the seatback frame with the bolt.
    **Torque: for RH side**
    **55 N*m (561 kgf*cm, 41 ft.*lbf)**
    **for LH side**
    **43.1 N*m (439 kgf*cm, 32 ft.*lbf)**
    (b) Install the seat belt retractor with the nut.
    **Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)**

11. **INSTALL REAR SEAT SHOULDER BELT COVER RH**
    (a) Install the seat shoulder belt cover with the 2 screws.



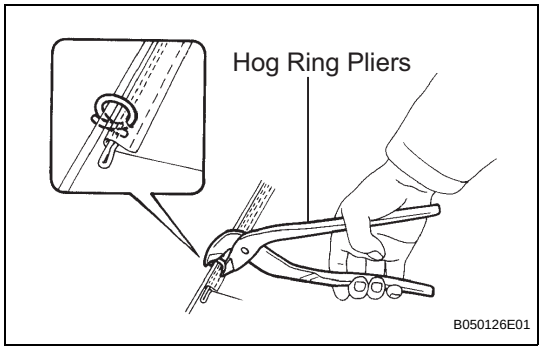

**12. INSTALL NO. 1 SEAT CUSHION COVER SUB-ASSEMBLY**

(a) Install the seat cushion pad to the seat cushion cover.

(b) Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

**NOTICE:**

- **Be careful not to damage the cover.**
- **hen installing the hog rings, take care to prevent wrinkles as much as possible.**



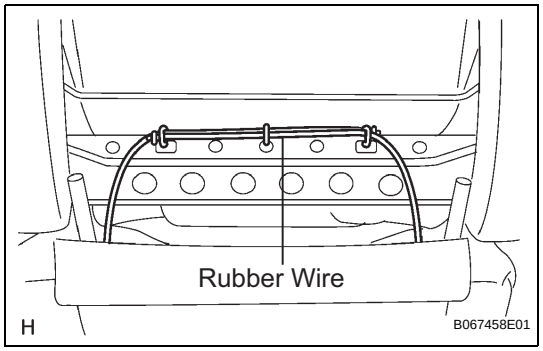

**13. INSTALL REAR SEATBACK COVER**

(a) Install the seatback pad.

(b) Using hog ring pliers, install the seatback cover completely with new hog rings.

**NOTICE:**

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as much as possible.**




(c) Attach a rubber wire with new hog rings, as shown in the illustration.

(d) Using hog ring pliers, install new hog rings.

**NOTICE:**

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as much as possible.**

(e) Install the 2 headrest supports.

**14. INSTALL REAR SEATBACK LOCK BEZEL UPPER**

(a) Install the rear seatback lock bezel upper.

(b) Install the clip and screw.

**15. INSTALL REAR SEATBACK BOARD**

(a) Install the seatback board with the 2 screws.

(b) Install the rear seatback board cap.

**16. INSTALL FOLD SEAT STOPPER BAND ASSEMBLY**

(a) Install the fold seat stopper band with the screw.

**17. INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER**

(a) Install the lap type belt with the bolt.

**Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)**

**18. INSTALL RECLINING ADJUSTER COVER RH**

(a) Install the reclining adjuster cover.

(b) Install the 3 screws.

**19. INSTALL RECLINING ADJUSTER INSIDE COVER LH**

(a) Install the reclining adjuster inside cover.

(b) Install the 3 screws.

**20. INSTALL RH SEAT REAR SEAT LOCK COVER**

(a) Install the seat lock cover with the screws.

**21. INSTALL LH SEAT REAR SEAT LOCK COVER**

(a) Install the LH seat rear seat lock cove with the 2 screws.

**22. INSTALL REAR SEAT LEG SIDE COVER LH**

(a) Install the rear seat leg side cover with the 2 screws.

**23. INSTALL REAR SEAT LEG COVER RH**

(a) Install the rear seat leg cover RH with the 2 screws.

**24. INSTALL REAR SEAT LEG COVER LH**

(a) Install the rear seat leg cover LH with the 2 screws.