
SEAT HEATER SYSTEM

PARTS LOCATION

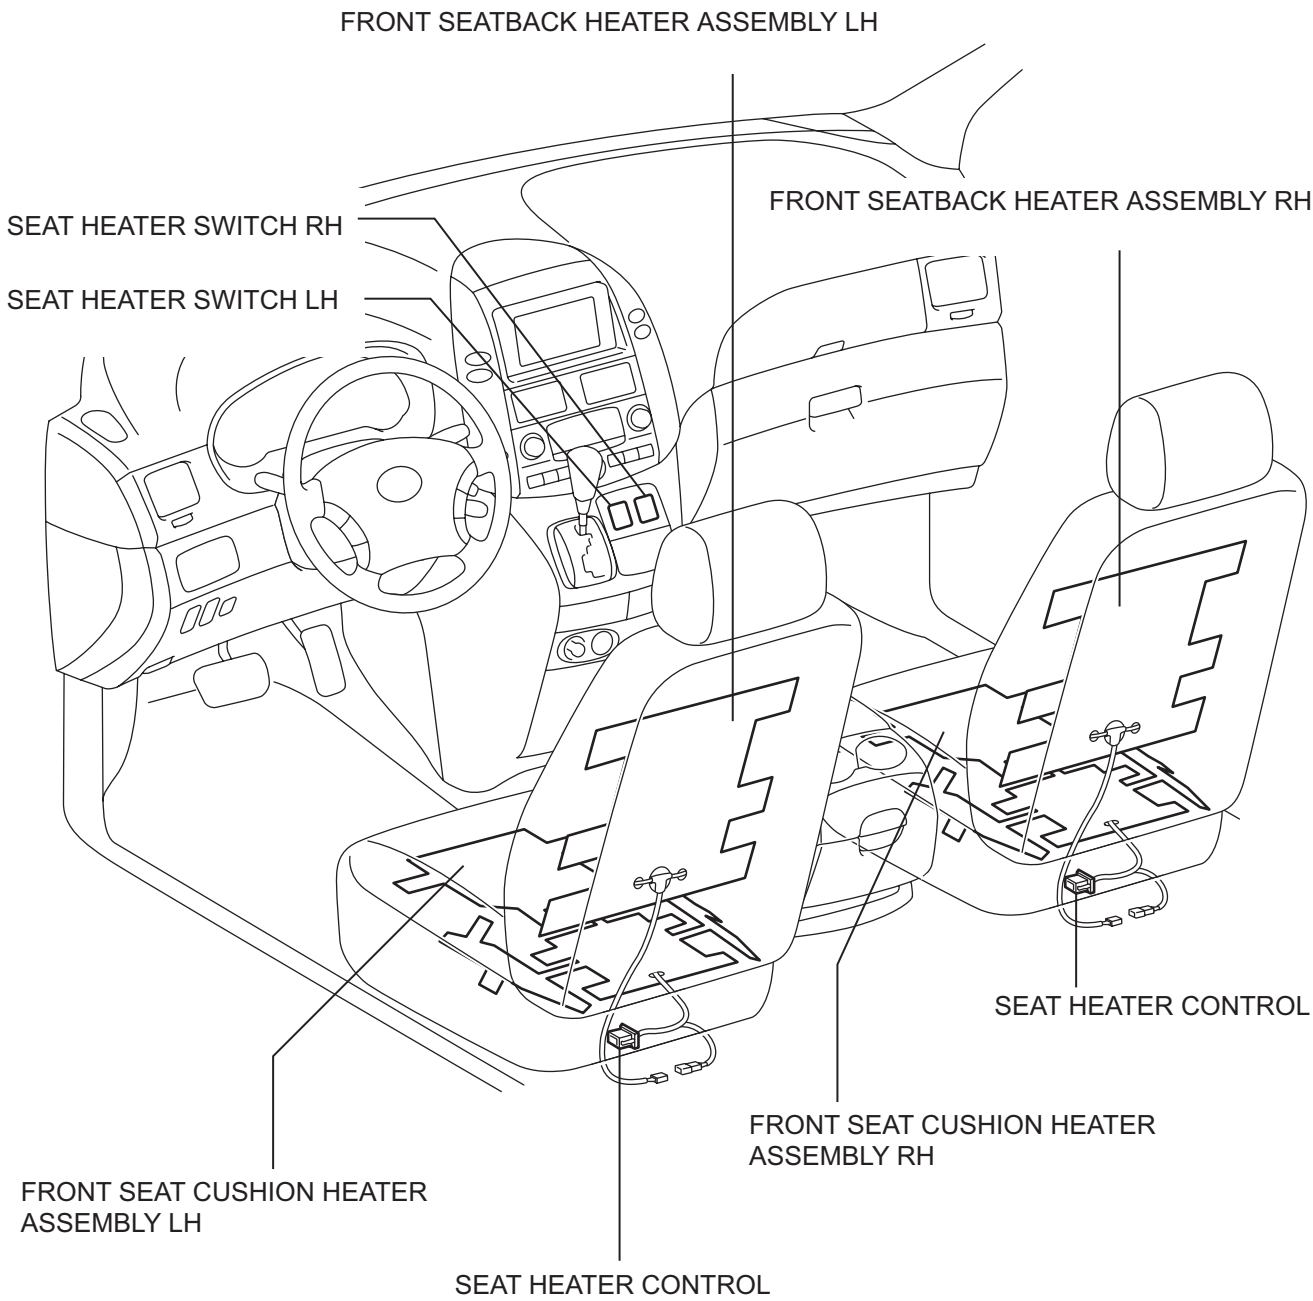


SE

PROBLEM SYMPTOMS TABLE

HINT:
Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

SEAT HEATER SYSTEM

Symptom	Suspected area	See page
Seat heaters do not operate (Seat does not warmed up)	1. S-HTR fuse	-
	2. ECU-IG fuse	-
	3. IG1 relay	-
	4. Front seat cushion heater assembly LH	SE-35
	5. Front seat cushion heater assembly RH	SE-35
	6. Front seatback heater assembly LH	SE-35
	7. Front seatback heater assembly RH	SE-35
	8. Seat heater switch LH	SE-35
	9. Seat heater switch RH	SE-35
	10. Seat heater control	-
	11. Wire harness	-
Temperature of seat heater cannot be adjusted	1. Seat heater switch LH	SE-35
	2. Seat heater switch RH	SE-35
	3. Seat heater control	-
	4. Wire harness	-

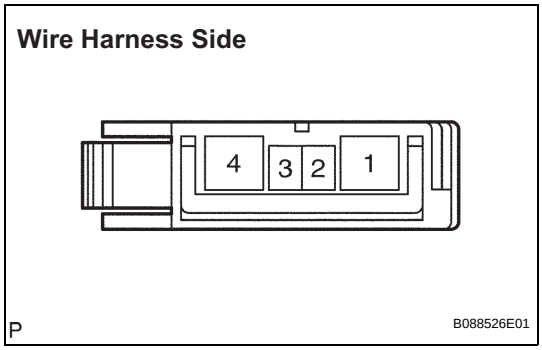

ON-VEHICLE INSPECTION

1. CHECK SEAT HEATER CONTROL (WIRE HARNESS SIDE)

(a) Disconnect the connector from the seat heater control.

(b) Measure the voltage and resistance of each terminal of the wire harness side connector.

Standard

Tester Connection	Condition	Specified Condition
1 - Body ground	Always	Below 1 Ω
1 - 3	Seat heater switch OFF → ON (Ignition switch ON)	0 V → 11 to 14 V
1 - 4	Always	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side or the seat heater switch.

SE