REASSEMBLY


1. INSTALL REAR SEAT STAY SUB-ASSEMBLY

(a) Install the seat stay sub-assembly with the nut.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

2. INSTALL NO. 2 SEAT CUSHION SPRING ASSEMBLY RH

3. INSTALL LOCUS CABLE RH

(a) Install the locus cable RH with the nut.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

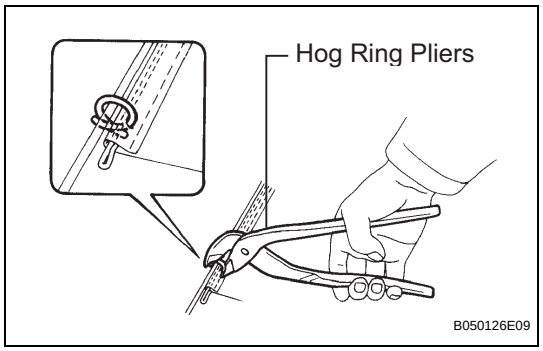

4. INSTALL NO. 2 SEAT CUSHION COVER SUB-ASSEMBLY RH

(a) Using hog ring pliers, install the No. 2 seat cushion cover sub-assembly RH to the seat cushion pad with new hog rings.
NOTICE:
- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as much as possible.**

5. INSTALL REAR SEAT LOCK RELEASE STRAP ASSEMBLY

(a) Install the rear seat lock release strap assembly with the nut.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

6. INSTALL RECLINING ADJUSTER RELEASE HANDLE NO. 2 RH


(a) Install the reclining adjuster release handle No. 2 RH with the nut.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

7. INSTALL RECLINING RELEASE HANDLE SUB-ASSEMBLY RH

(a) Install the reclining release handle sub-assembly RH with the nut.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

8. INSTALL REAR SEAT BACK CONNECTING RH WIRE

(a) Install the rear seat back connecting RH wire.

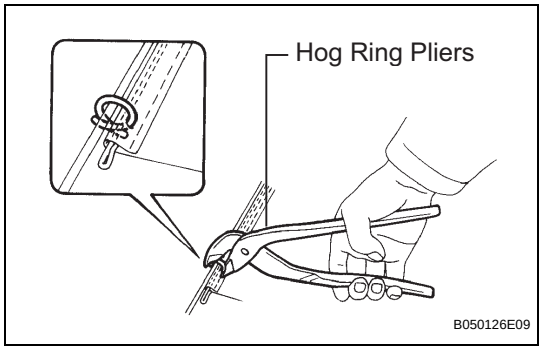

9. INSTALL NO. 2 SEATBACK COVER RH

(a) Using hog ring pliers, install the No. 2 seatback cover RH to the seatback pad with new hog rings.
NOTICE:
- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as much as possible.**

(b) Install the 2 headrest supports.

10. INSTALL NO. 2 SEATBACK LOCK CONTROL BEZEL

(a) Install the No. 2 seatback lock control bezel with the screw.

11. INSTALL NO. 2 REAR SEAT COVER BEZEL


(a) Install the No. 2 rear seat cover bezel with 3 screws.

12. INSTALL REAR NO. 2 SEAT BELT ASSEMBLY INNER RH

(a) Install the No. 2 rear seat belt assembly inner RH with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)


13. INSTALL REAR SEATBACK ASSEMBLY RH

(a) Install the rear seatback assembly RH with the 4 bolts.
Torque: 44 N*m (449 kgf*cm, 32 ft.*lbf)

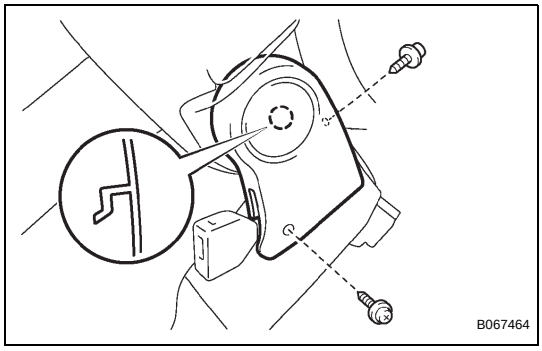

14. INSTALL LH SEAT REAR SEAT RECLINING COVER

(a) Install the LH seat rear seat reclining cover with 2 screws.

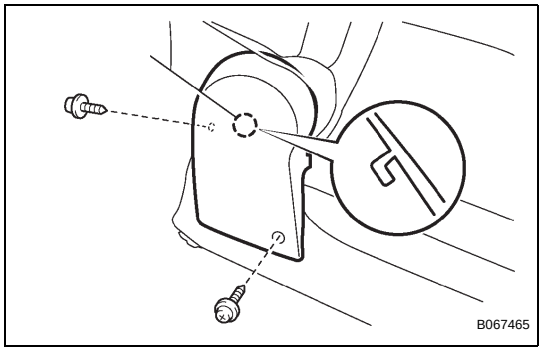

15. INSTALL RH SEAT REAR SEAT RECLINING COVER

(a) Install the RH seat rear seat reclining cover with 2 screws.