FRONT SEAT ASSEMBLY (for Manual Seat)

COMPONENTS

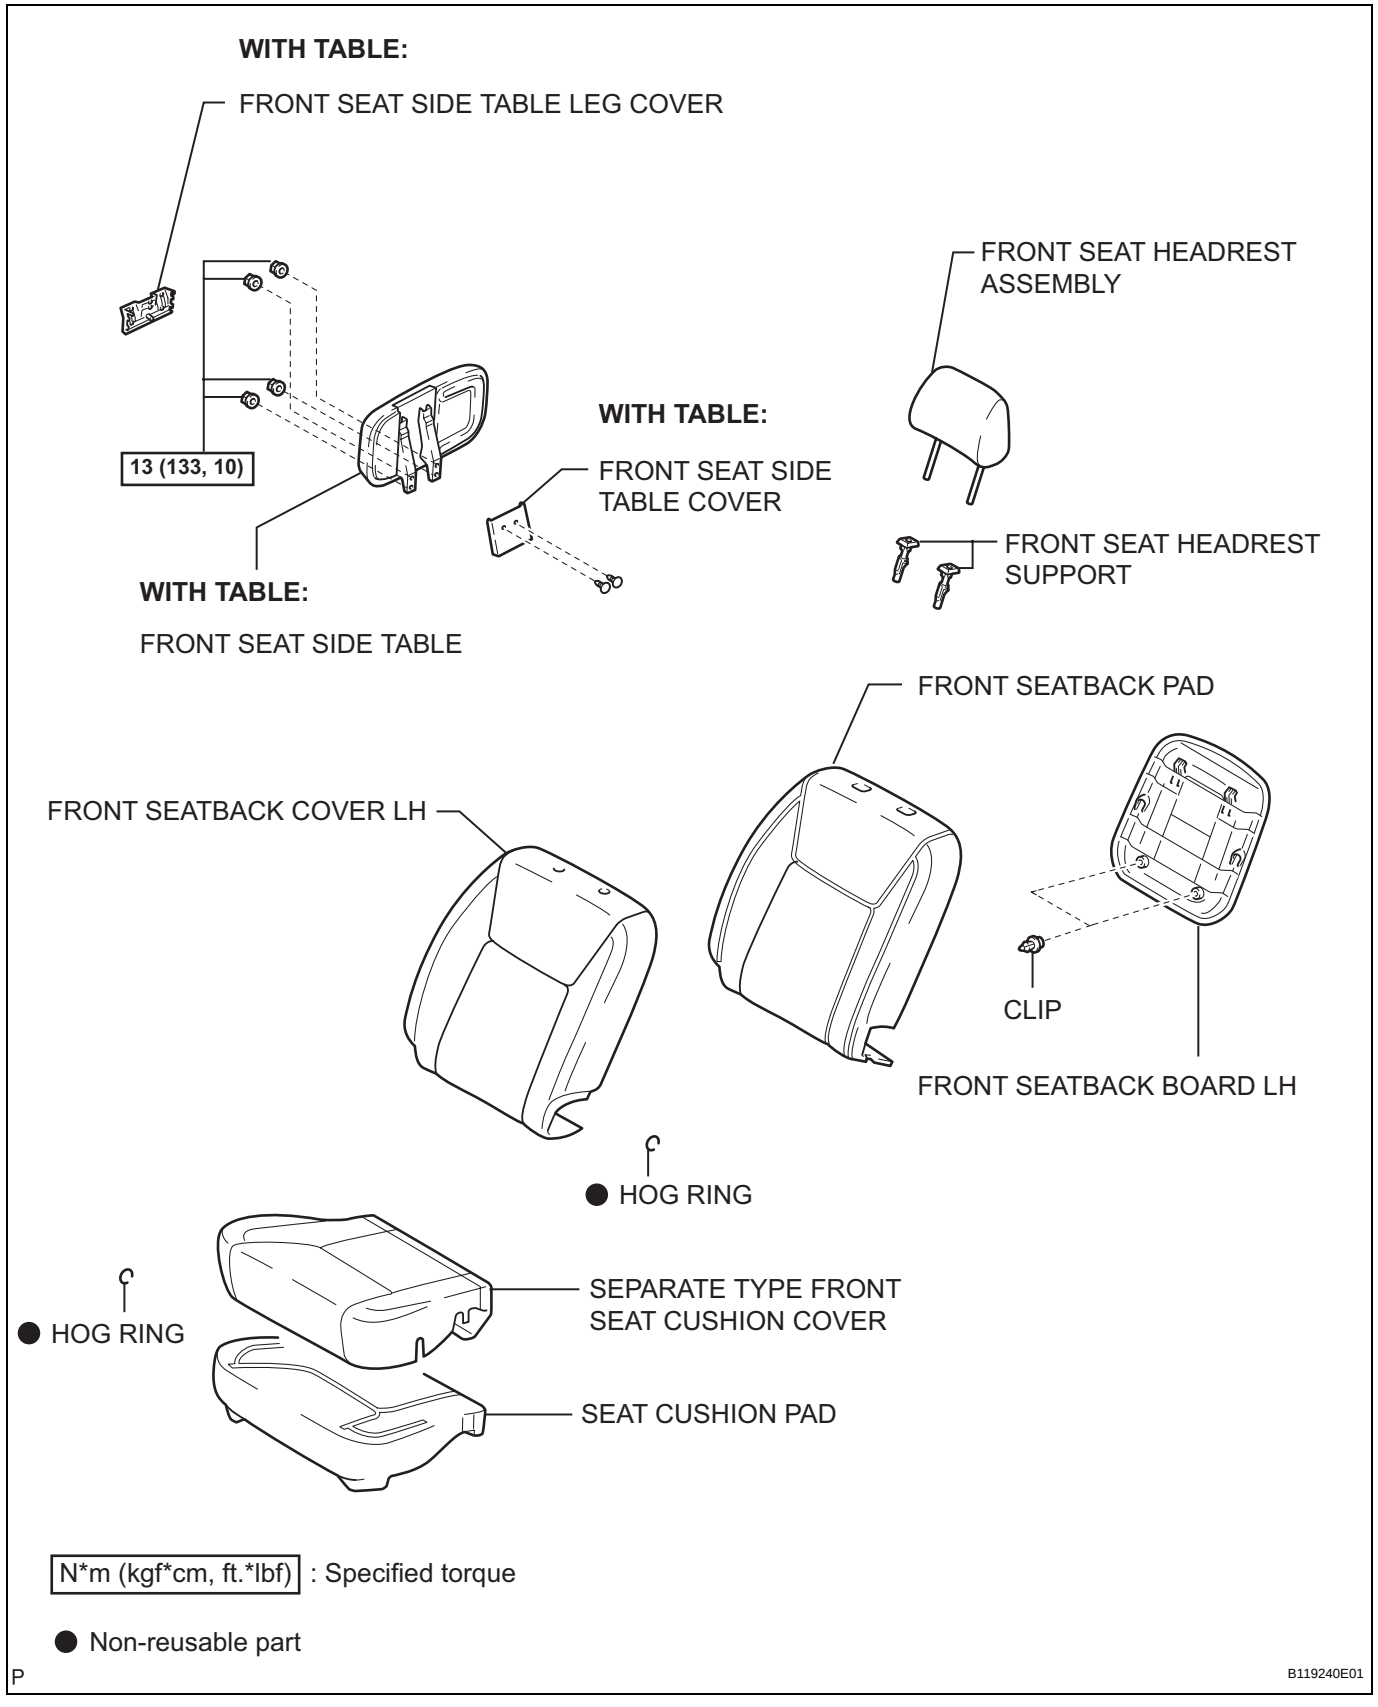

SE

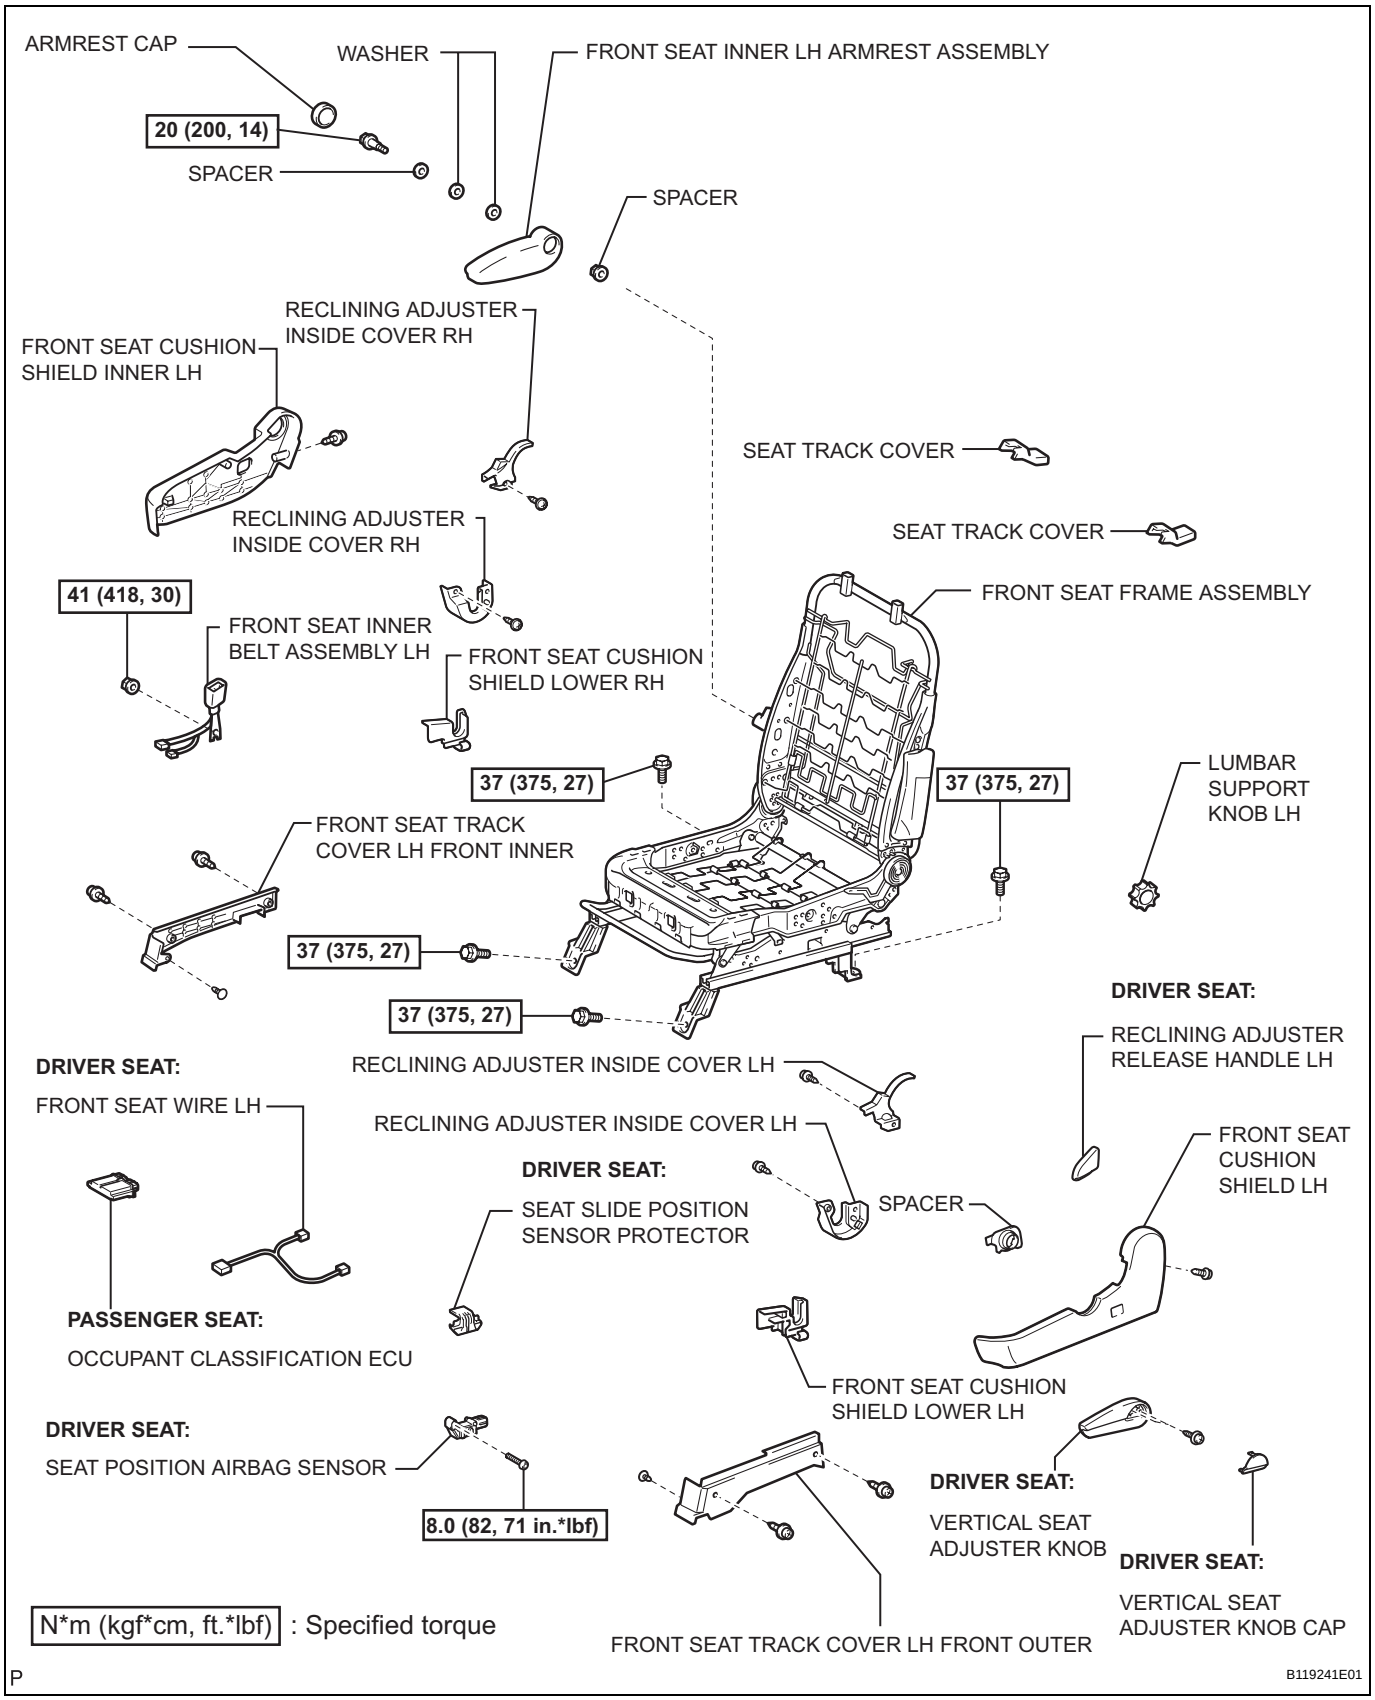
ARMREST CAP
WASHER
FRONT SEAT INNER LH ARMREST ASSEMBLY
20 (200, 14)
SPACER
SPACER
RECLINING ADJUSTER INSIDE COVER RH
FRONT SEAT CUSHION SHIELD INNER LH
SEAT TRACK COVER
RECLINING ADJUSTER INSIDE COVER RH
SEAT TRACK COVER
41 (418, 30)
FRONT SEAT FRAME ASSEMBLY
FRONT SEAT INNER BELT ASSEMBLY LH
FRONT SEAT CUSHION SHIELD LOWER RH
37 (375, 27)
37 (375, 27)
LUMBAR SUPPORT KNOB LH
FRONT SEAT TRACK COVER LH FRONT INNER
37 (375, 27)
37 (375, 27)
DRIVER SEAT:
RECLINING ADJUSTER RELEASE HANDLE LH
DRIVER SEAT:
FRONT SEAT WIRE LH
RECLINING ADJUSTER INSIDE COVER LH
RECLINING ADJUSTER INSIDE COVER LH
DRIVER SEAT:
SEAT SLIDE POSITION SENSOR PROTECTOR
SPACER
FRONT SEAT CUSHION SHIELD LH
PASSENGER SEAT:
OCCUPANT CLASSIFICATION ECU
FRONT SEAT CUSHION SHIELD LOWER LH
DRIVER SEAT:
SEAT POSITION AIRBAG SENSOR
8.0 (82, 71 in.*lbf)
DRIVER SEAT:
VERTICAL SEAT ADJUSTER KNOB
DRIVER SEAT:
VERTICAL SEAT ADJUSTER KNOB CAP
N*m (kgf*cm, ft.*lbf) : Specified torque
FRONT SEAT TRACK COVER LH FRONT OUTER
P
B119241E01

SE