

FRONT SEAT ASSEMBLY (for Power Seat)

COMPONENTS

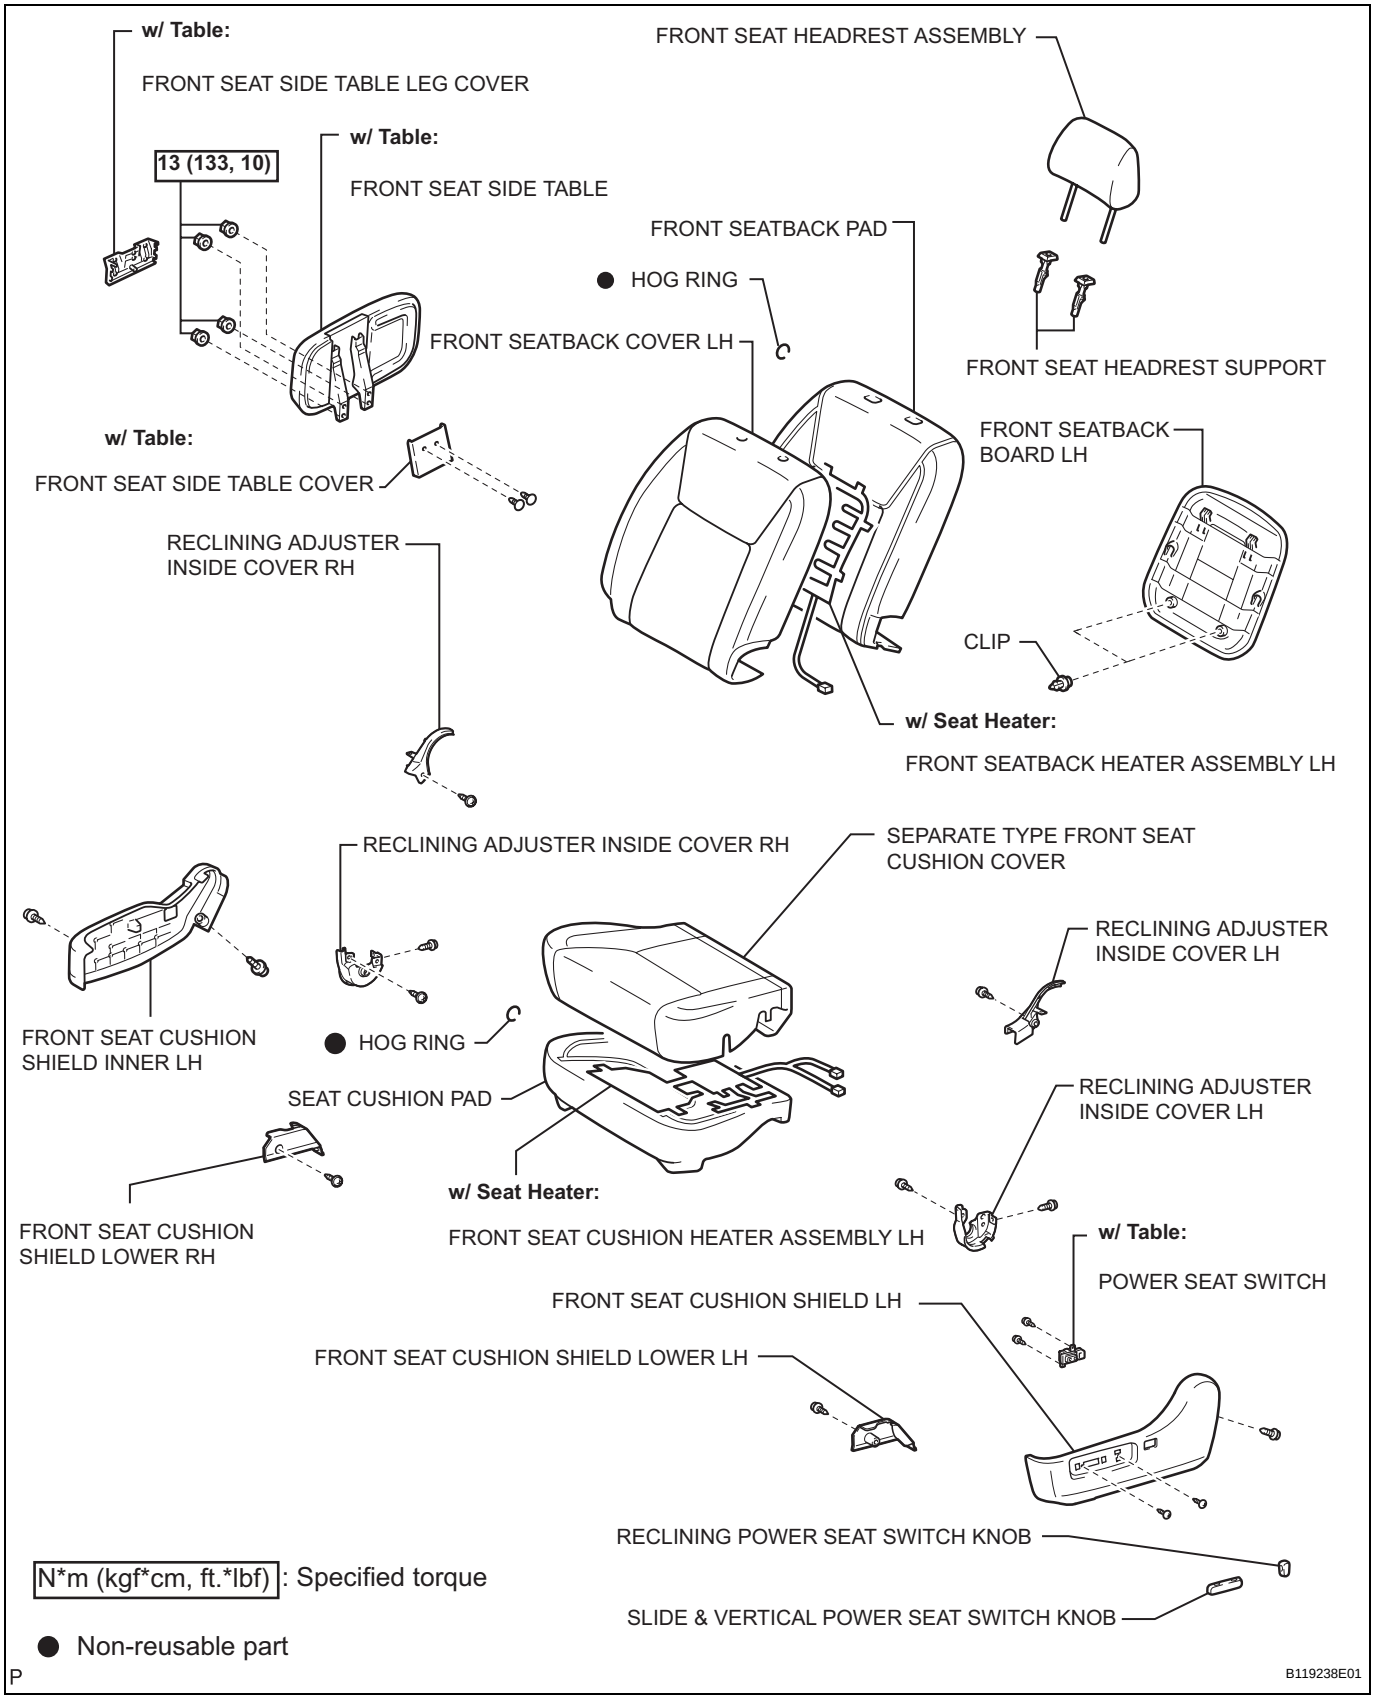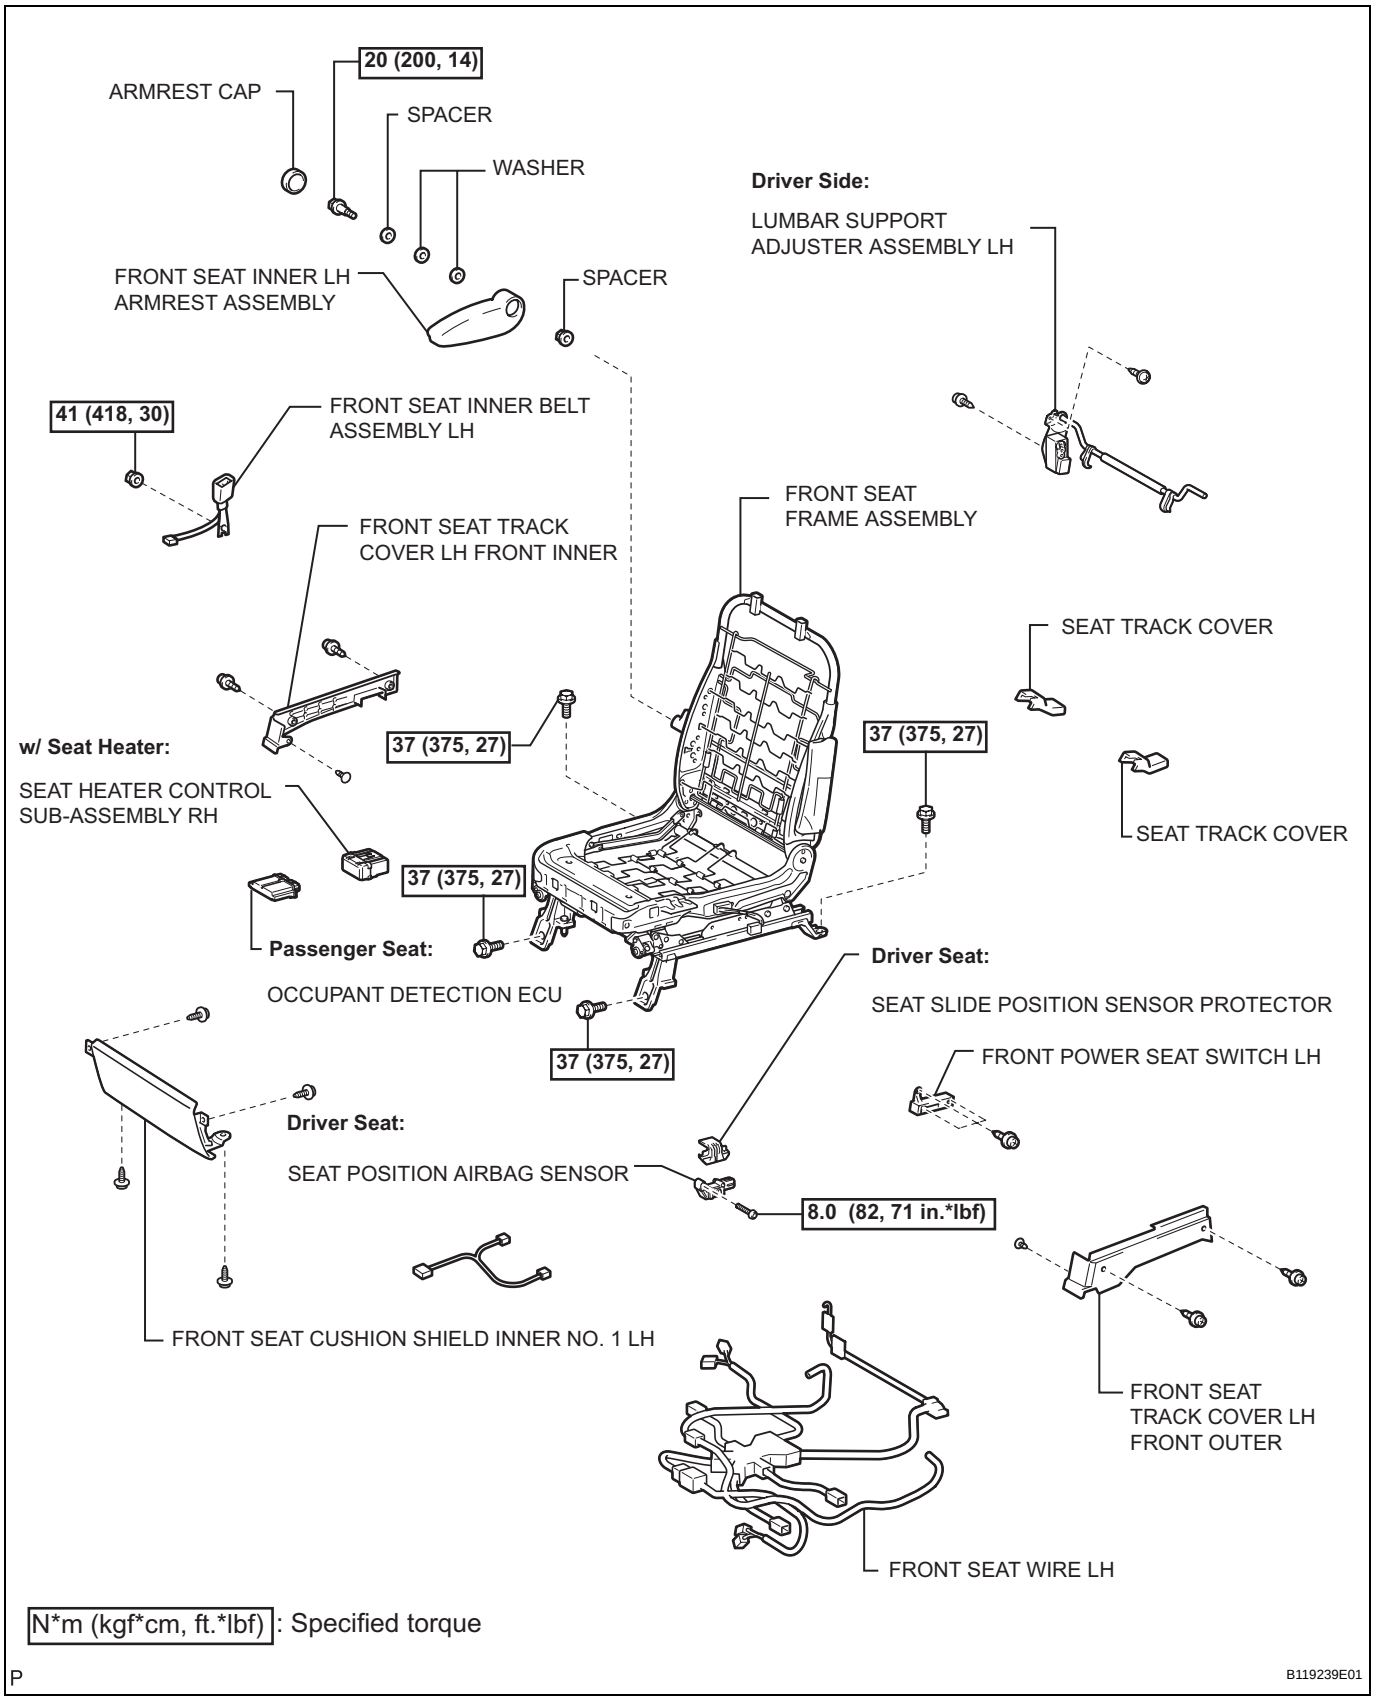

SE


20 (200, 14)
ARMREST CAP
SPACER
WASHER
Driver Side:
LUMBAR SUPPORT ADJUSTER ASSEMBLY LH
FRONT SEAT INNER LH ARMREST ASSEMBLY
SPACER
41 (418, 30)
FRONT SEAT INNER BELT ASSEMBLY LH
FRONT SEAT FRAME ASSEMBLY
FRONT SEAT TRACK COVER LH FRONT INNER
SEAT TRACK COVER
w/ Seat Heater:
37 (375, 27)
37 (375, 27)
SEAT HEATER CONTROL SUB-ASSEMBLY RH
SEAT TRACK COVER
37 (375, 27)
Passenger Seat:
Driver Seat:
OCCUPANT DETECTION ECU
SEAT SLIDE POSITION SENSOR PROTECTOR
37 (375, 27)
FRONT POWER SEAT SWITCH LH
Driver Seat:
SEAT POSITION AIRBAG SENSOR
8.0 (82, 71 in.*lbf)
FRONT SEAT CUSHION SHIELD INNER NO. 1 LH
FRONT SEAT TRACK COVER LH FRONT OUTER
FRONT SEAT WIRE LH
N*m (kgf*cm, ft.*lbf): Specified torque
P
B119239E01

SE