
REAR NO. 1 SEAT ASSEMBLY (for Captain Seat Type)


COMPONENTS

8-Passenger:

7-Passenger LH:

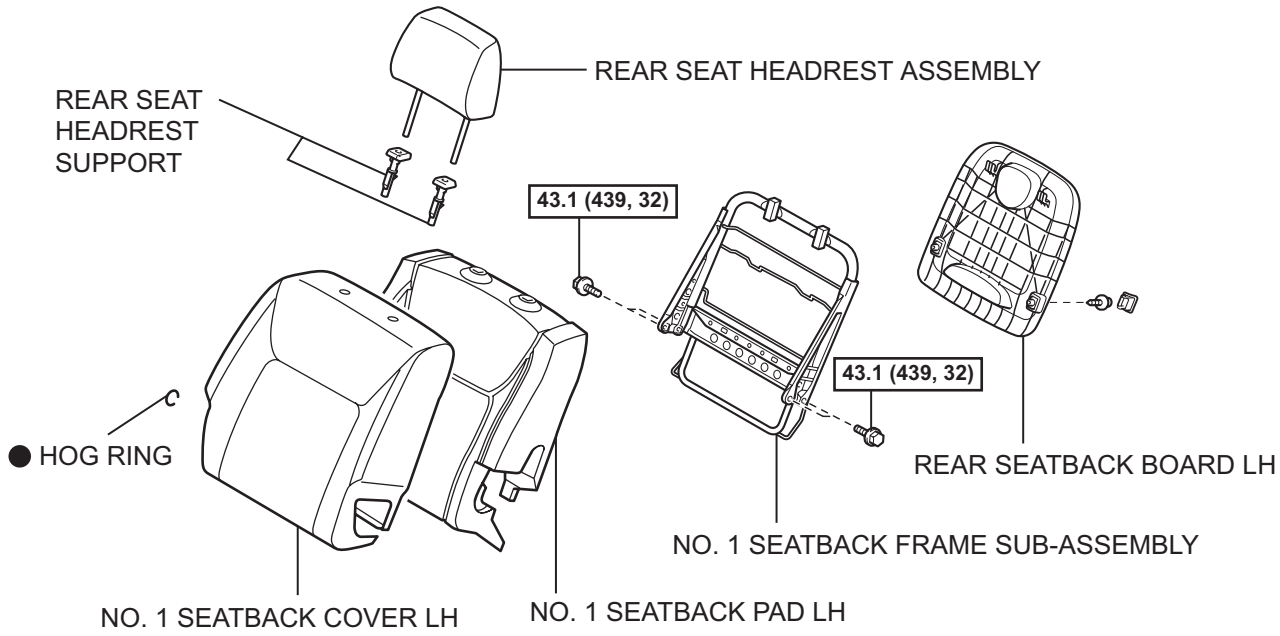


7-Passenger RH:

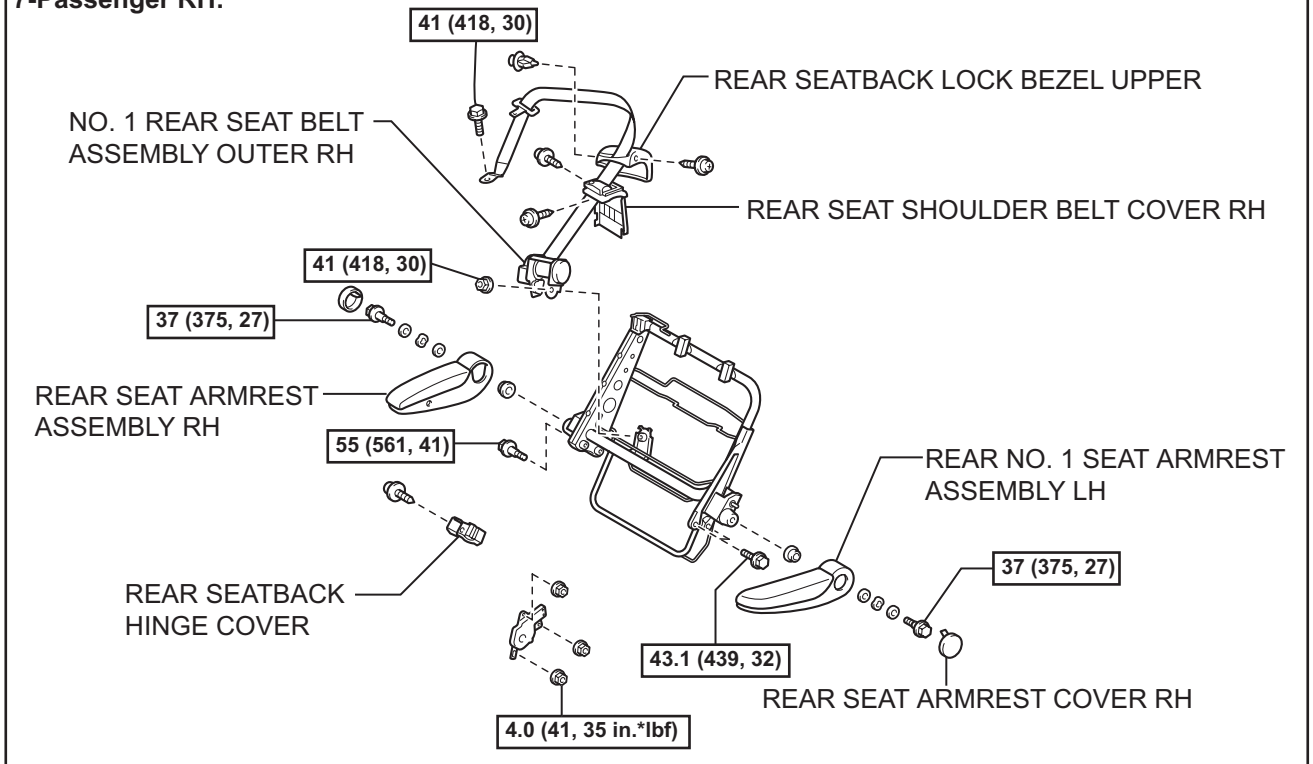

N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part

B119244E02

SE

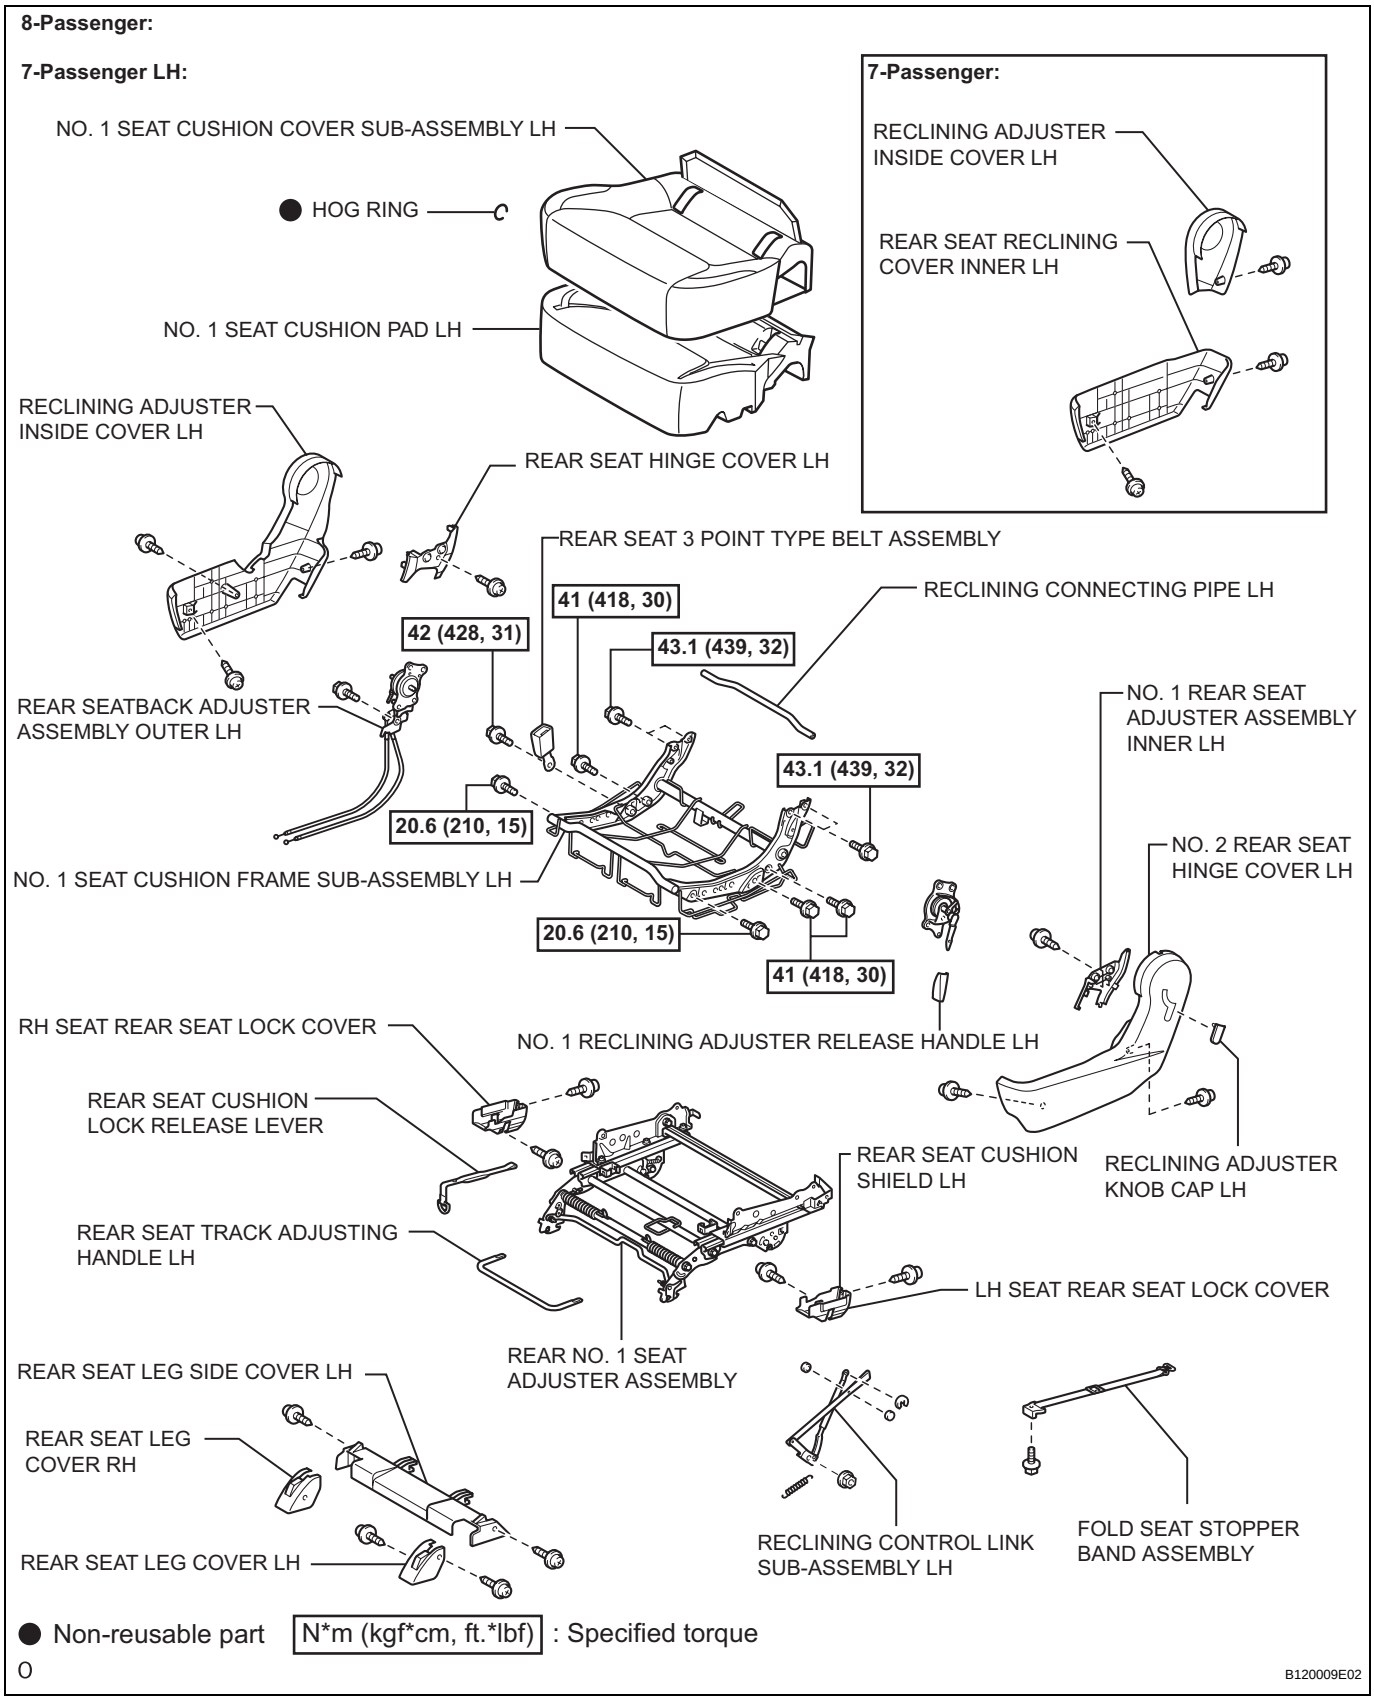
8-Passenger:
7-Passenger LH:
7-Passenger:
NO. 1 SEAT CUSHION COVER SUB-ASSEMBLY LH
HOG RING
NO. 1 SEAT CUSHION PAD LH
RECLINING ADJUSTER INSIDE COVER LH
REAR SEAT HINGE COVER LH
RECLINING ADJUSTER INSIDE COVER LH
REAR SEAT RECLINING COVER INNER LH
REAR SEAT 3 POINT TYPE BELT ASSEMBLY
41 (418, 30)
RECLINING CONNECTING PIPE LH
42 (428, 31)
43.1 (439, 32)
REAR SEATBACK ADJUSTER ASSEMBLY OUTER LH
NO. 1 REAR SEAT ADJUSTER ASSEMBLY INNER LH
43.1 (439, 32)
20.6 (210, 15)
NO. 2 REAR SEAT HINGE COVER LH
NO. 1 SEAT CUSHION FRAME SUB-ASSEMBLY LH
20.6 (210, 15)
41 (418, 30)
RH SEAT REAR SEAT LOCK COVER
NO. 1 RECLINING ADJUSTER RELEASE HANDLE LH
REAR SEAT CUSHION LOCK RELEASE LEVER
REAR SEAT CUSHION SHIELD LH
RECLINING ADJUSTER KNOB CAP LH
REAR SEAT TRACK ADJUSTING HANDLE LH
LH SEAT REAR SEAT LOCK COVER
REAR NO. 1 SEAT ADJUSTER ASSEMBLY
REAR SEAT LEG SIDE COVER LH
REAR SEAT LEG COVER RH
REAR SEAT LEG COVER LH
RECLINING CONTROL LINK SUB-ASSEMBLY LH
FOLD SEAT STOPPER BAND ASSEMBLY
● Non-reusable part
N*m (kgf*cm, ft.*lbf) : Specified torque
O
B120009E02

SE