

REAR NO. 1 SEAT ASSEMBLY (for Center Seat)

COMPONENTS

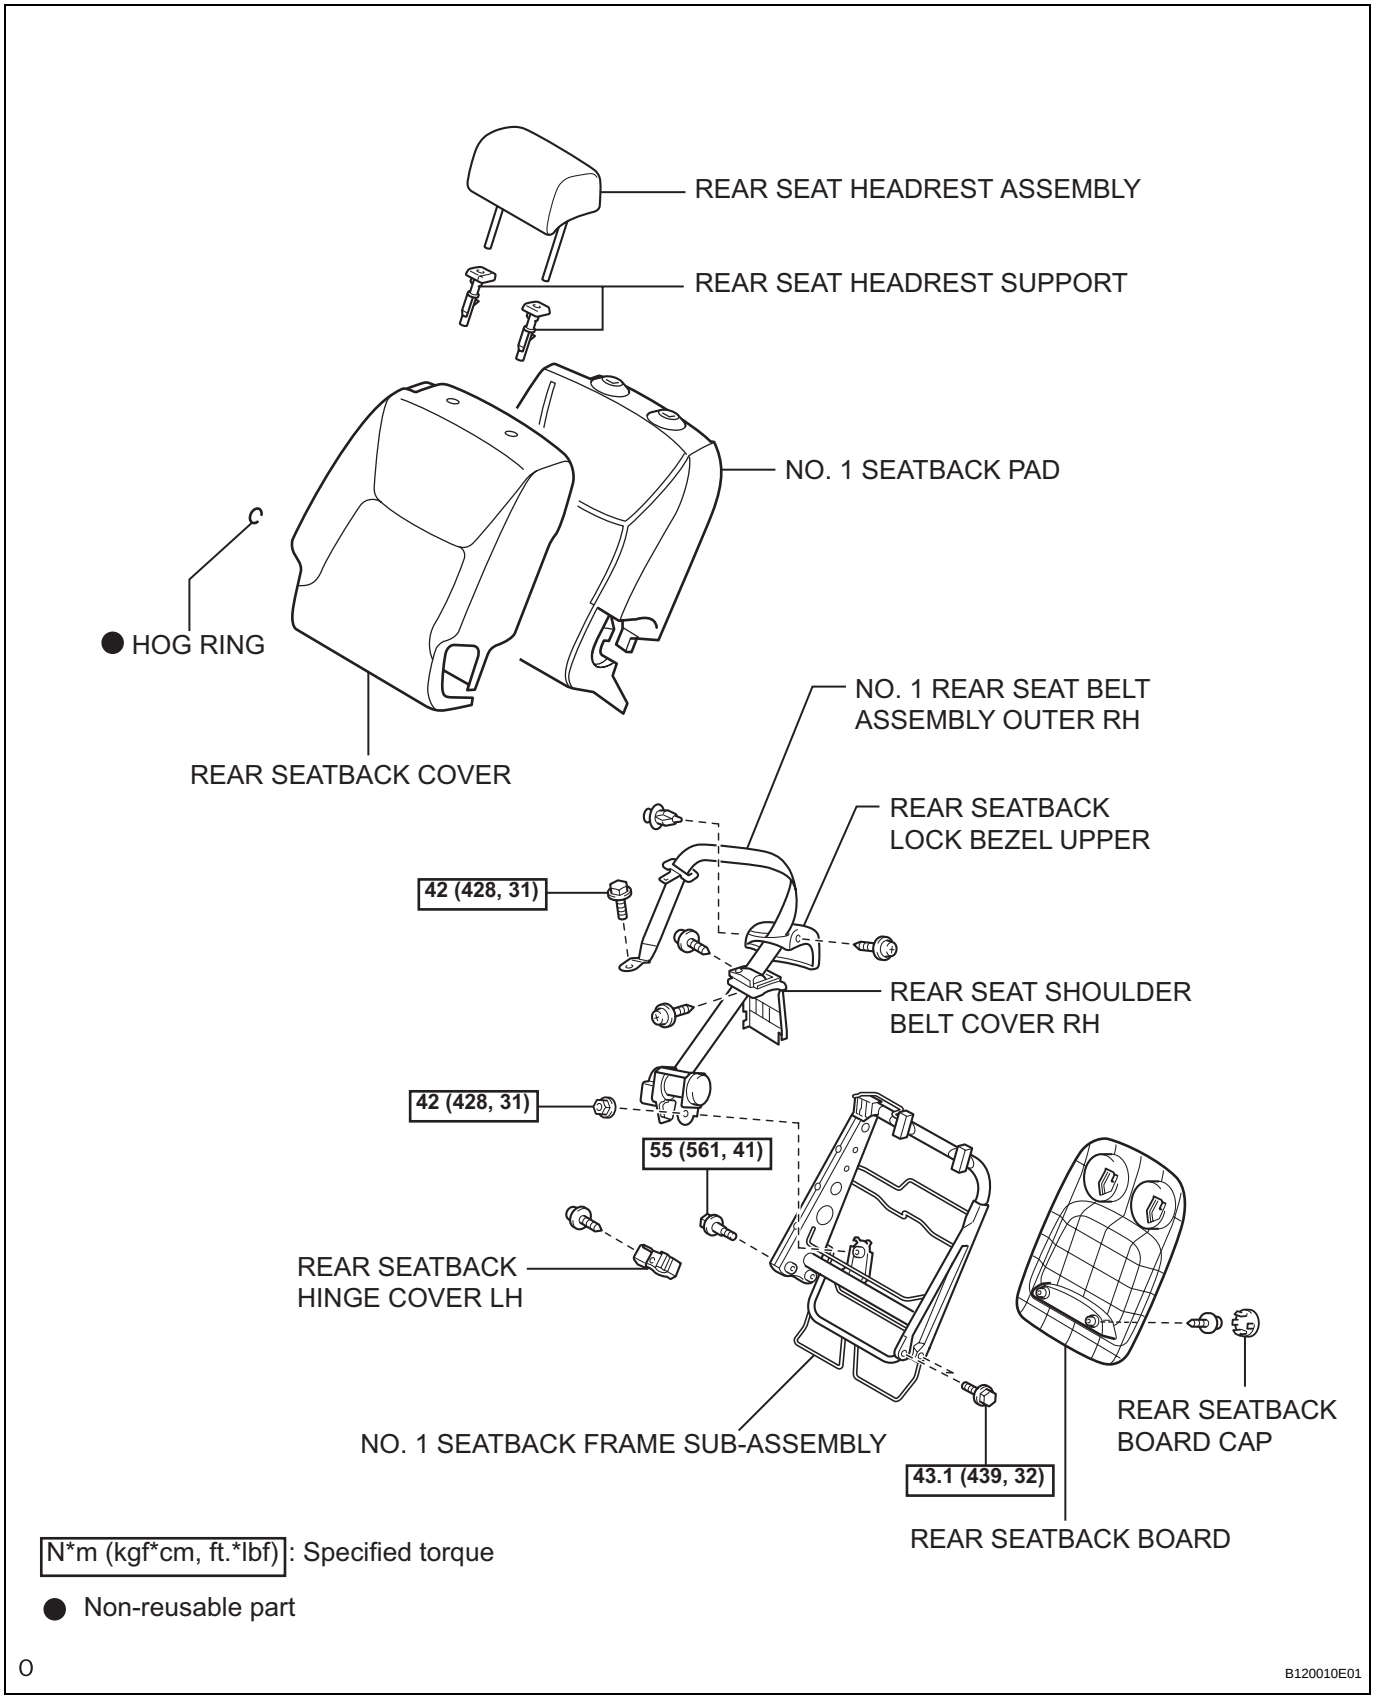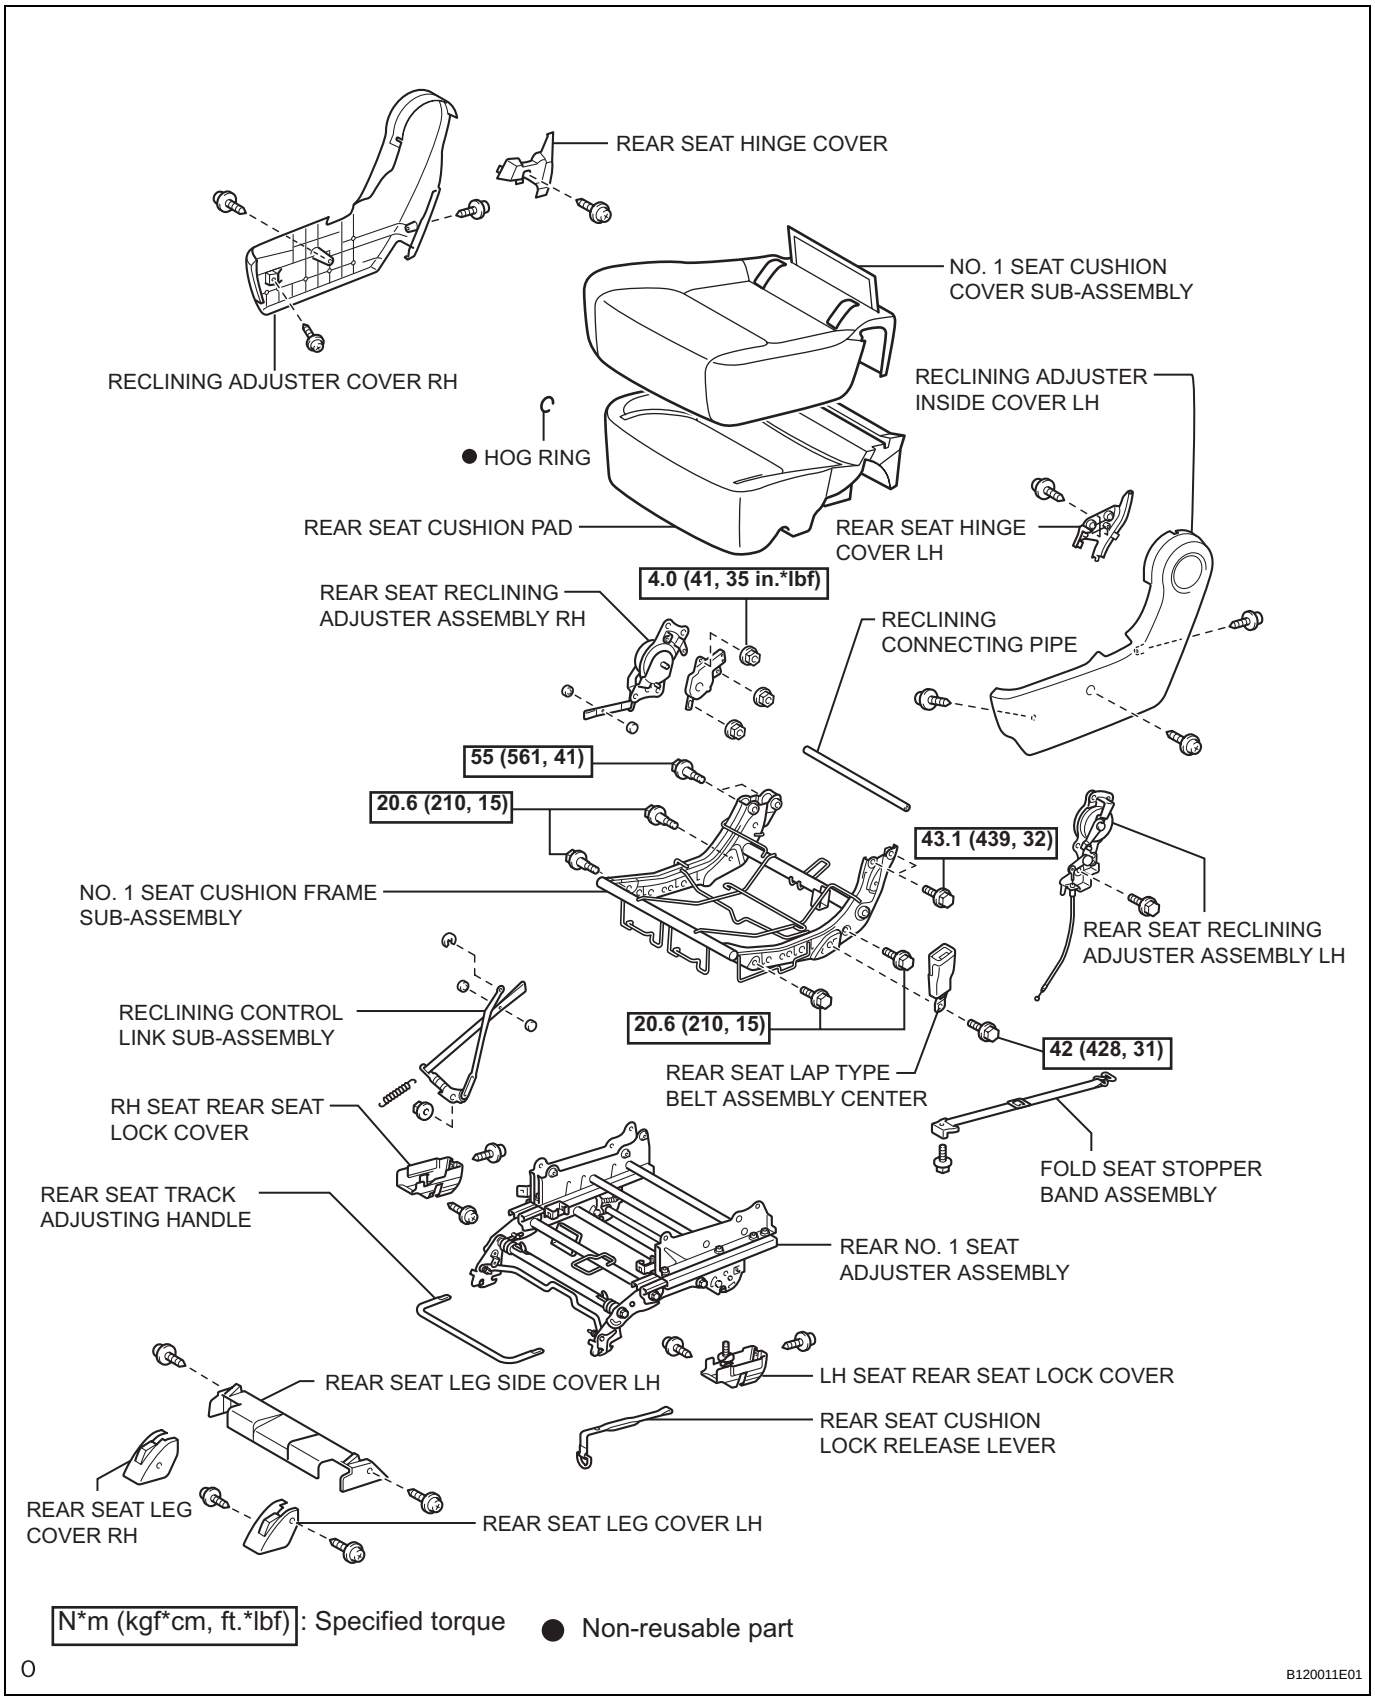

SE


REAR SEAT HINGE COVER
NO. 1 SEAT CUSHION COVER SUB-ASSEMBLY
RECLINING ADJUSTER COVER RH
RECLINING ADJUSTER INSIDE COVER LH
● HOG RING
REAR SEAT CUSHION PAD
REAR SEAT HINGE COVER LH
4.0 (41, 35 in.*lbf)
REAR SEAT RECLINING ADJUSTER ASSEMBLY RH
RECLINING CONNECTING PIPE
55 (561, 41)
20.6 (210, 15)
43.1 (439, 32)
NO. 1 SEAT CUSHION FRAME SUB-ASSEMBLY
REAR SEAT RECLINING ADJUSTER ASSEMBLY LH
RECLINING CONTROL LINK SUB-ASSEMBLY
20.6 (210, 15)
42 (428, 31)
REAR SEAT LAP TYPE BELT ASSEMBLY CENTER
RH SEAT REAR SEAT LOCK COVER
FOLD SEAT STOPPER BAND ASSEMBLY
REAR SEAT TRACK ADJUSTING HANDLE
REAR NO. 1 SEAT ADJUSTER ASSEMBLY
REAR SEAT LEG SIDE COVER LH
LH SEAT REAR SEAT LOCK COVER
REAR SEAT CUSHION LOCK RELEASE LEVER
REAR SEAT LEG COVER RH
REAR SEAT LEG COVER LH
N*m (kgf*cm, ft.*lbf): Specified torque
● Non-reusable part
B120011E01

SE