

REAR NO. 2 SEAT ASSEMBLY (for Manual Seat Type RH Side)

COMPONENTS

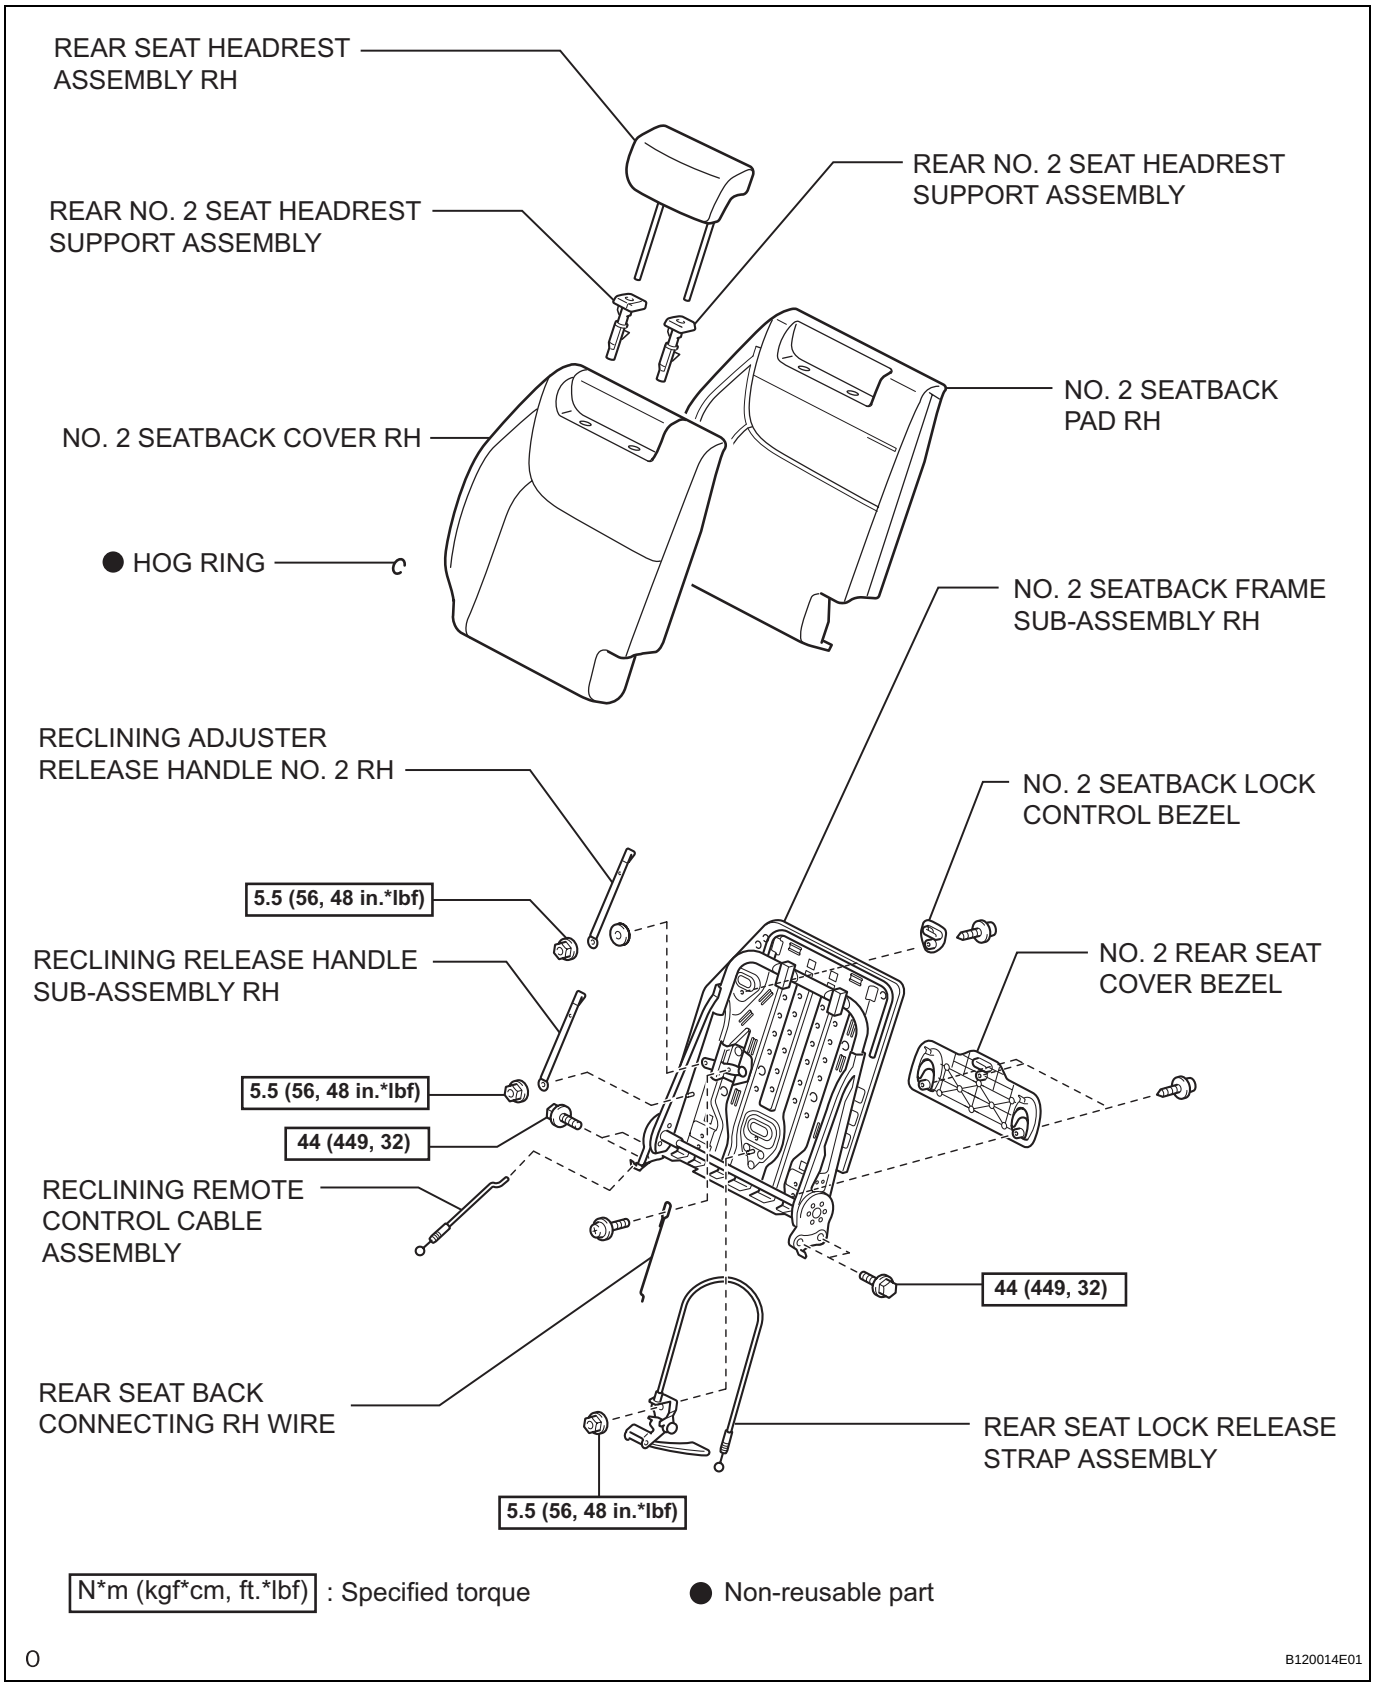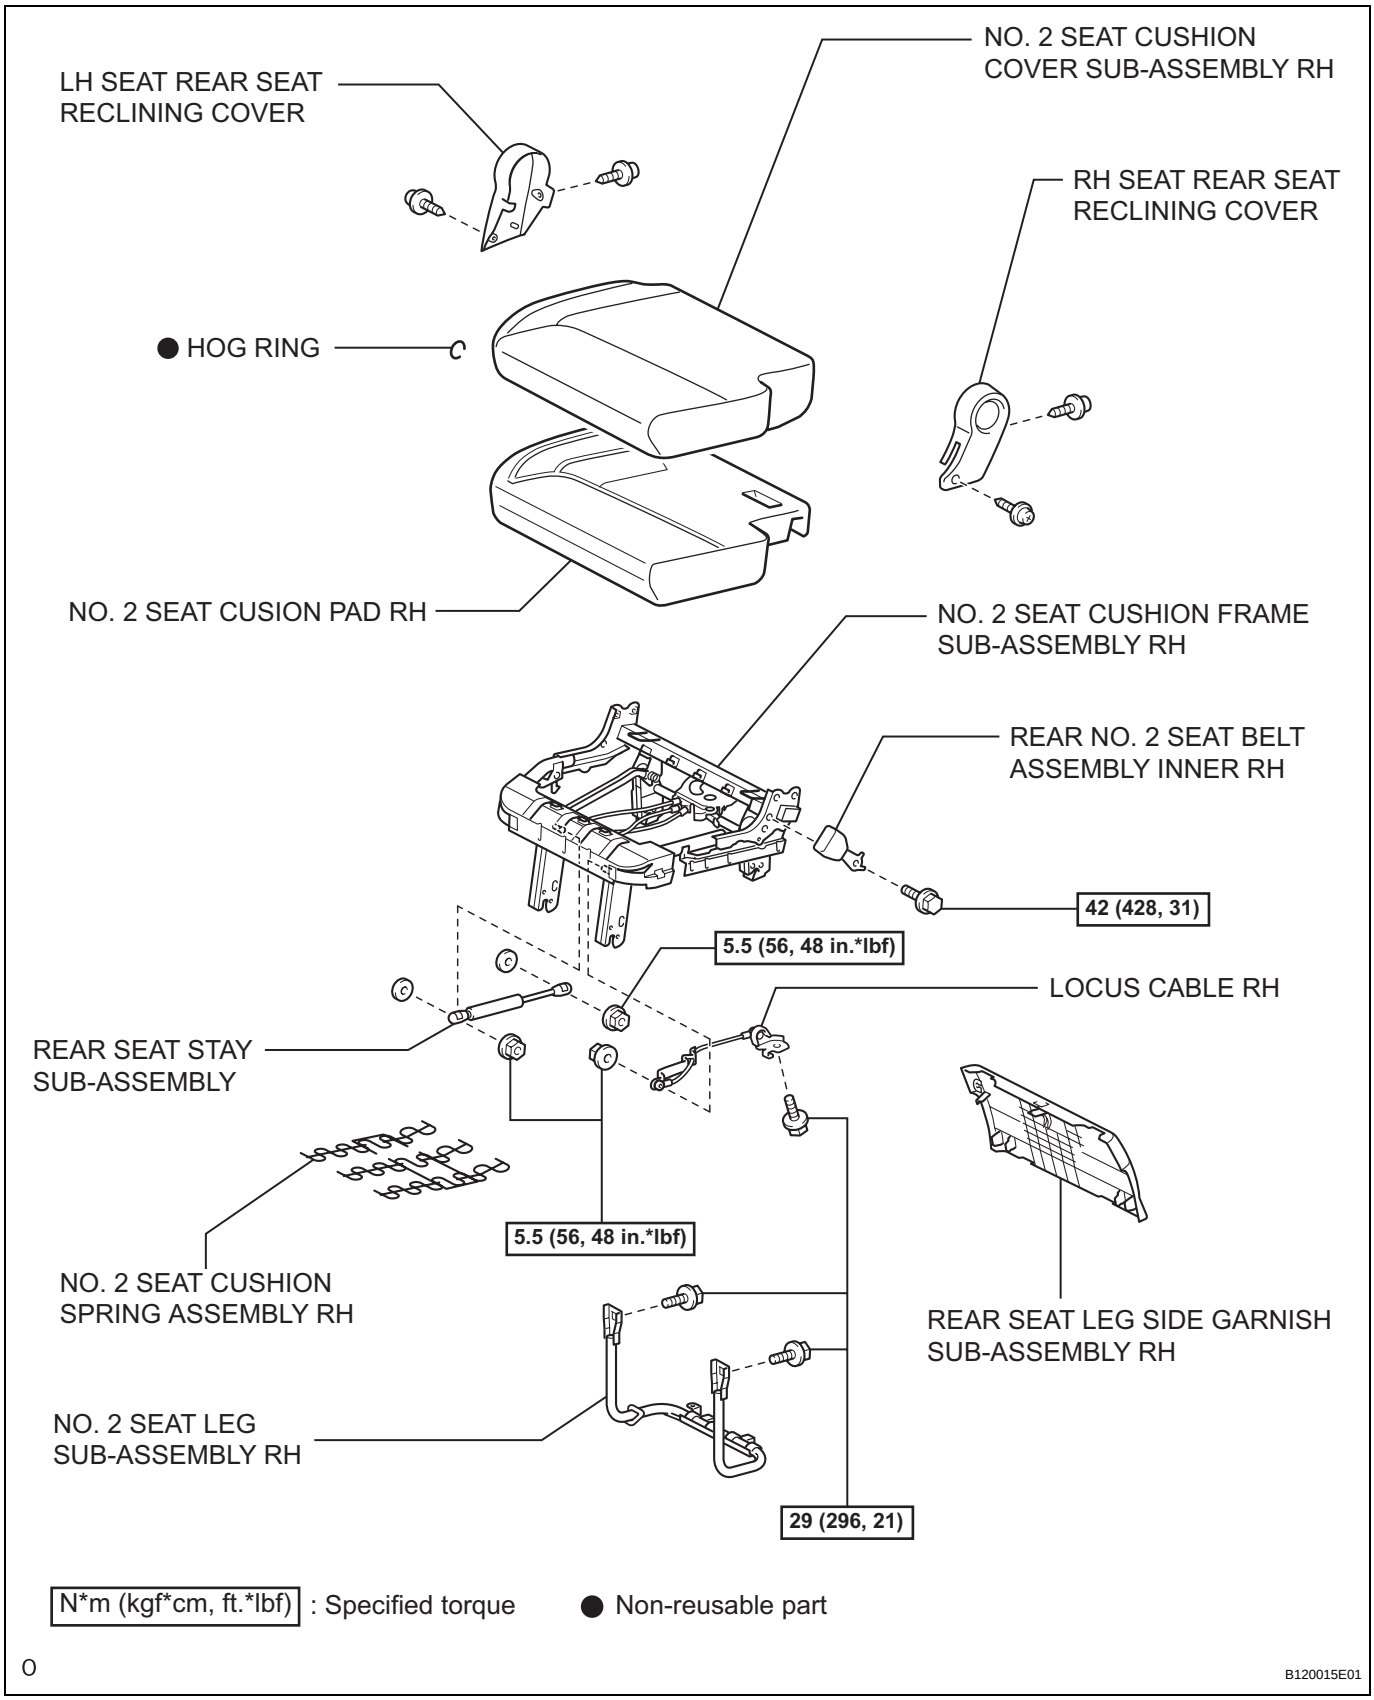

SE


LH SEAT REAR SEAT RECLINING COVER
NO. 2 SEAT CUSHION COVER SUB-ASSEMBLY RH
RH SEAT REAR SEAT RECLINING COVER
● HOG RING
NO. 2 SEAT CUSION PAD RH
NO. 2 SEAT CUSHION FRAME SUB-ASSEMBLY RH
REAR NO. 2 SEAT BELT ASSEMBLY INNER RH
42 (428, 31)
5.5 (56, 48 in.*lbf)
LOCUS CABLE RH
REAR SEAT STAY SUB-ASSEMBLY
5.5 (56, 48 in.*lbf)
NO. 2 SEAT CUSHION SPRING ASSEMBLY RH
REAR SEAT LEG SIDE GARNISH SUB-ASSEMBLY RH
NO. 2 SEAT LEG SUB-ASSEMBLY RH
29 (296, 21)
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
B120015E01

SE