INSTALLATION

1. INSTALL REAR NO. 2 SEAT ASSEMBLY

(a) Lock the seat leg rear to the floor striker.

(b) Lock the seat leg front to the floor striker.

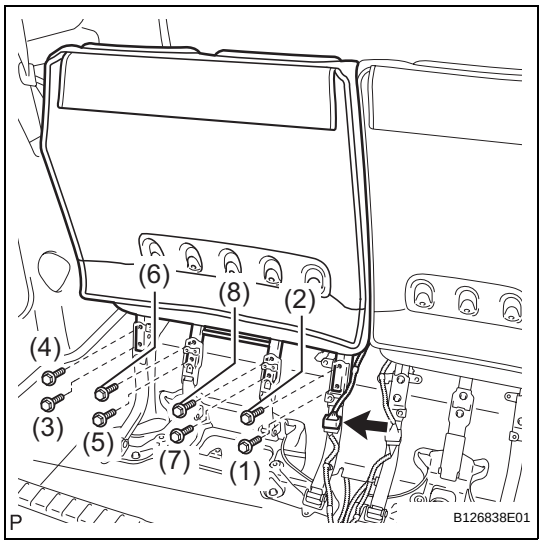

(c) Install the rear No. 2 seat assembly with the 8 bolts.
Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)
NOTICE:
Tighten the bolts in the order shown in the illustration.

(d) Connect the connector.

2. INSTALL NO. 2 SEAT HINGE COVER

3. INSTALL REAR SEAT LEG SIDE GARNISH SUB-ASSEMBLY

(a) Install 4 new clips to the rear seat leg side garnish sub-assembly.

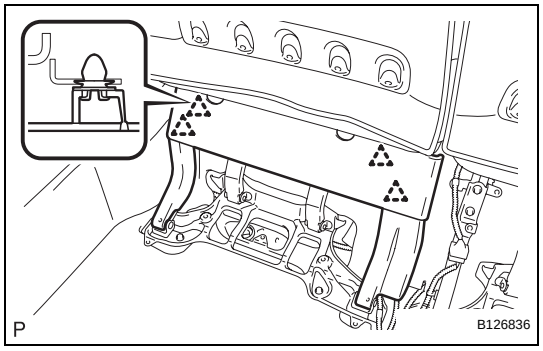

(b) Engage the 4 clips and install the rear seat leg side garnish sub-assembly.

4. INSTALL REAR NO. 2 SEAT LEG SIDE GARNISH SUB-ASSEMBLY

(a) Install 9 new clips to the rear No. 2 seat leg side garnish sub-assembly.

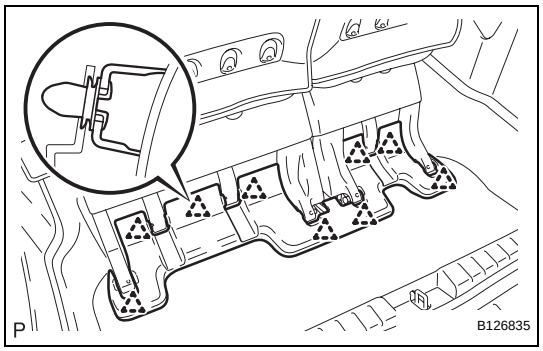

(b) Engage the 4clips and install the rear No. 2 seat leg side garnish sub-assembly.

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

6. CHECK POWER REAR NO. 2 SEAT WITH STOWING FUNCTION (See page SE-149)

7. PERFORM INITIALIZATION

Some systems need initialization after reconnecting the cable to the negative battery terminal.