
# INSTALLATION

**1. INSTALL REAR NO. 2 SEAT ASSEMBLY**

(a) Lock the seat leg rear to the floor striker.

(b) Lock the seat leg front to the floor striker.

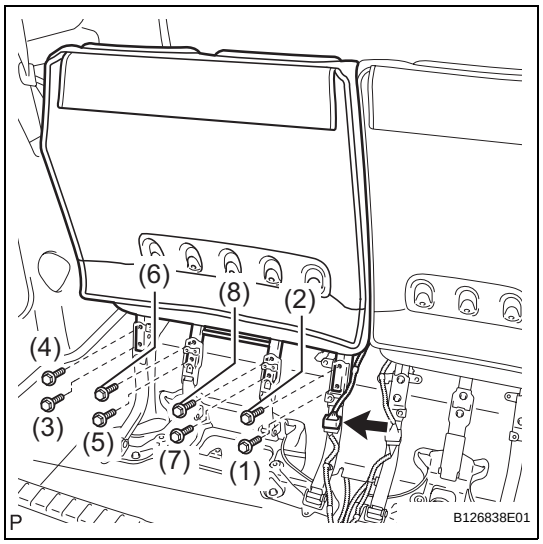



(c) Install the rear No. 2 seat assembly with the 8 bolts.
**Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)**
**NOTICE:**
**Tighten the bolts in the order shown in the illustration.**

(d) Connect the connector.

**2. INSTALL NO. 2 SEAT HINGE COVER**

**3. INSTALL REAR SEAT LEG SIDE GARNISH SUB-ASSEMBLY**


(a) Install 4 new clips to the rear seat leg side garnish sub-assembly.

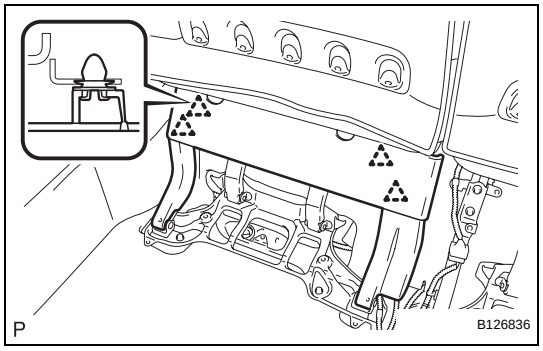


(b) Engage the 4 clips and install the rear seat leg side garnish sub-assembly.

**4. INSTALL REAR NO. 2 SEAT LEG SIDE GARNISH SUB-ASSEMBLY**

(a) Install 9 new clips to the rear No. 2 seat leg side garnish sub-assembly.

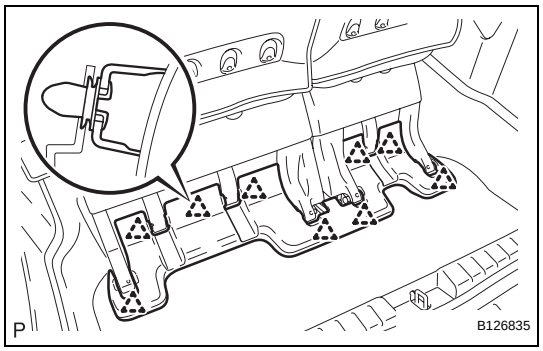


(b) Engage the 4clips and install the rear No. 2 seat leg side garnish sub-assembly.

**5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

**6. CHECK POWER REAR NO. 2 SEAT WITH STOWING FUNCTION (See page SE-149)**

**7. PERFORM INITIALIZATION**

Some systems need initialization after reconnecting the cable to the negative battery terminal.