
SEAT MEMORY SWITCH


COMPONENTS

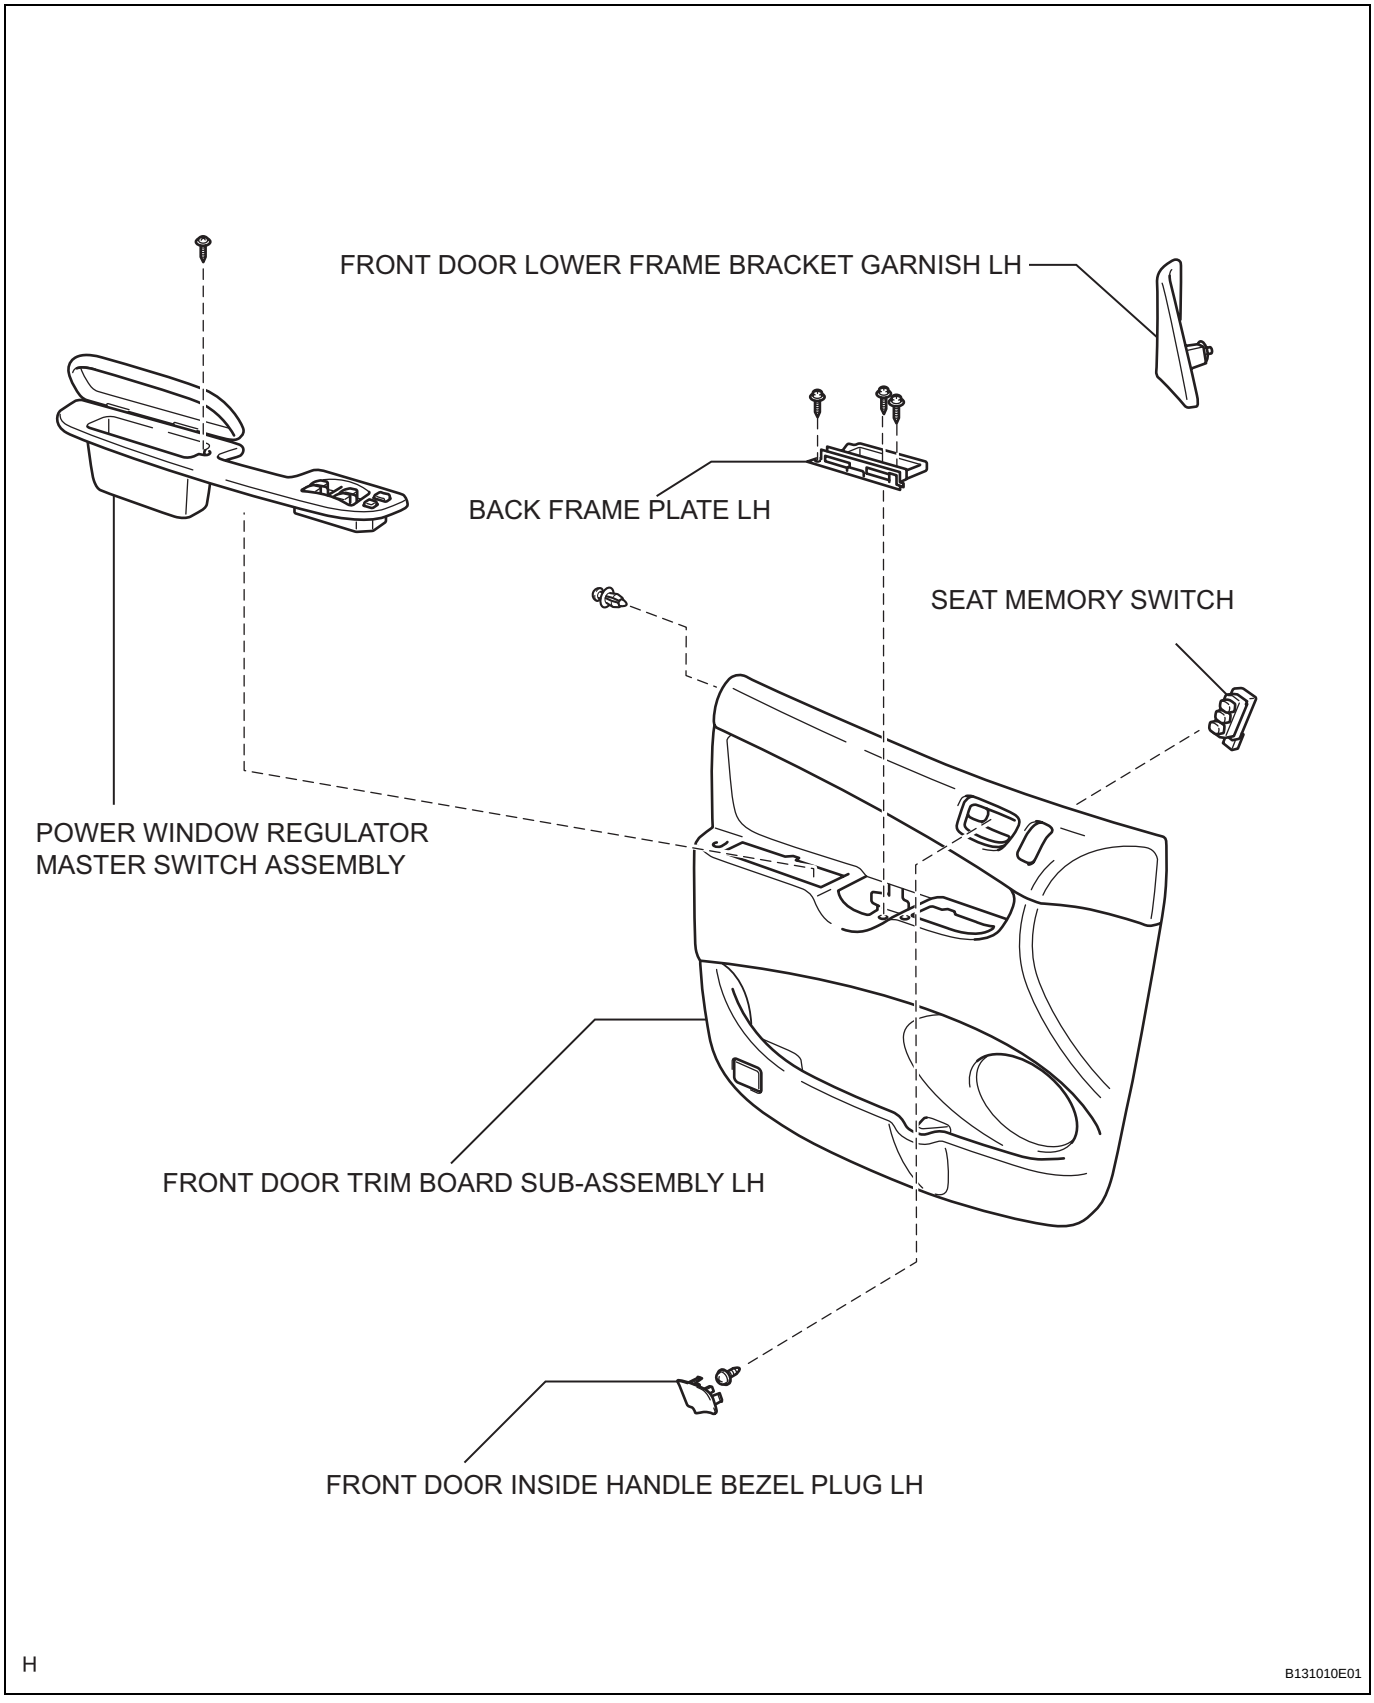


SE

REMOVAL

1. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page ED-172)**
2. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG LH (See page ED-172)**
3. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (See page ED-172)**
4. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page ED-172)**
5. **REMOVE SEAT MEMORY SWITCH**
   (a) Disengage the 4 claws and remove the seat memory switch.

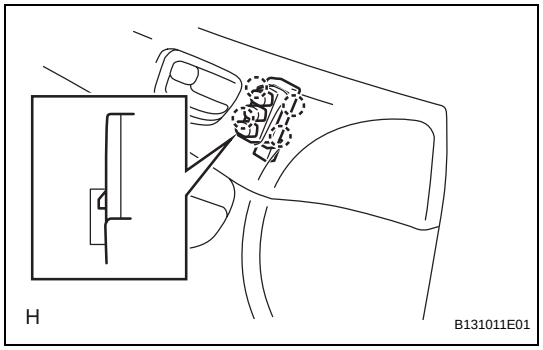

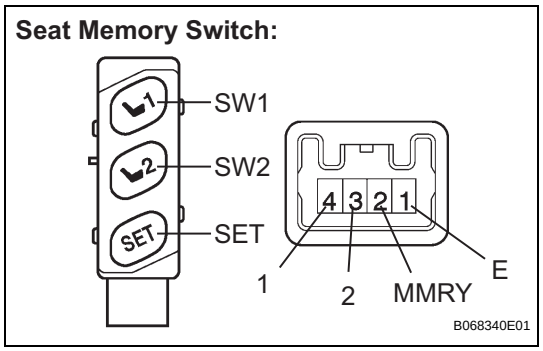

INSPECTION

1. **INSPECT SEAT MEMORY SWITCH**
   (a) Measure the resistance according to the value(s) in the table below.
   Standard resistance

Tester Connection	Switch Position	Specified Condition
1(E) - 2(MMRY)	SET switch ON (pushed)	Below 1 Ω
1(E) - 2(MMRY)	SET switch OFF (not pushed)	10 kΩ or higher
1(E) - 4(1)	SW1 switch ON (pushed)	Below 1 Ω
1(E) - 4(1)	SW1 switch OFF (not pushed)	10 kΩ or higher
1(E) - 3(2)	SW2 switch ON (pushed)	Below 1 Ω
1(E) - 3(2)	SW2 switch OFF (not pushed)	10 kΩ or higher

If the result is not as specified, replace the switch.