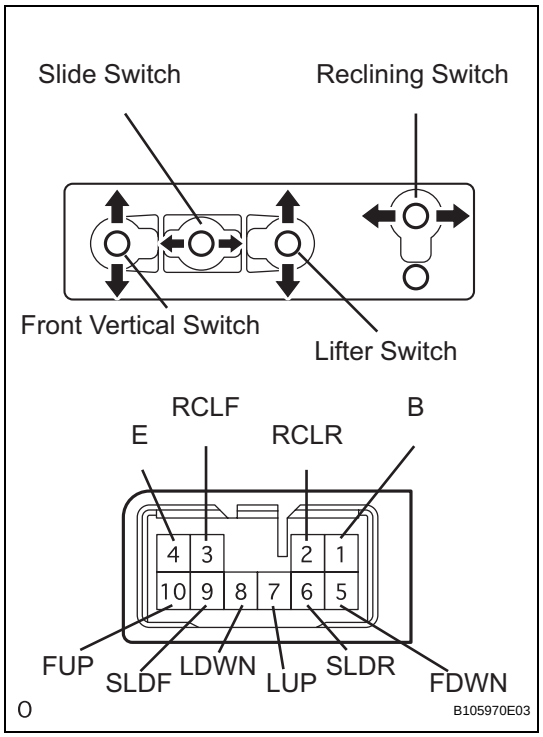


POWER SEAT SWITCH

INSPECTION

1. INSPECT FRONT POWER SEAT SWITCH

(a) Inspect the driver side power seat switch.

(1) Measure the resistance according to the value(s) in the table below.

Standard resistance:

Slide switch

Tester Connection	Switch Condition	Specified Condition
1(B) - 9(SLDF)	FRONT	Below 1 Ω
4(E) - 6(SLDR)	FRONT	Below 1 Ω
4(E) - 6(SLDR)	OFF	Below 1 Ω
4(E) - 9(SLDF)	OFF	Below 1 Ω
1(B) - 6(SLDR)	REAR	Below 1 Ω
4(E) - 9(SLDF)	REAR	Below 1 Ω

Front vertical switch

Tester Connection	Switch Condition	Specified Condition
1(B) - 10(FUP)	UP	Below 1 Ω
4(E) - 5(FDWN)	UP	Below 1 Ω
4(E) - 5(FDWN)	OFF	Below 1 Ω
4(E) - 10(FUP)	OFF	Below 1 Ω
1(B) - 5(FDWN)	DOWN	Below 1 Ω
4(E) - 10(FUP)	DOWN	Below 1 Ω

Lifter switch


Tester Connection	Switch Condition	Specified Condition
1(B) - 7(LUP)	UP	Below 1 Ω
4(E) - 8(LDWN)	UP	Below 1 Ω
4(E) - 7(LUP)	OFF	Below 1 Ω
4(E) - 8(LDWN)	OFF	Below 1 Ω
1(B) - 8(LDWN)	DOWN	Below 1 Ω
4(E) - 7(LUP)	DOWN	Below 1 Ω

Reclining switch

Tester Connection	Switch Condition	Specified Condition
1(B) - 3(RCLF)	FRONT	Below 1 Ω
2(RCLR) - 4(E)	FRONT	Below 1 Ω
2(RCLR) - 4(E)	OFF	Below 1 Ω
3(RCLF) - 4(E)	OFF	Below 1 Ω
1(B) - 2(RCLR)	REAR	Below 1 Ω
3(RCLF) - 4(E)	REAR	Below 1 Ω

If the result is not as specified, replace the switch.

SE

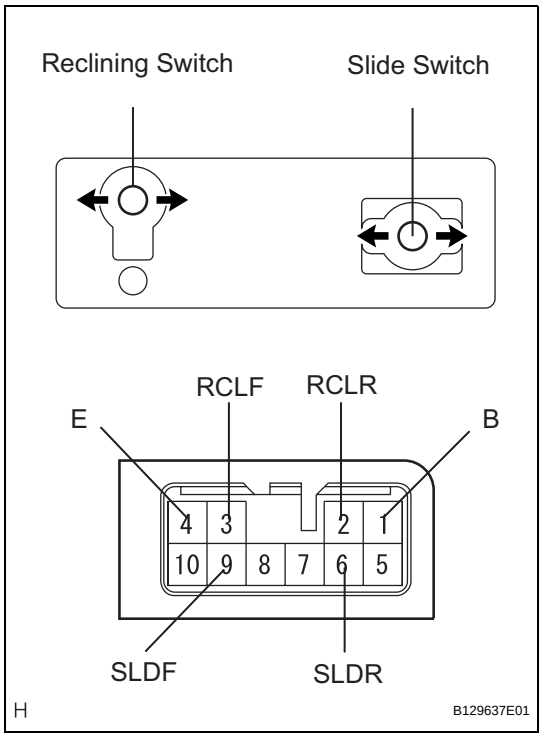

(b) Inspect the front passenger side power seat switch.
(1) Measure the resistance according to the value(s) in the table below.

Standard resistance:

Slide switch

Tester Connection	Switch Condition	Specified Condition
1(B) - 9(SLDF)	FRONT	Below 1 Ω
4(E) - 6(SLDR)	FRONT	Below 1 Ω
4(E) - 6(SLDR)	OFF	Below 1 Ω
4(E) - 9(SLDF)	OFF	Below 1 Ω
1(B) - 6(SLDR)	REAR	Below 1 Ω
4(E) - 9(SLDF)	REAR	Below 1 Ω

Reclining switch

Tester Connection	Switch Condition	Specified Condition
1(B) - 3(RCLF)	FRONT	Below 1 Ω
2(RCLR) - 4(E)	FRONT	Below 1 Ω
2(RCLR) - 4(E)	OFF	Below 1 Ω
3(RCLF) - 4(E)	OFF	Below 1 Ω
1(B) - 2(RCLR)	REAR	Below 1 Ω
3(RCLF) - 4(E)	REAR	Below 1 Ω

If the result is not as specified, replace the switch.