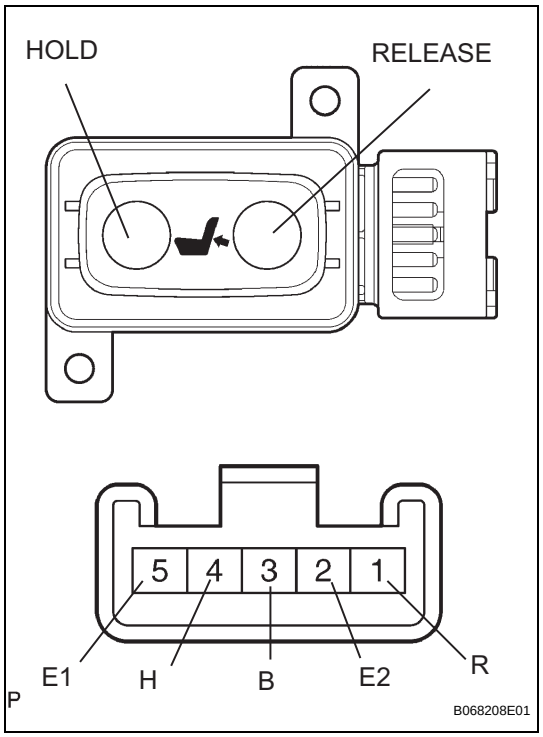

FRONT POWER SEAT LUMBAR SWITCH

INSPECTION

1. INSPECT FRONT POWER SEAT LUMBAR SWITCH

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Switch Position	Specified Condition
1(R) - 2(E2)	HOLD	Below 1 Ω
3(B) - 4(H)	HOLD	Below 1 Ω
1(R) - 2(E2)	OFF	Below 1 Ω
4(H) - 5(E1)	OFF	Below 1 Ω
1(R) - 3(B)	RELEASE	Below 1 Ω
4(H) - 5(E1)	RELEASE	Below 1 Ω

If the result is not as specified, replace the switch.