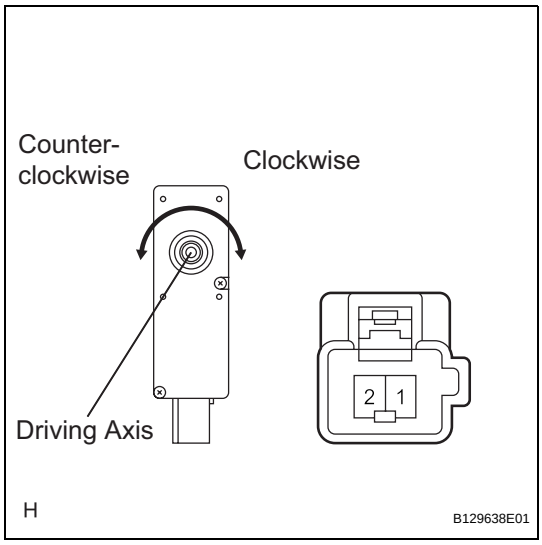

LUMBAR SUPPORT ADJUSTER ASSEMBLY

INSPECTION

1. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY

(a) Check operation of the lumbar support adjuster motor.

(1) Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminal.

OK

Measurement Condition	Operational Direction
Battery positive (+) → 1 Battery negative (-) → 2	**Clockwise**
Battery positive (+) → 2 Battery negative (-) → 1	**Counterclockwise**

If the result is not as specified, replace the lumbar support adjuster assembly.