
POWER SLIDE DOOR SYSTEM


PARTS LOCATION

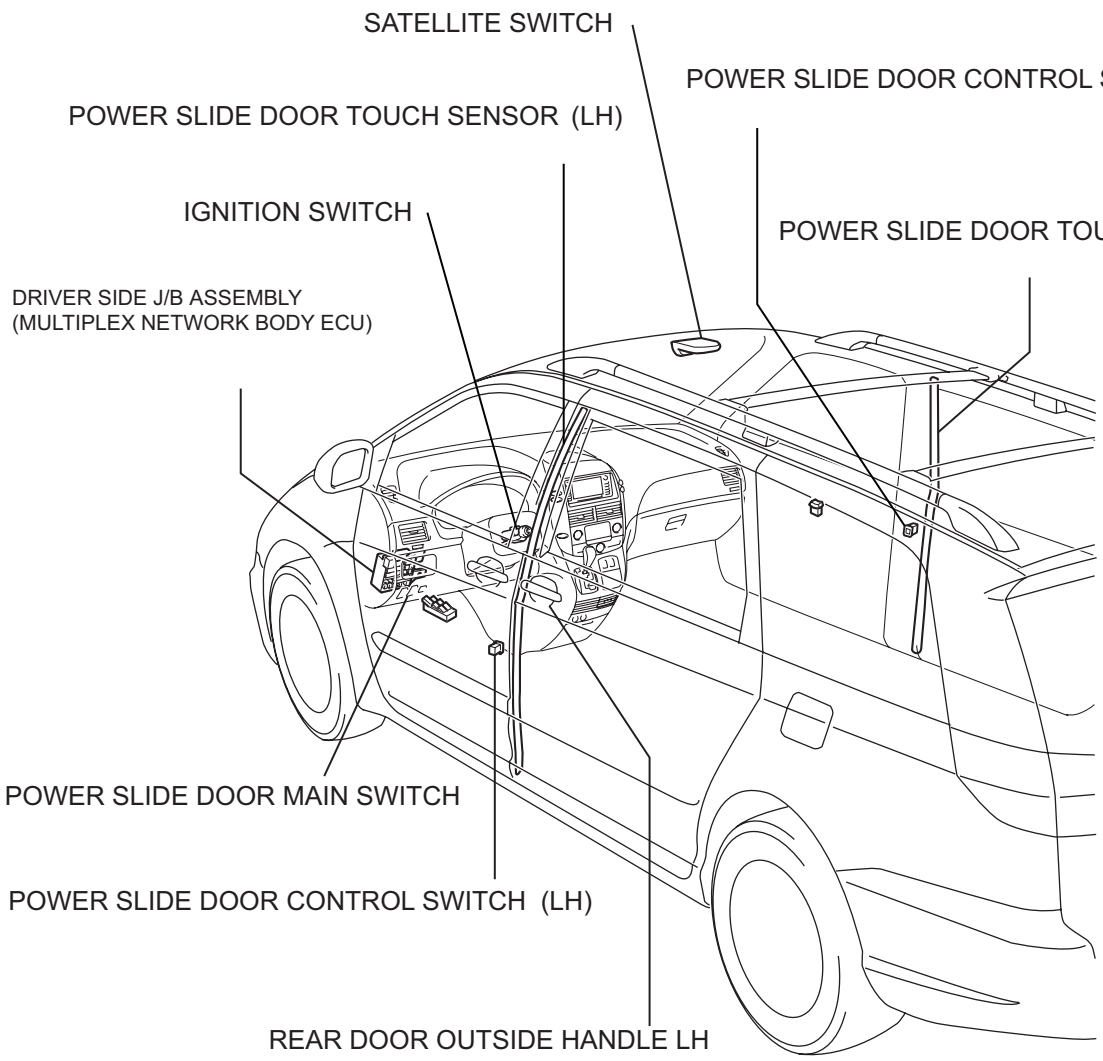


Y

B119229E02

ED

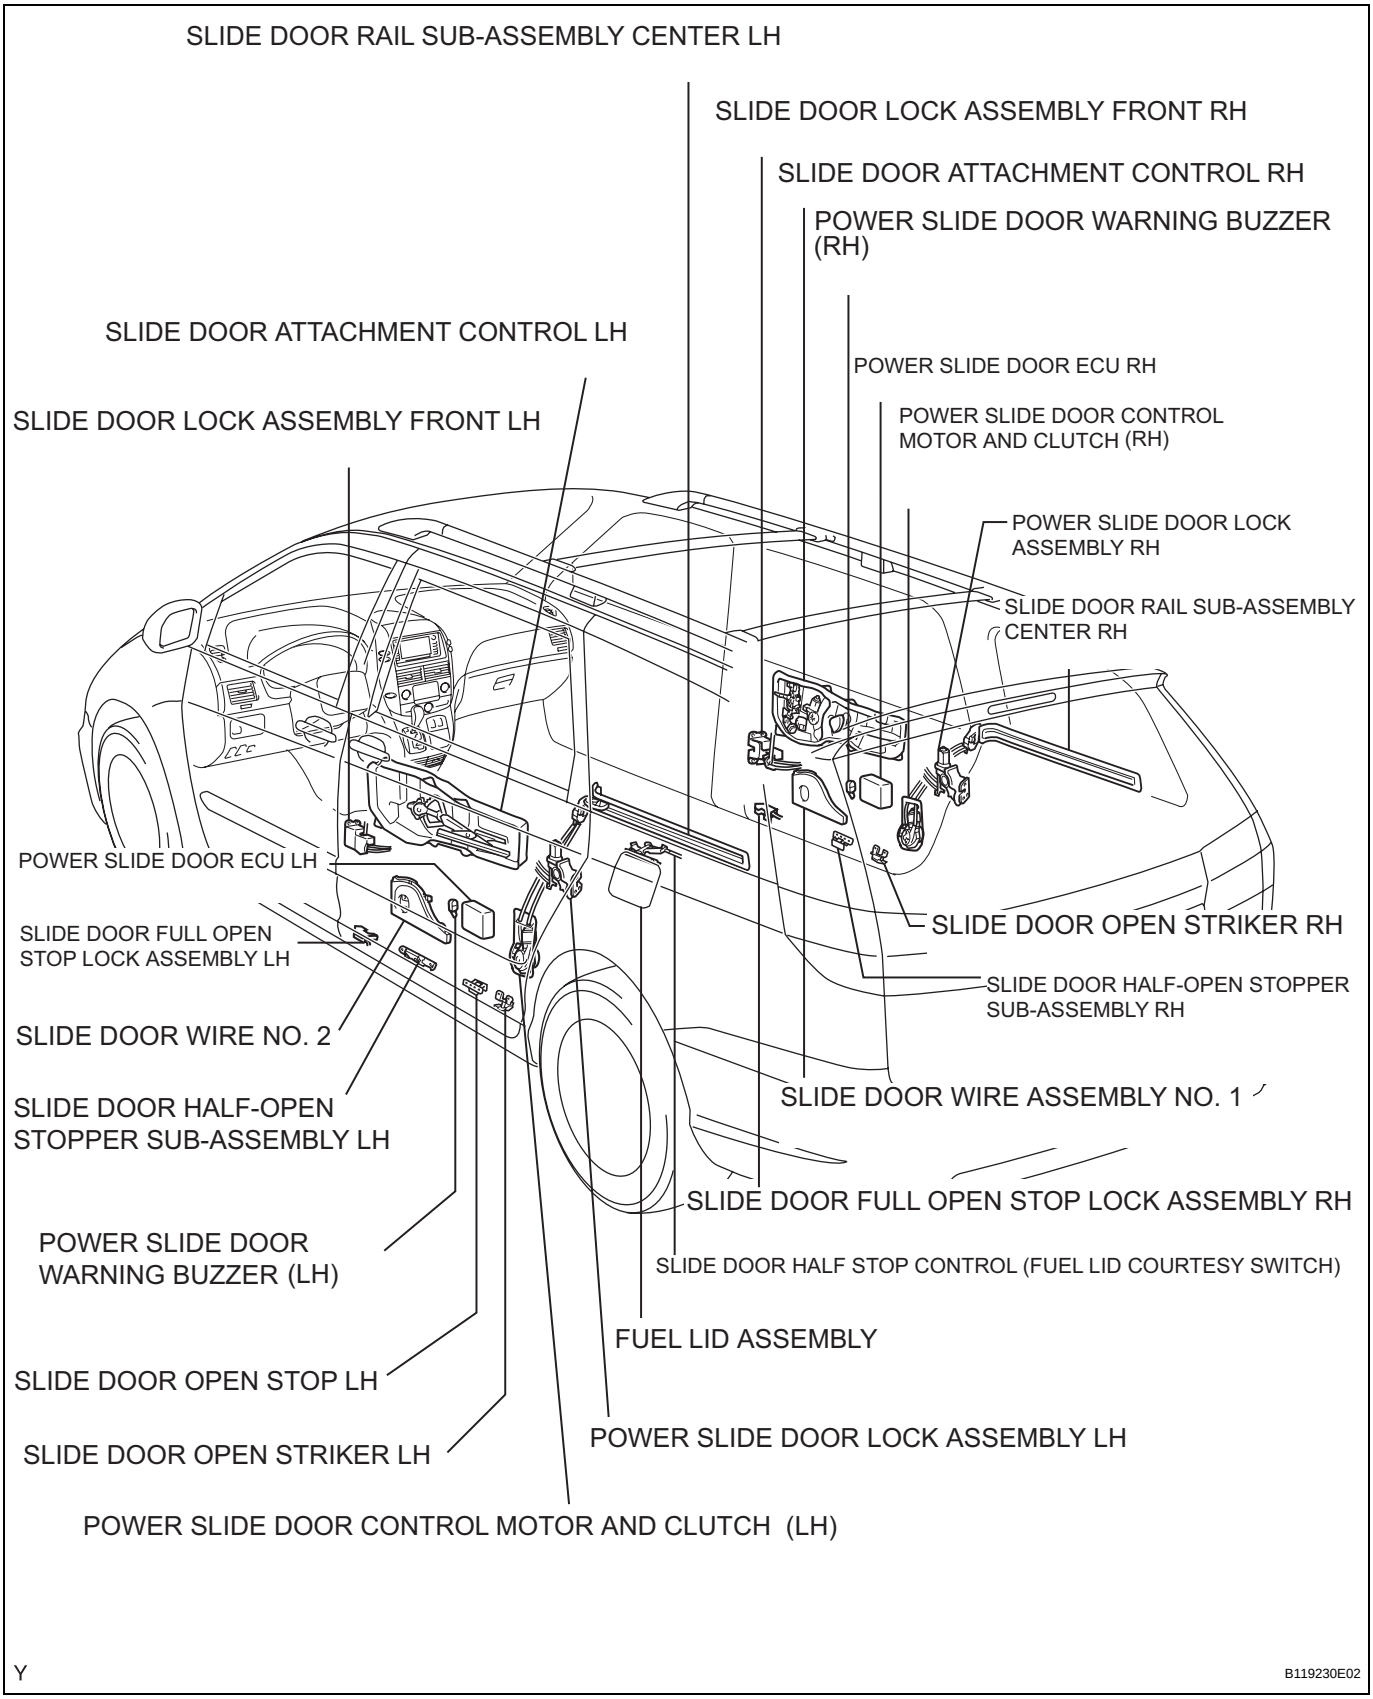
SLIDE DOOR RAIL SUB-ASSEMBLY CENTER LH
SLIDE DOOR LOCK ASSEMBLY FRONT RH
SLIDE DOOR ATTACHMENT CONTROL RH
POWER SLIDE DOOR WARNING BUZZER (RH)
SLIDE DOOR ATTACHMENT CONTROL LH
POWER SLIDE DOOR ECU RH
SLIDE DOOR LOCK ASSEMBLY FRONT LH
POWER SLIDE DOOR CONTROL MOTOR AND CLUTCH (RH)
POWER SLIDE DOOR LOCK ASSEMBLY RH
SLIDE DOOR RAIL SUB-ASSEMBLY CENTER RH
POWER SLIDE DOOR ECU LH
SLIDE DOOR OPEN STRIKER RH
SLIDE DOOR FULL OPEN STOP LOCK ASSEMBLY LH
SLIDE DOOR HALF-OPEN STOPPER SUB-ASSEMBLY RH
SLIDE DOOR WIRE NO. 2
SLIDE DOOR WIRE ASSEMBLY NO. 1
SLIDE DOOR HALF-OPEN STOPPER SUB-ASSEMBLY LH
SLIDE DOOR FULL OPEN STOP LOCK ASSEMBLY RH
POWER SLIDE DOOR WARNING BUZZER (LH)
SLIDE DOOR HALF STOP CONTROL (FUEL LID COURTESY SWITCH)
FUEL LID ASSEMBLY
SLIDE DOOR OPEN STOP LH
POWER SLIDE DOOR LOCK ASSEMBLY LH
SLIDE DOOR OPEN STRIKER LH
POWER SLIDE DOOR CONTROL MOTOR AND CLUTCH (LH)
Y
B119230E02

ED

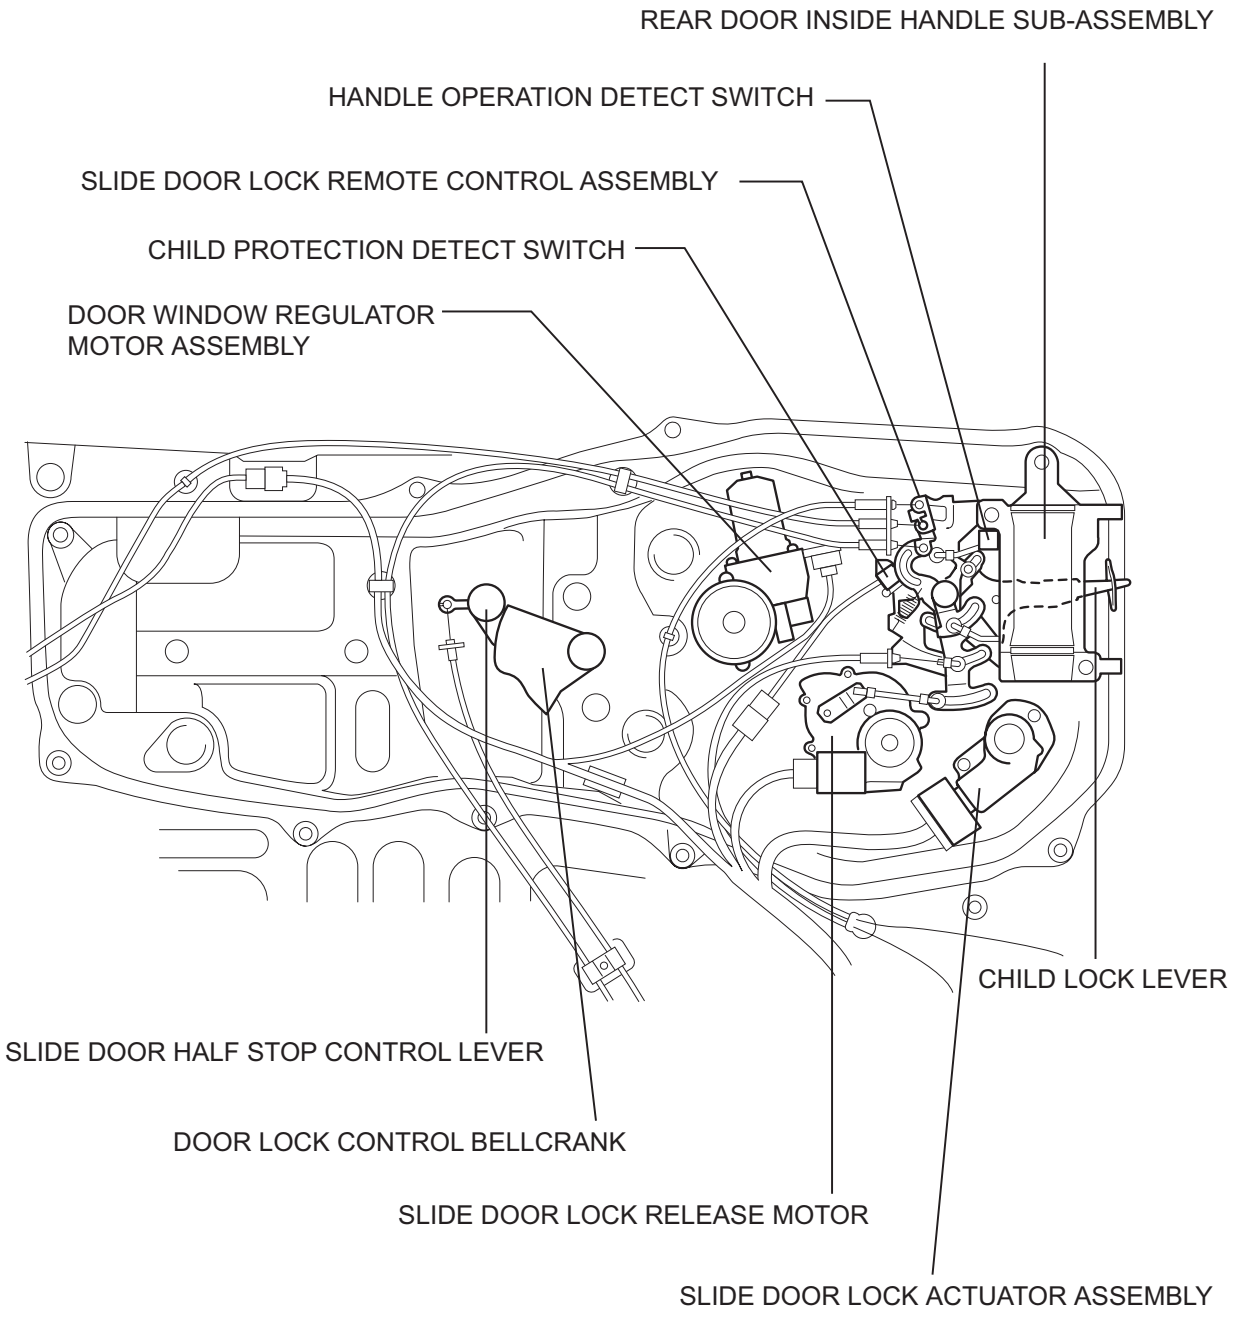


HINT:

In the RH door, look at the same location on the opposite side as compared to the LH door.

T

B119233E01

ED

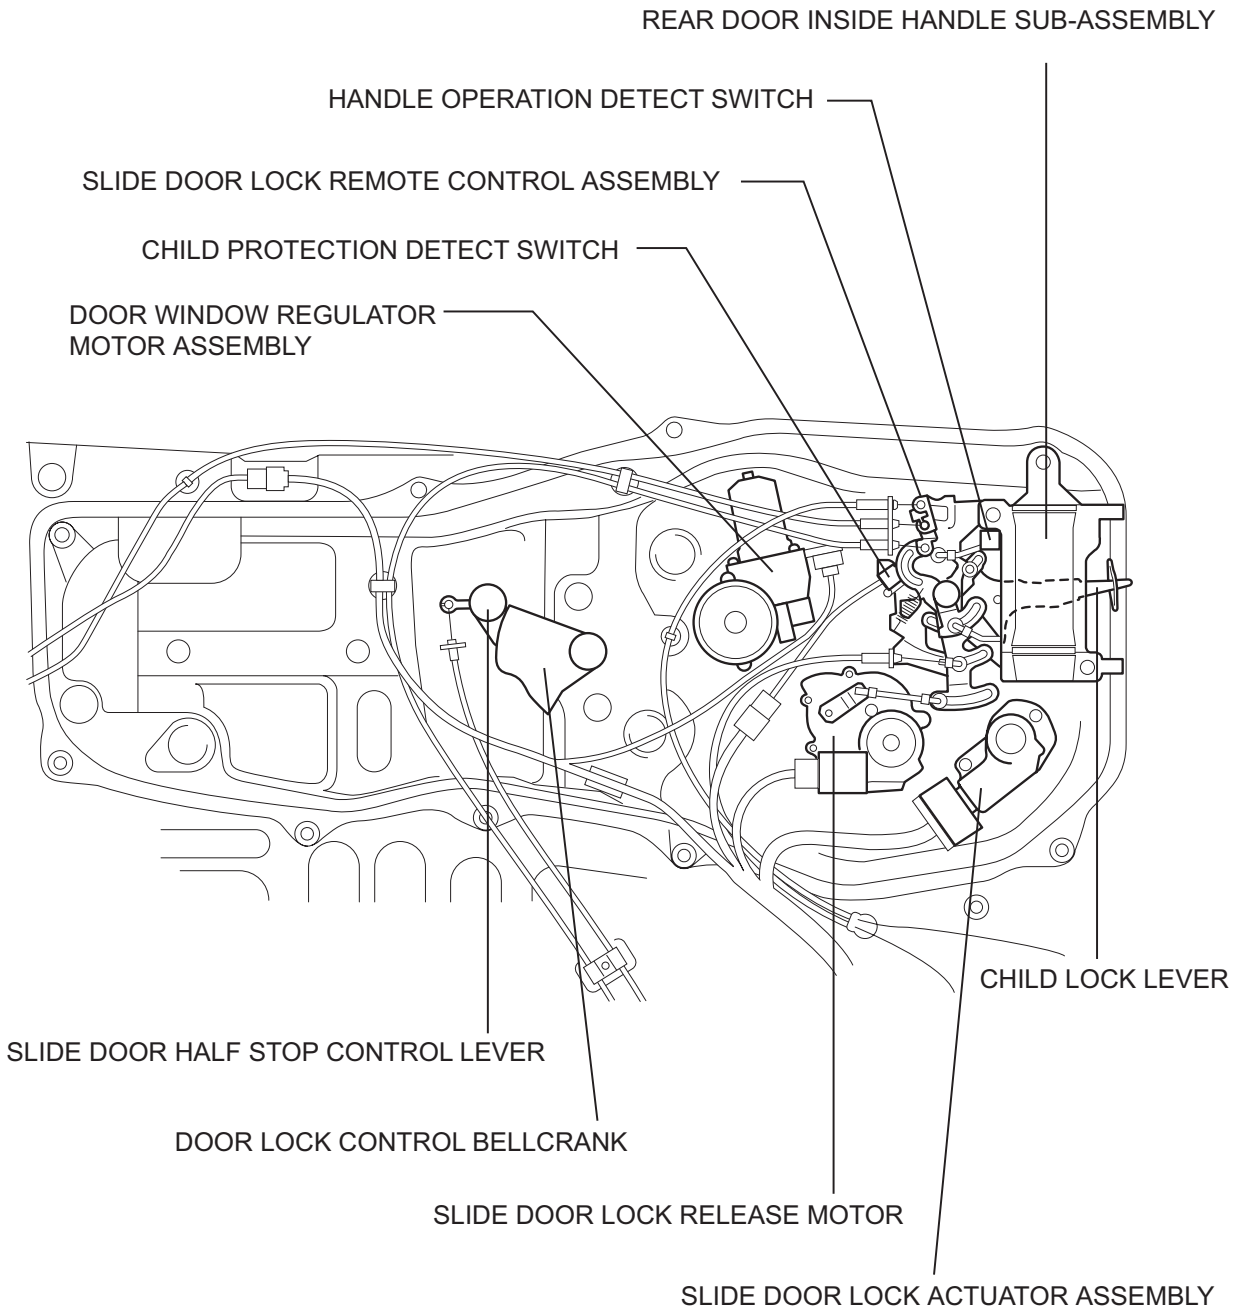

HINT:

In the LH, look at the same location on the opposite side as compared to the RH.

T

B119233E02

ED