# SLIDE DOOR CLOSER SYSTEM

## PARTS LOCATION

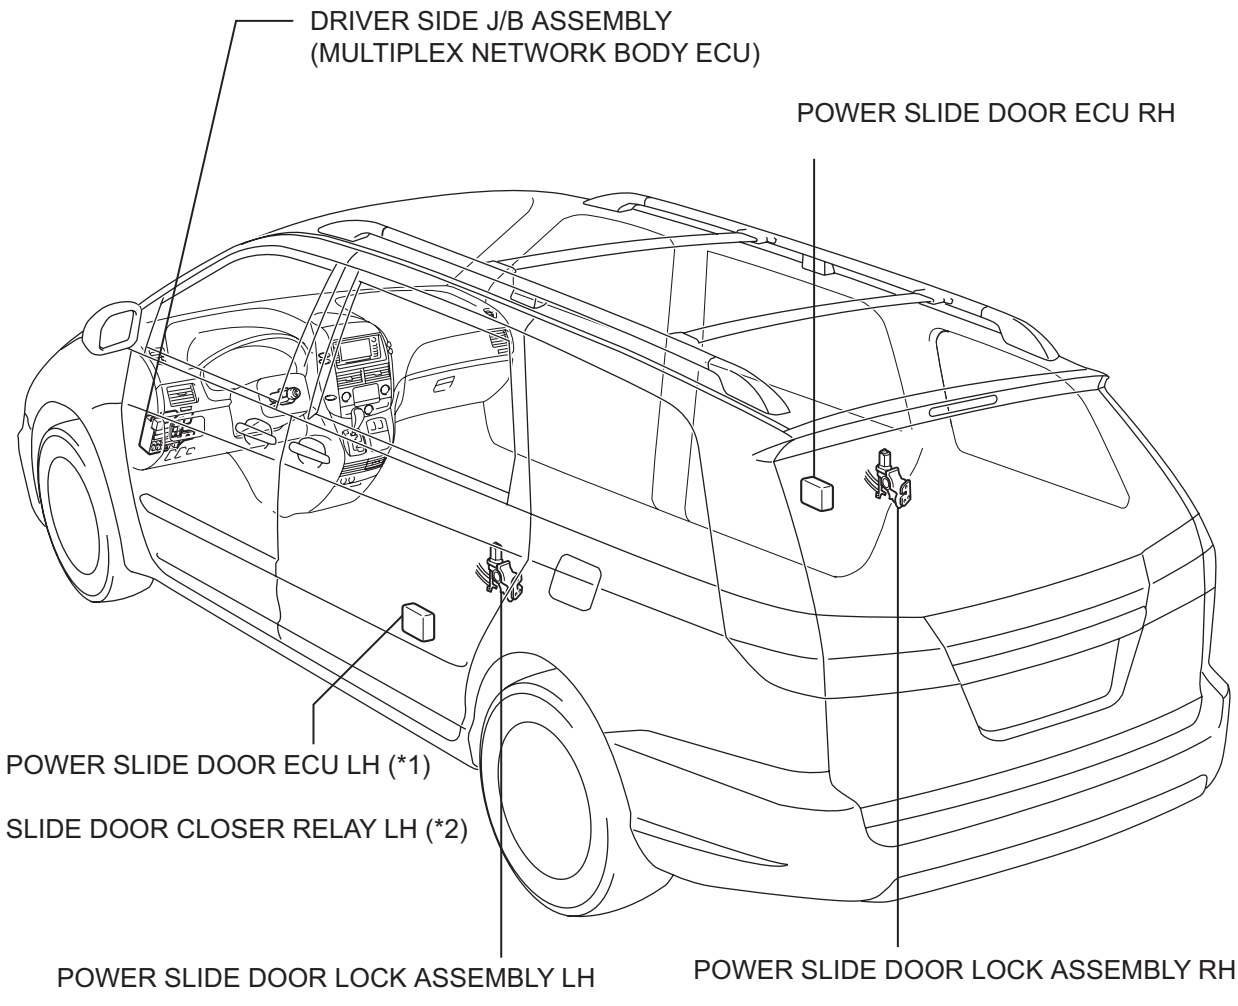


(*1): WITH POWER SLIDE DOOR

(*2): WITHOUT POWER SLIDE DOOR

Y

B119234E02

ED

# HOW TO PROCEED WITH TROUBLESHOOTING

HINT:
Troubleshoot in accordance with the procedures on the following pages.

| | |
|---|---|
| 1 | VEHICLE BROUGHT TO WORKSHOP |

NEXT

| | |
|---|---|
| 2 | CUSTOMER PROBLEM ANALYSIS CHECK AND SYMPTOM CHECK |

NEXT

| | |
|---|---|
| 3 | INSPECT COMMUNICATION FUNCTION OF LARGE-SCALE MULTIPLEX COMMUNICATION SYSTEM (BEAN) |

(a) Use the intelligent tester to check for normal function of the multiplex communication system.
  (1) (ECU unconnected, communication line malfunctioning) Without code outputs, proceed to A.
  (2) (ECU unconnected, communication line malfunctioning) With code outputs, proceed to B.

| | |
|---|---|
| B | Go To MULTIPLEX COMMUNICATION SECTION |

A

| | |
|---|---|
| 4 | PROBLEM SYMPTOMS TABLE |

(a) When problem is not listed on problem symptoms table, proceed to A.
(b) When problem is listed on problem symptoms table, proceed to B.

| | |
|---|---|
| B | Go to step 6 |

A

ED

| | |
|---|---|
| 5 | PERFORM TROUBLESHOOTING ACCORDING TO MALFUNCTION SYMPTOM |

(a) Data List / Active Test (See page ED-98).
(b) Terminals of ECU (See page ED-94).

NEXT

| | |
|---|---|
| **6** | **ADJUST, REPAIR OR REPLACE AND RESET SLIDE DOOR SYSTEM** |

**NEXT**

**END**