BACK DOOR CLOSER SYSTEM

PARTS LOCATION

POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY

- DOOR CONTROL SWITCH

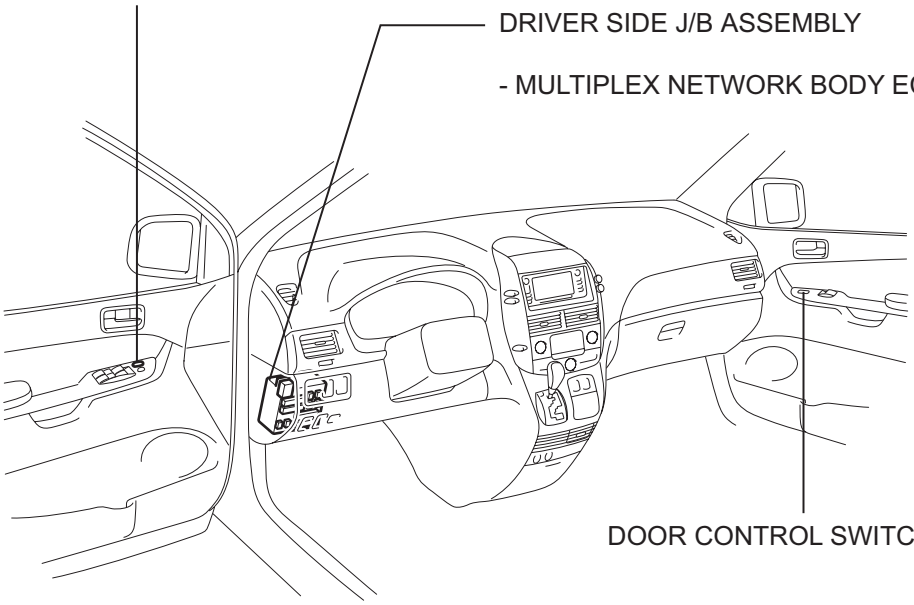

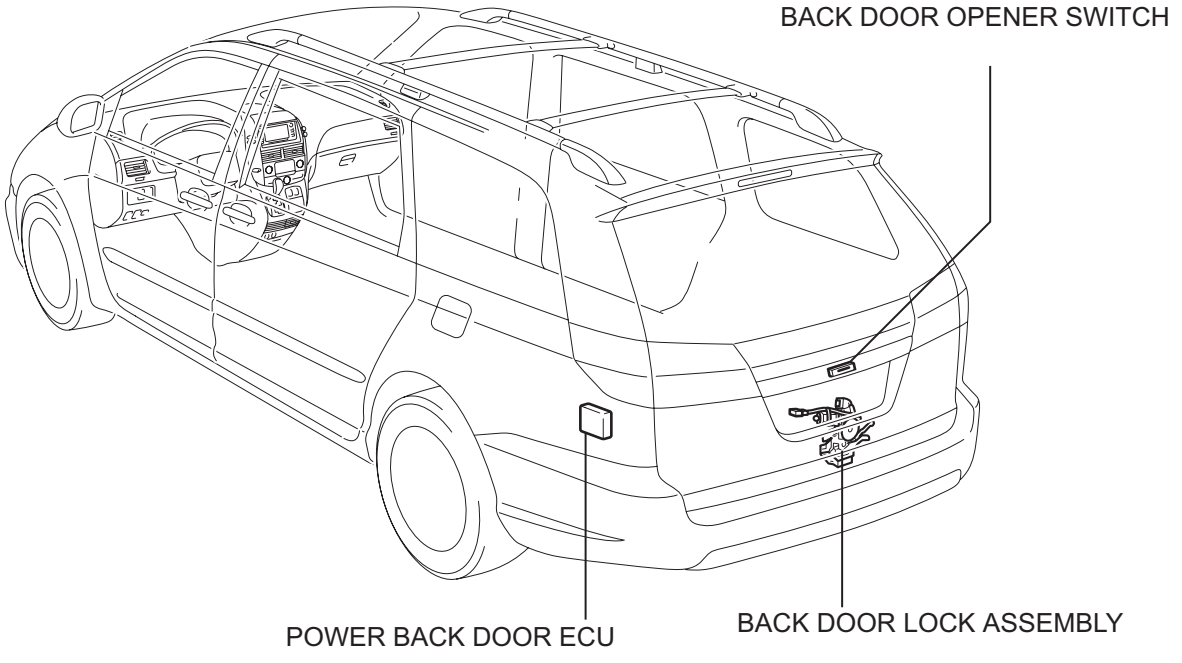

T

B120235E02

ED

HOW TO PROCEED WITH TROUBLESHOOTING

HINT:
Troubleshoot in accordance with the procedures on the following pages.

1	**VEHICLE BROUGHT TO WORKSHOP**

NEXT

2	**CUSTOMER PROBLEM ANALYSIS CHECK AND SYMPTOM CHECK**

NEXT

3	**INSPECT COMMUNICATION FUNCTION OF LARGE-SCALE MULTIPLEX COMMUNICATION SYSTEM (BEAN)**

(a) Use the intelligent tester to check for normal function of the multiplex communication system.
  (1) (ECU unconnected, communication line malfunctioning) Without code outputs, proceed to A.
  (2) (ECU unconnected, communication line malfunctioning) With code outputs, proceed to B.

B → **Go to MULTIPLEX COMMUNICATION SECTION**

A

4	**DTC CHECK**

(a) Check for a DTCs.
  (1) Without code outputs, proceed to A.
  (2) With code outputs, proceed to B.

B → **Go to step 6**

A

5	**PROBLEM SYMPTOMS TABLE**

(a) When problem is not listed on problem symptoms table, proceed to A.
(b) When problem is listed on problem symptoms table, proceed to B.

B → **Go to step 7**

A

6	PERFORM TROUBLESHOOTING ACCORDING TO MALFUNCTION SYMPTOM

(a) Data List / Active Test (See page ED-114).
(b) Inspection.
(c) Terminals of ECU (See page ED-112).

NEXT

7	ADJUST, REPAIR OR REPLACE

NEXT

8	RESET BACK DOOR SYSTEM

NEXT

9	CONFIRMATION TEST

NEXT

END