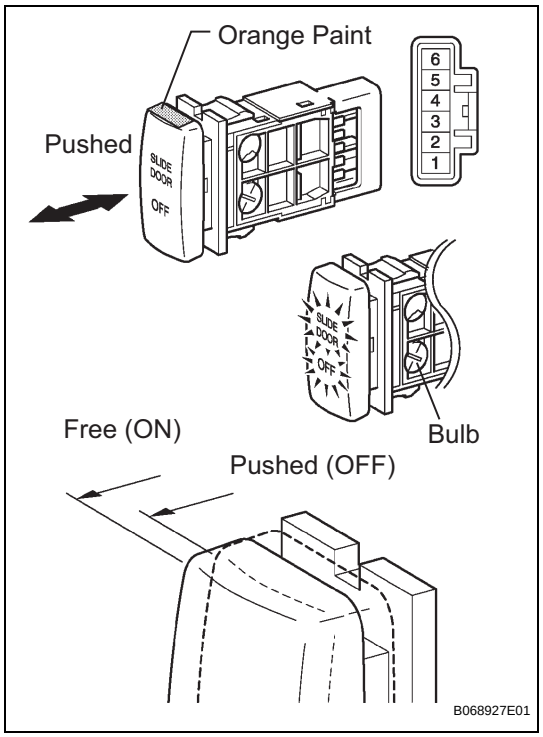

POWER SLIDE DOOR MAIN SWITCH

INSPECTION

1. INSPECT POWER SLIDE DOOR MAIN SWITCH

(a) Inspect the resistance of the switch.

Resistance

Terminal No.	Condition	Specified Condition
4 - 5	Free (ON)	Below 1 Ω
	Pushed (OFF)	10 kΩ or higher

If the result is not as specified, replace the switch.

(b) Apply battery voltage and check the illuminates.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 Battery negative (-) → Terminal 2	Illuminates

HINT:

Whether the switch illuminates or not will not affect the function of the LH side.

If the result is not as specified, replace the bulb.