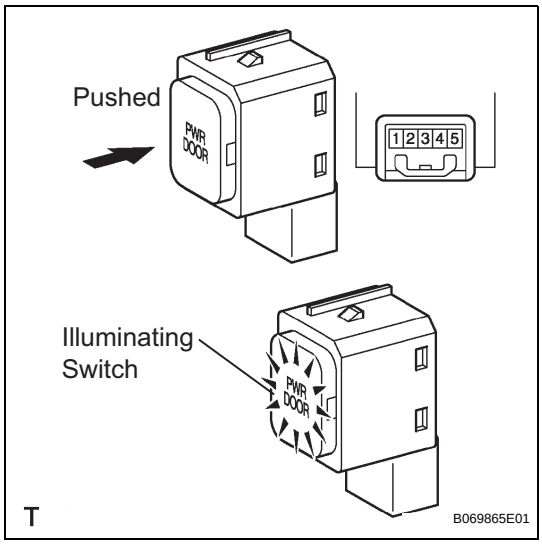

POWER SLIDE DOOR CONTROL SWITCH

INSPECTION

1. INSPECT POWER SLIDE DOOR CONTROL SWITCH

(a) Inspect the resistance of the switch for LH / RH.

Resistance

Terminal No.	Condition	Specified Condition
1 - 5	Free (OFF)	10 kΩ or higher
	Pushed (ON)	Below 1 Ω

If the result is not as specified, replace the switch.

(b) Apply battery voltage and check the illuminates.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 4 Battery negative (-) → Terminal 2	Illuminates

If the result is not as specified, replace the bulb.

HINT:

Whether the switch illuminates or not will not affect the function of the LH side.