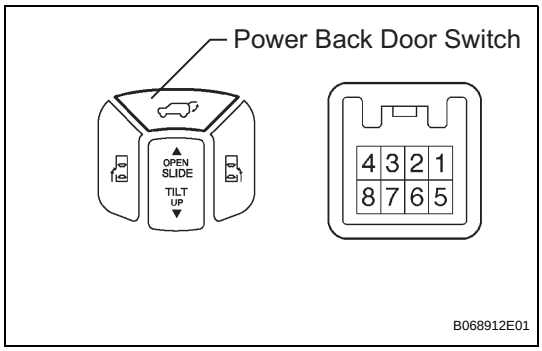

POWER BACK DOOR OPENER / CLOSER SWITCH

INSPECTION

1. INSPECT SATELLITE SWITCH

(a) Inspect the resistance of the back door switch.

Resistance

Terminal No.	Condition	Specified Condition
3 - 5	Free (OFF)	10 kΩ or higher
	Pushed (ON)	Below 1 Ω

If the result is not as specified, replace the switch.

(b) Apply battery voltage and check whether the switch illuminates.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 8 Battery negative (-) → Terminal 7	Illuminates

HINT:

Whether the switch illuminates or not will not affect the function of the RH side.

If the result is not as specified, replace the bulb.

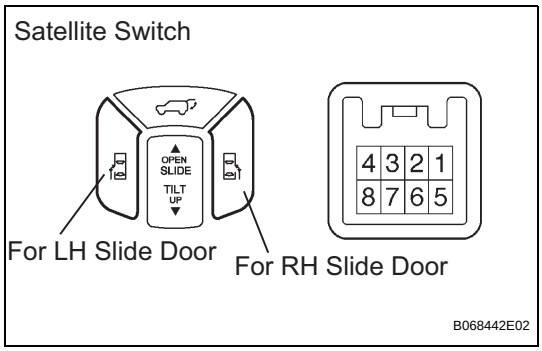

2. INSPECT SATELLITE SWITCH

(a) Inspect the resistance of the switch for the LH / RH door.

Resistance

Terminal No.	Condition	Specified Condition
1 - 5 (LH) 4 - 5 (RH)	Free (OFF)	10 kΩ or higher
	Pushed (ON)	Below 1 Ω

If the result is not as specified, replace the switch.

(b) Apply battery voltage and check whether the switch illuminates.

Standard

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 8 Battery negative (-) → Terminal 7	Illuminates

HINT:

Whether the switch illuminates or not will not affect the function of the RH side.

If the result is not as specified, replace the bulb.