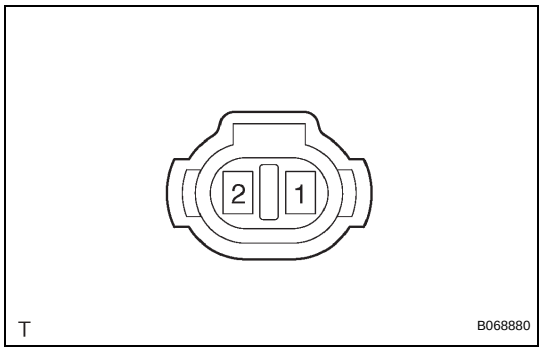


POWER BACK DOOR WARNING BUZZER

INSPECTION

1. POWER BACK DOOR WARNING BUZZER

(a) Check the resistance of the buzzer.

Resistance

Terminal No.	Specified Condition
1 - 2	Approx.1 kΩ

If the result is not as specified, replace the buzzer.

NOTICE:

- **The circuit that causes the buzzer to sounds is built into the back door ECU, not around the buzzer.**
- **Directly applying battery voltage to the buzzer does not cause the buzzer to sound.**