DISASSEMBLY

1. **REMOVE NO. 1ULTRASONIC SENSOR RETAINER (w/ Clearance Sonar System) (See page PM-19)**
2. **REMOVE NO. 1 ULTRASONIC SENSOR (w/ Clearance Sonar System) (See page PM-19)**
3. **REMOVE REAR BUMPER ENERGY ABSORBER**
4. **REMOVE REAR BUMPER BAR PLATE**
   (a) Remove the 4 clips and the rear bumper bar plate.
5. **REMOVE REAR BUMPER REINFORCEMENT SUB-ASSEMBLY**
   (a) Remove the 6 nuts and the rear bumper reinforcement sub-assembly.
6. **REMOVE LH REAR BUMPER SIDE RETAINER**
   (a) Remove the 3 screws and the LH rear bumper side retainer.
7. **REMOVE RH REAR BUMPER SIDE RETAINER**
   (a) Remove the 3 screws and the RH rear bumper side retainer.

REASSEMBLY

1. **INSTALL LH REAR BUMPER SIDE RETAINER**
   (a) Install the LH rear bumper side retainer with the 3 screws.
2. **INSTALL RH REAR BUMPER SIDE RETAINER**
   (a) Install the RH rear bumper side retainer with the 3 screws.
3. **INSTALL REAR BUMPER REINFORCEMENT SUB-ASSEMBLY**
   (a) Install the rear bumper reinforcement sub-assembly with the 6 nuts.
   Torque: 50 N*m (510 kgf*cm, 37 ft.*lbf)
4. **INSTALL REAR BUMPER BAR PLATE**
   (a) Install the rear bumper bar plate to the rear bumper reinforcement sub-assembly with the 4 clips.
5. **INSTALL REAR BUMPER ENERGY ABSORBER**
6. **INSTALL NO. 1 ULTRASONIC SENSOR (w/ Clearance Sonar System) (See page PM-20)**
7. **INSTALL NO. 1ULTRASONIC SENSOR RETAINER (w/ Clearance Sonar System) (See page PM-20)**

INSTALLATION

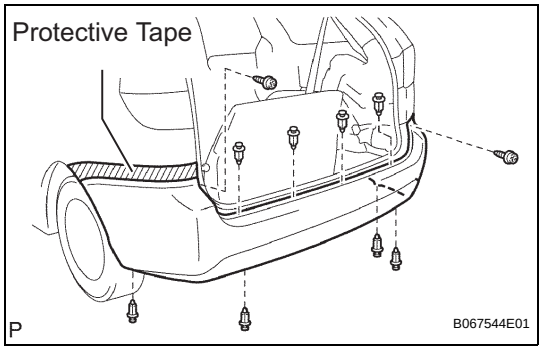

1. **INSTALL REAR BUMPER COVER**
   (a) Install the rear bumper cover with the 2 screws and 8 clips.