
REMOVAL

1. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH (See page ED-172)**
2. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG (See page ED-172)**
3. **REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY**
4. **REMOVE BACK FRAME PLATE**
5. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (See page ED-172)**
6. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY (See page ED-172)**
7. **REMOVE OUTER REAR VIEW MIRROR ASSEMBLY (See page MI-42)**
8. **REMOVE FRONT DOOR GLASS WEATHERSTRIP**
   (a) Put protective tape under the front door glass weatherstrip.
   (b) Using a screwdriver or moulding remover, remove the front door glass weatherstrip.
   HINT:
   Tape the screwdriver tip before use.

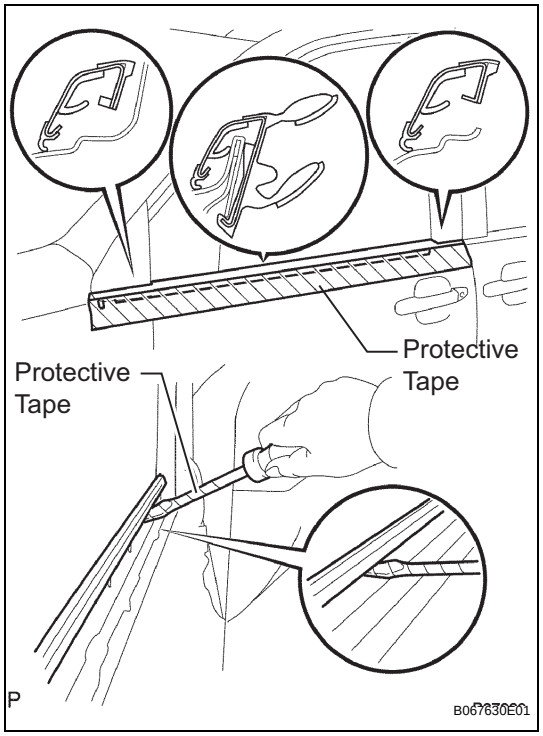

INSTALLATION

1. **INSTALL FRONT DOOR GLASS WEATHERSTRIP**
   (a) Install the front door grass weatherstrip.
2. **INSTALL OUTER REAR VIEW MIRROR ASSEMBLY (See page MI-45)**
3. **INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY**
4. **INSTALL POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY**
5. **INSTALL BACK FRAME PLATE**
6. **INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY**
7. **INSTALL FRONT DOOR INSIDE HANDLE BEZEL PLUG**
8. **INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH**