


REMOVAL

1. **REMOVE BACK DOOR CENTER GARNISH (See page ET-18)**
2. **REMOVE POWER BACK DOOR ROD (See page ED-220)**
3. **REMOVE BACK DOOR LH SIDE GARNISH (See page ED-220)**
4. **REMOVE BACK DOOR RH SIDE GARNISH (See page ED-220)**
5. **REMOVE BACK DOOR PULL STRAP (See page ED-221)**
6. **REMOVE BACK DOOR TRIM BOARD ASSEMBLY (See page ED-221)**
7. **REMOVE LH BACK-UP LIGHT ASSEMBLY (See page LI-90)**
8. **REMOVE RH BACK-UP LIGHT ASSEMBLY (See page LI-90)**
9. **REMOVE BACK DOOR OUTSIDE GARNISH**
   (a) Disconnect the licence light connector.
   (b) Remove the 5 nuts, clip and back door outside garnish sub-assembly.

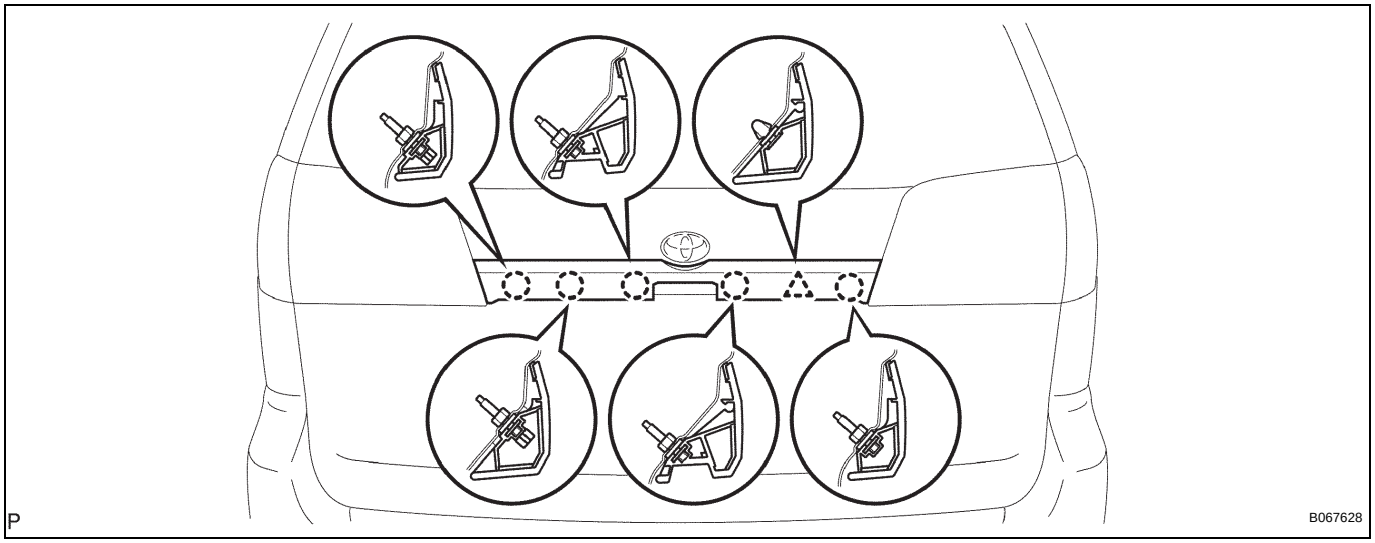

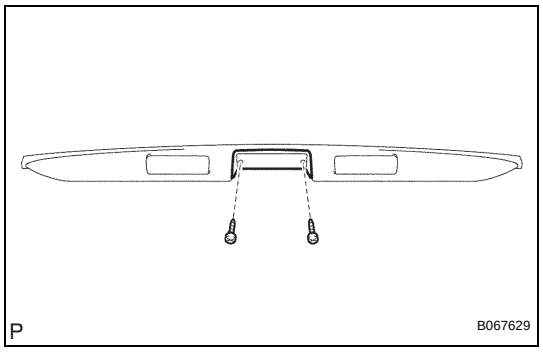


(c) Remove the 2 screws and back door outside opener switch.

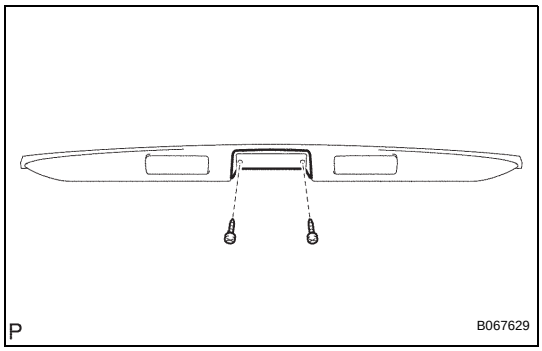

INSTALLATION

1. **INSTALL BACK DOOR OUTSIDE GARNISH**
   (a) Install the back door outside opener switch with the 2 screws.
   (b) Install the back door outside garnish with the 5 nuts and a clip.

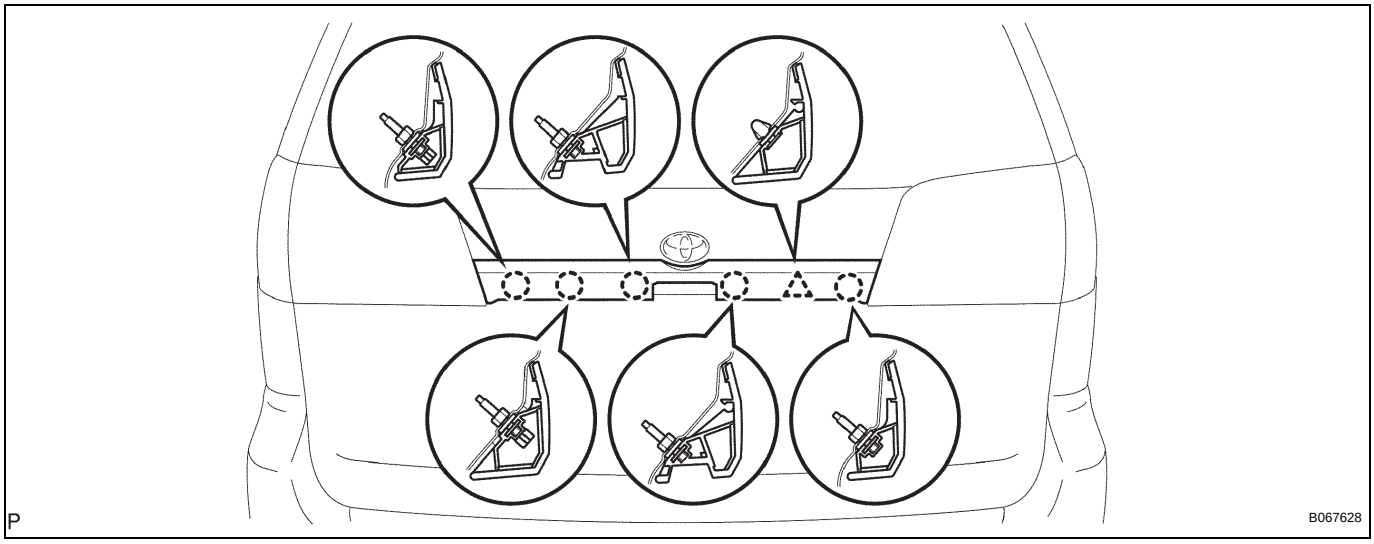

   (c) Connect the licence light connector.

2. **INSTALL LH BACK-UP LIGHT ASSEMBLY (See page LI-90)**
3. **INSTALL RH BACK-UP LIGHT ASSEMBLY (See page LI-90)**
4. **INSTALL BACK DOOR TRIM BOARD ASSEMBLY**
5. **INSTALL BACK DOOR PULL STRAP (See page ED-223)**
6. **INSTALL BACK DOOR LH SIDE GARNISH**
7. **INSTALL BACK DOOR RH SIDE GARNISH**
8. **INSTALL POWER BACK DOOR ROD**
9. **INSTALL BACK DOOR CENTER GARNISH (See page ET-18)**