

# REAR DOOR WINDOW FRAME MOULDING


## COMPONENTS

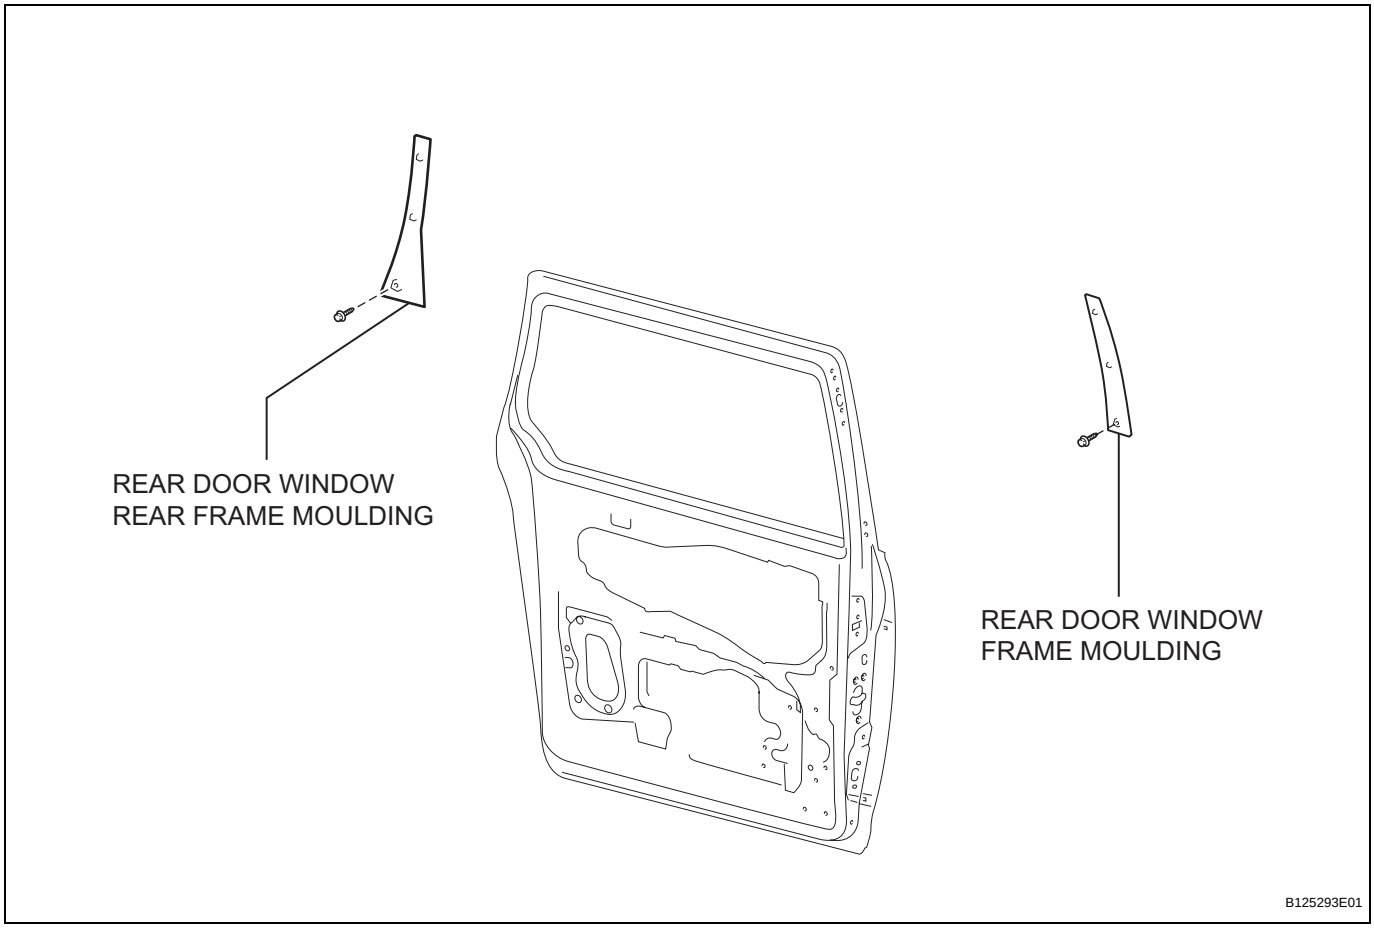


## REMOVAL

1. **REMOVE REAR DOOR WINDOW FRAME MOULDING**
   (a) Remove the screw.
   (b) Using a heat light, heat the rear door window frame moulding between 40 to 60 °C (104 to 140 °F).
   **NOTICE:**
   **Do not heat the rear door window frame moulding excessively.**
   (c) Slide the rear door window frame moulding upward to remove the moulding.
   **NOTICE:**
   **If reusing the moulding, take care not to damage the rear door window frame moulding.**

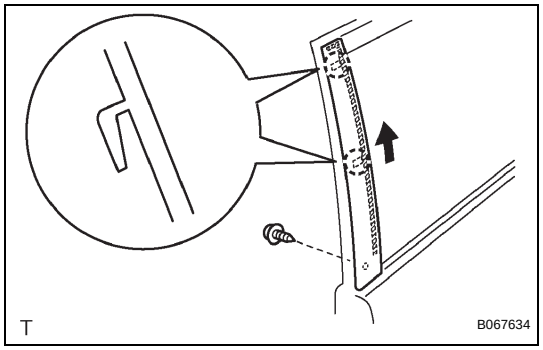

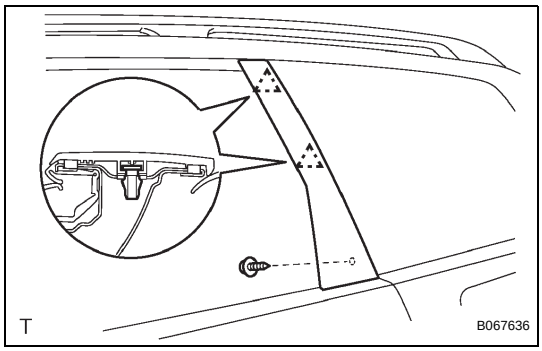
**2. REMOVE REAR DOOR WINDOW REAR FRAME MOULDING**

(a) Remove the screw.

(b) Using a heat light, heat the rear door window rear frame moulding between 40 to 60 °C (104 to 140 °F).

**NOTICE:**
**Do not heat the rear door windou rear frame moulding excessively.**

(c) Slide the rear door windou rear frame moulding upward to remove the moulding.

**NOTICE:**
**If reusing the moulding, take care not to damage the rear door windou rear frame moulding.**