

FRONT FLOOR FOOTREST

COMPONENTS

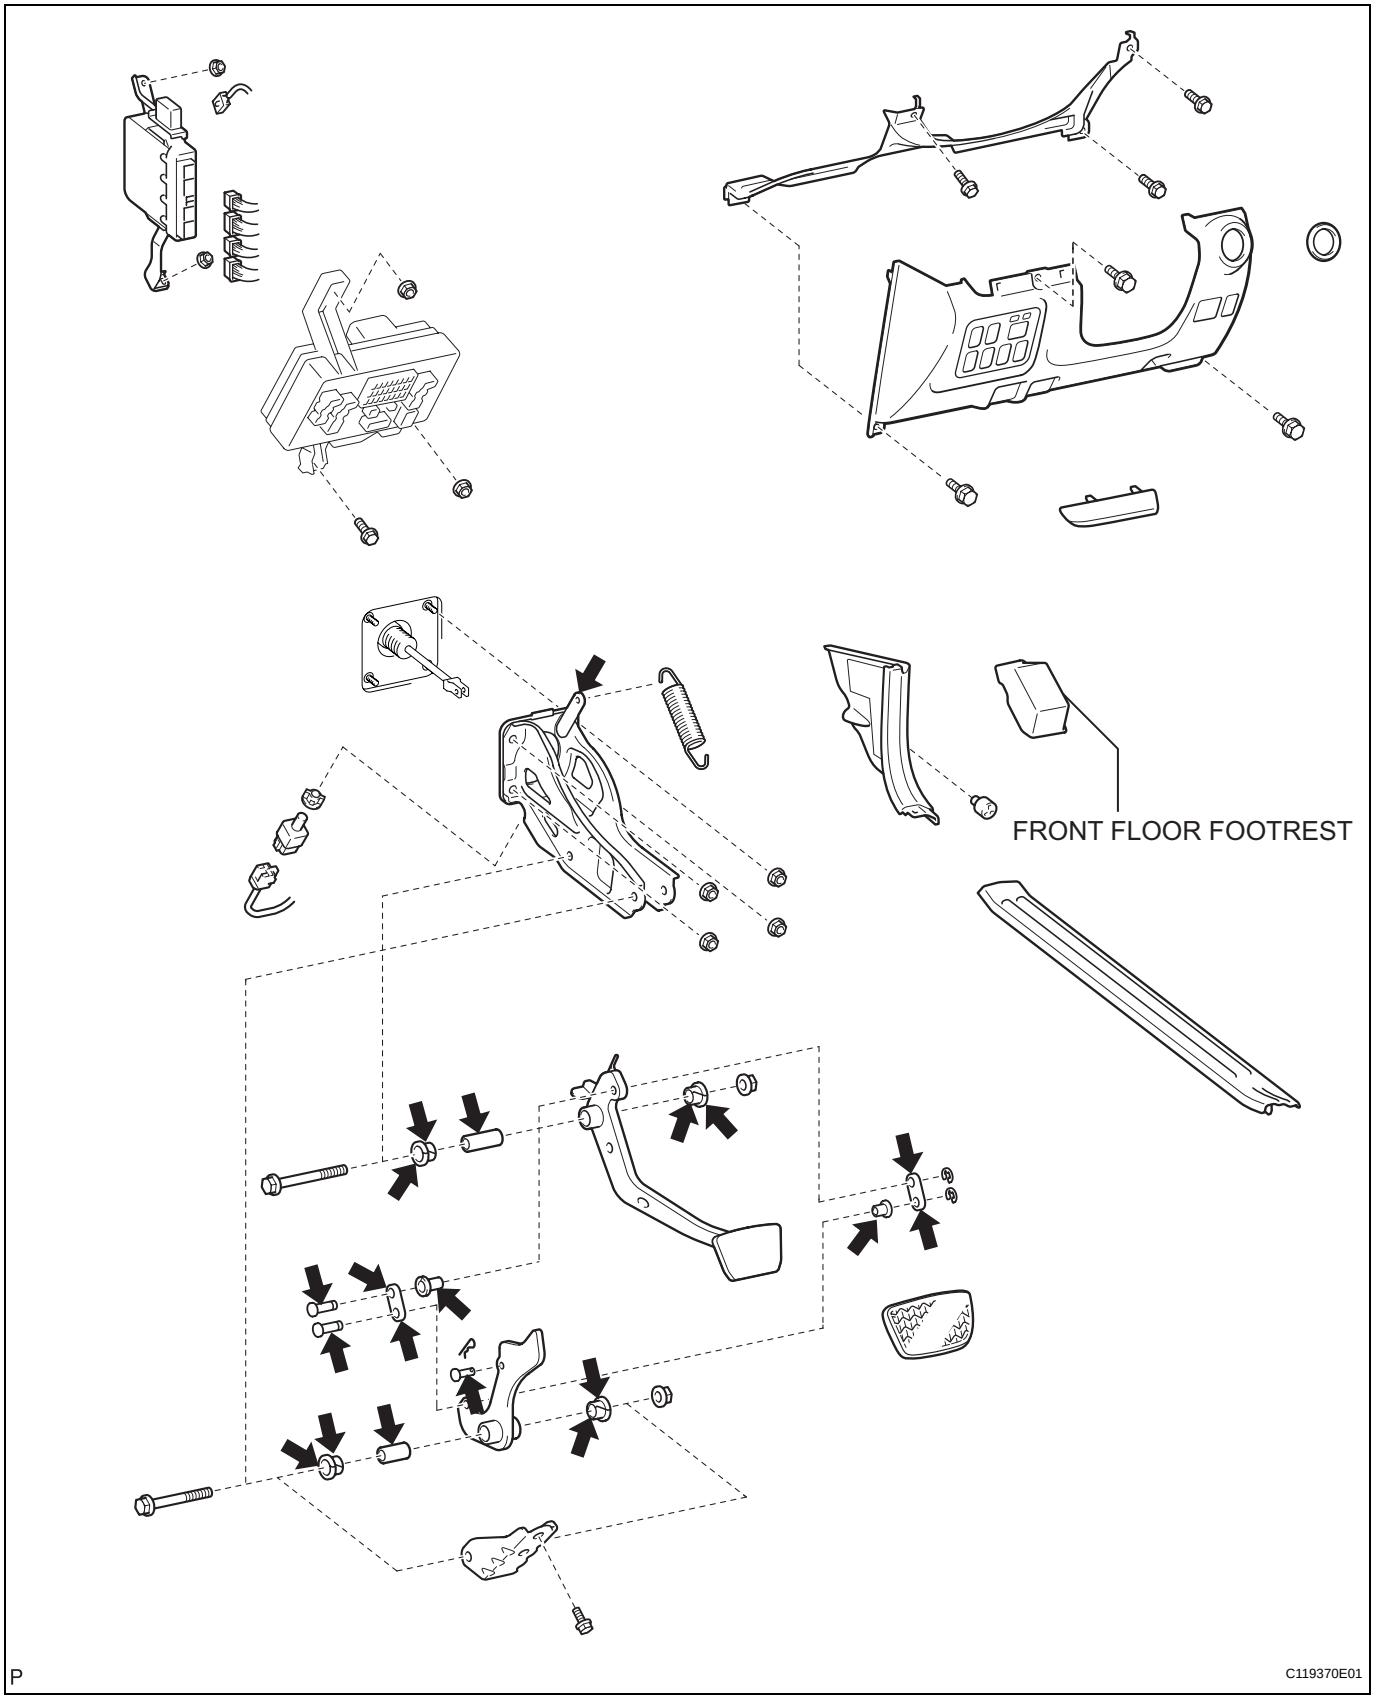

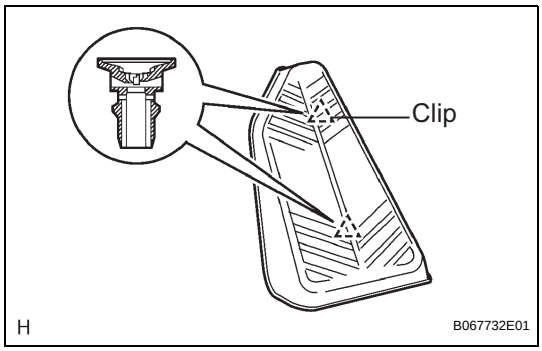

REMOVAL

1. REMOVE FRONT FLOOR FOOTREST

(a) Using a screwdriver, disengage the 2 clips and remove the footrest.
HINT:
Tape the screwdriver tip before use.

(b) Disengage the clips and then remove the 2 clips from the footrest.