
INSTALLATION

1. INSTALL SLIDING ROOF HOUSING ASSEMBLY

(a) Install the housing with the 6 nuts.

(b) Install the 4 brackets with the 8 bolts.

(c) Connect the 4 hoses and drive gear connector.

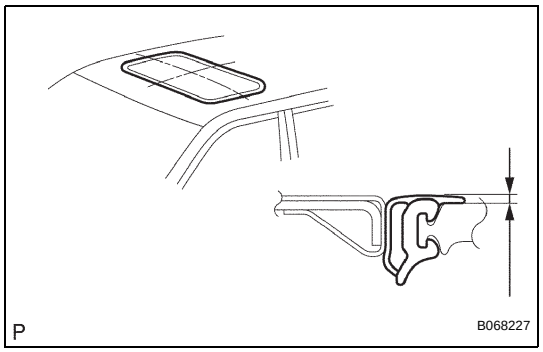

2. ADJUST SLIDING ROOF GLASS SUB-ASSEMBLY

(a) Check for a difference in levels between the sliding roof (roof glass) and roof panel.

Difference:

0 +- 2.0 mm (0.072 in.)

NOTICE:

The clearance should be even all around.

3. INSTALL SLIDING ROOF GLASS SUB-ASSEMBLY

(a) Using a torx wrench T25, loosen the screw to adjust the sliding roof panel position. When the adjustment has been done, tighten the screw there.

4. RESET SLIDING ROOF POSITION

5. CHECK FOR WATER LEAKS

(a) Adjusting the sliding roof, check that there is no water leak.

If a leak is found, readjust the sliding roof.

6. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

See page IR-14