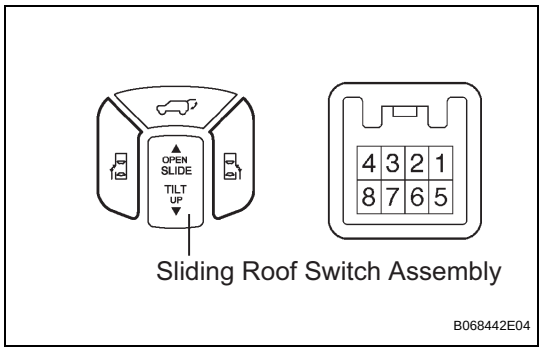

SLIDING ROOF SWITCH ASSEMBLY

ON-VEHICLE INSPECTION

1. INSPECT SLIDING ROOF SWITCH ASSEMBLY

(a) Remove the switch.

(b) Check the resistance between the terminals when operating the switch.

Resistance

Terminals No.	Switch Operation	Specified Condition
6 ←→ 5	TILT UP is pressed	Below 1 Ω
2 ←→ 5	SLIDE OPEN is pressed	
2, 6 ←→ 5	OFF	10 kΩ or higher

If the result is not as specified, replace the switch set.