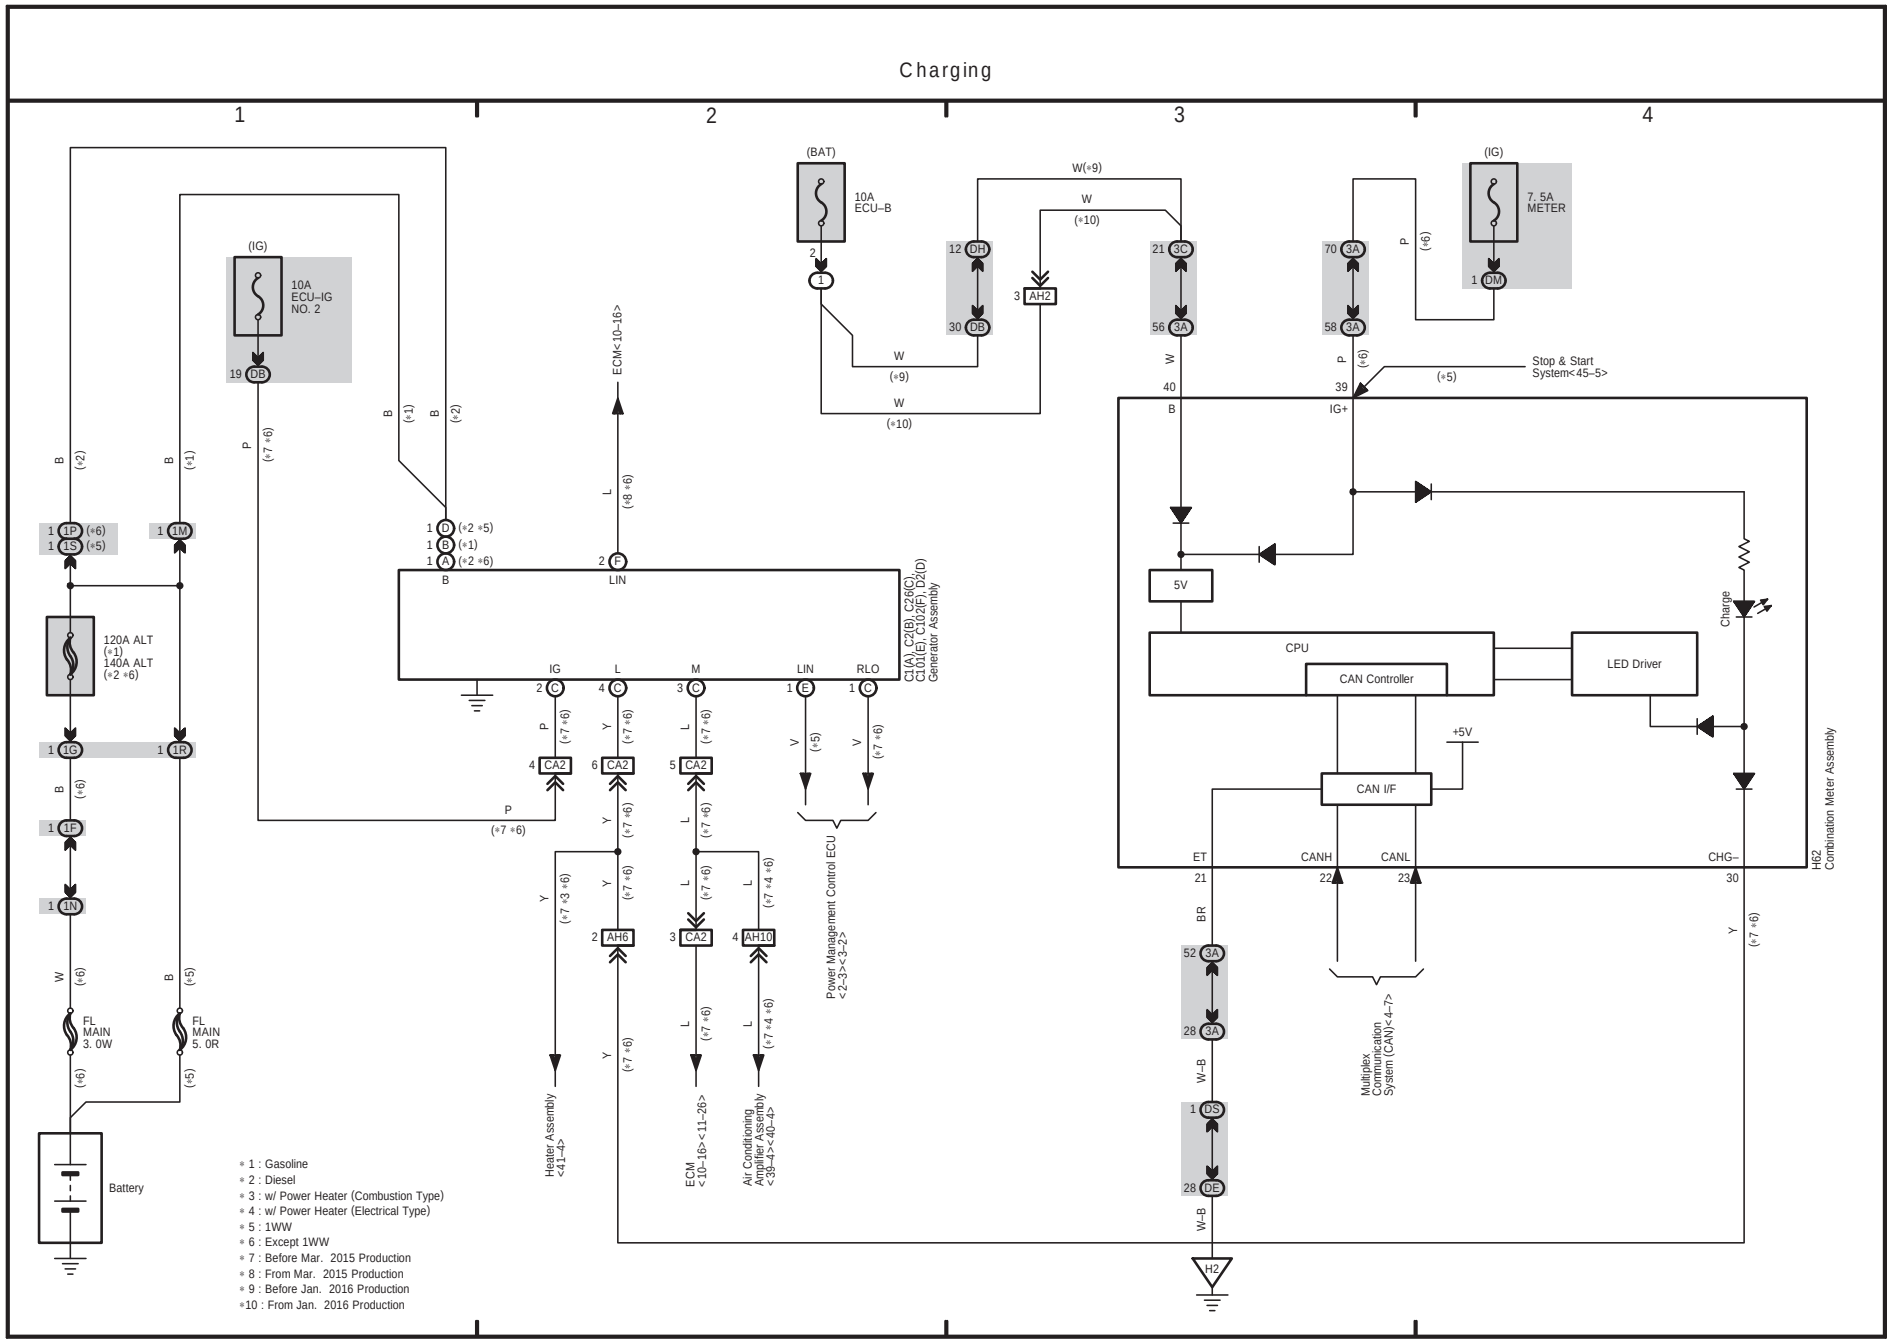
Charging
1
2
3
4
(BAT)
10A
ECU–B
(IG)
10A
ECU–IG
NO. 2
(IG)
7. 5A
METER
120A ALT
(∗1)
140A ALT
(∗2 ∗6)
FL
MAIN
3. 0W
FL
MAIN
5. 0R
Battery
ECM<10–16>
C1(A), C2(B), C26(C)
C10(E), C10(F), D2(D)
Generator Assembly
Power Management Control ECU
<2–3><3–2>
Heater Assembly
<41–4>
ECM
<10–16><11–26>
Air Conditioning
Amplifier Assembly
<39–4><40–4>
Stop & Start
System<45–5>
5V
CPU
CAN Controller
LED Driver
CAN I/F
+5V
Charge
H62
Combination Meter Assembly
Multiplex
Communication
System (CAN)<4–7>
∗ 1 : Gasoline
∗ 2 : Diesel
∗ 3 : w/ Power Heater (Combustion Type)
∗ 4 : w/ Power Heater (Electrical Type)
∗ 5 : 1WW
∗ 6 : Except 1WW
∗ 7 : Before Mar. 2015 Production
∗ 8 : From Mar. 2015 Production
∗ 9 : Before Jan. 2016 Production
∗10 : From Jan. 2016 Production