Position of Parts in Engine Compartment <RHD 1ZR-FAE, 2ZR-FAE From Nov. 2012 Production>

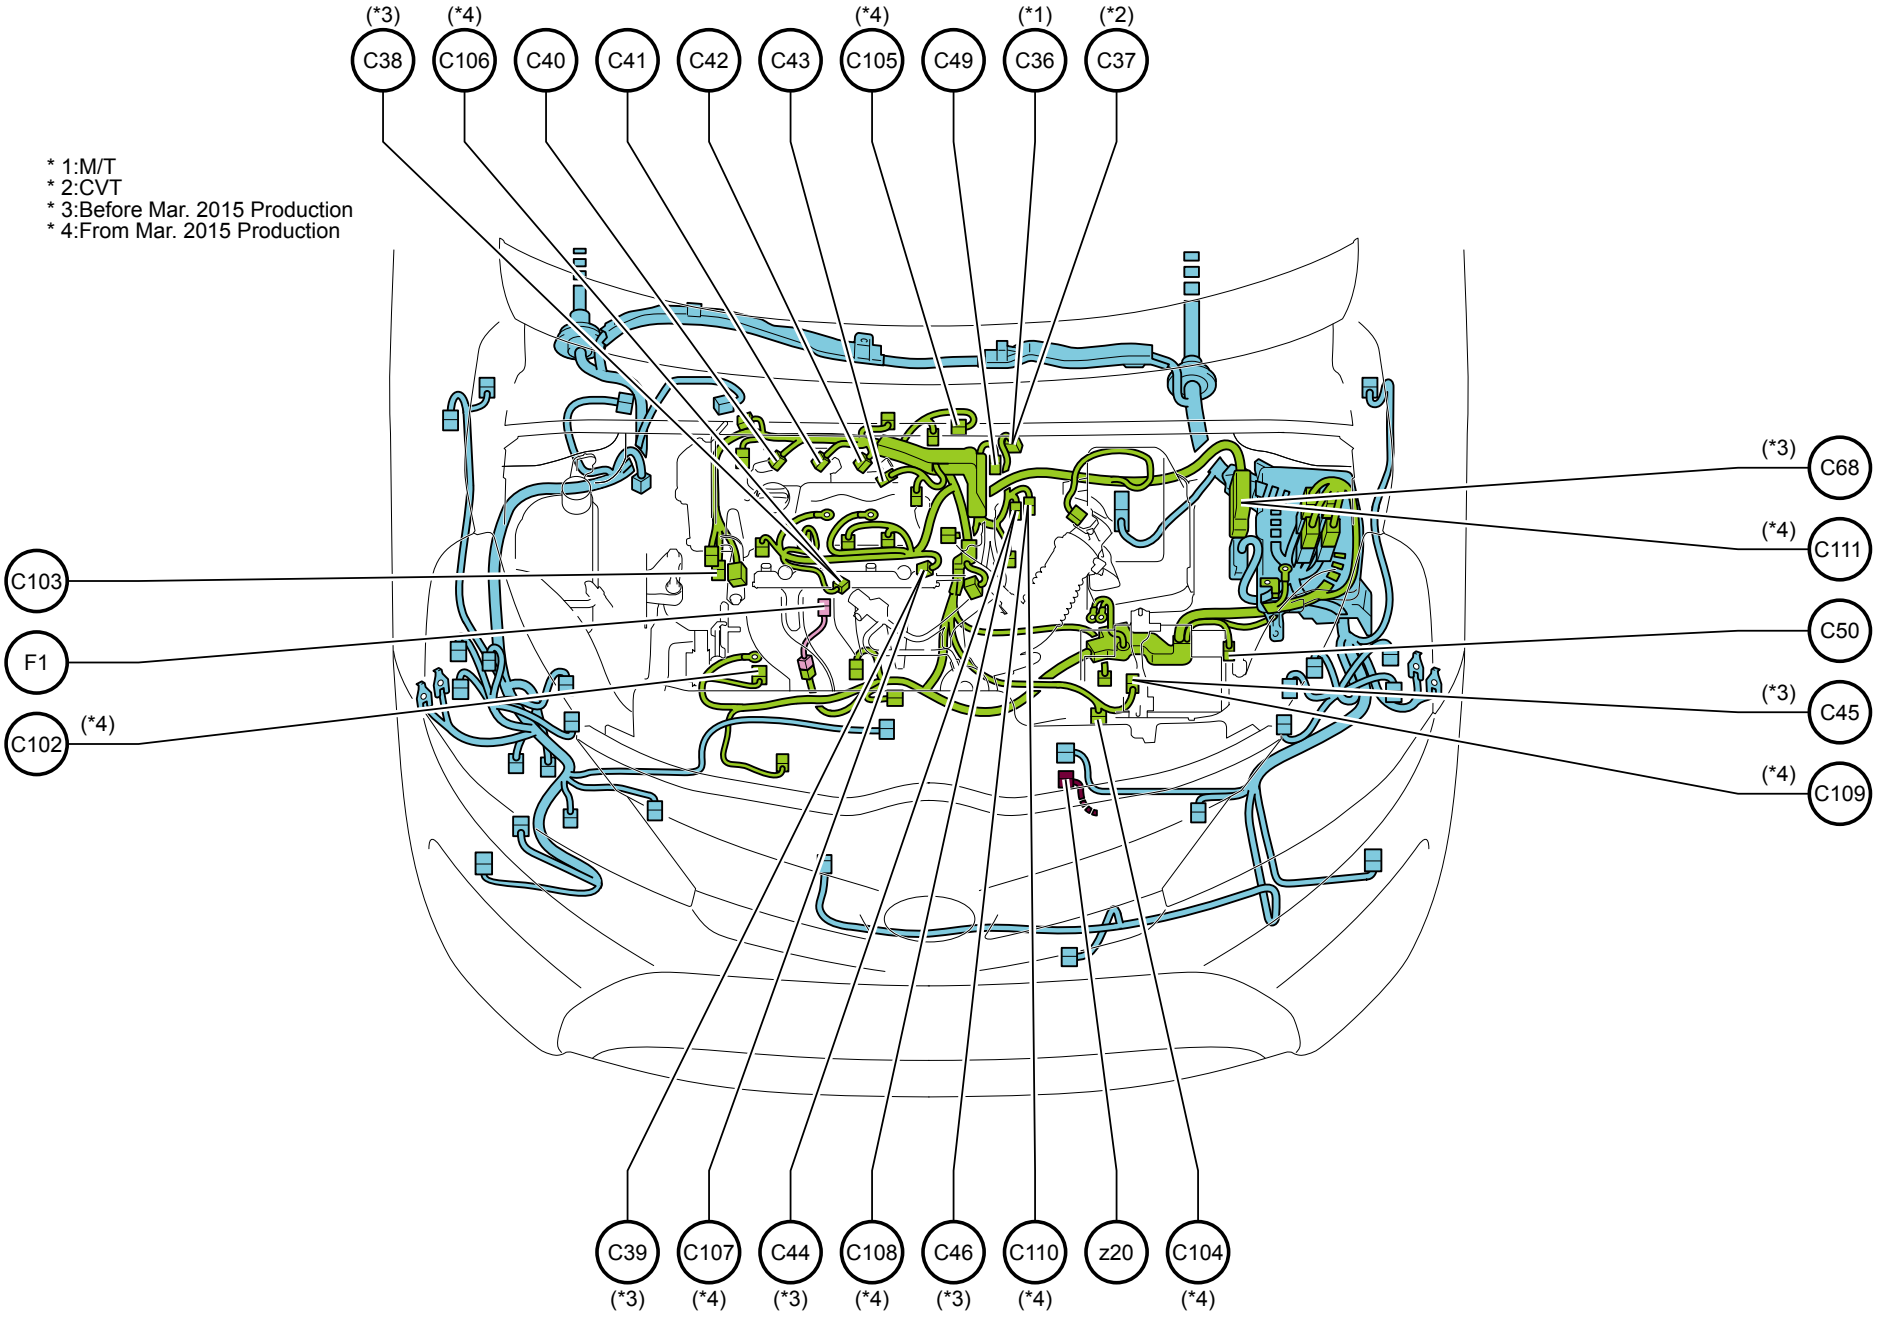

C 36 Oxygen Sensor (Bank 1 Sensor 2)
C 37 Oxygen Sensor (Bank 1 Sensor 2)
C 38 VSV (ACIS)
C 39 E.F.I. Vacuum Sensor Assembly
C 40 Ignition Coil Assembly No. 1
C 41 Ignition Coil Assembly No. 2
C 42 Ignition Coil Assembly No. 3
C 43 Ignition Coil Assembly No. 4
C 44 Oil Pressure Sensor
C 45 Transmission Revolution Sensor (NIN)
C 46 Transmission Revolution Sensor (NOUT)
C 49 Valve Lift Control Driver
C 50 Battery Current Sensor Assembly
C 68 ECM
C 102 Generator Assembly
C 103 Engine Oil Temperature Sensor
C 104 Electronically Controlled Transmission Solenoid
C 105 Purge VSV
C 106 VSV (ACIS)
C 107 E.F.I. Vacuum Sensor Assembly
C 108 Oil Pressure Sensor
C 109 Transmission Revolution Sensor (NIN)
C 110 Transmission Revolution Sensor (NOUT)
C 111 ECM

F 1 Knock Control Sensor (Bank 1)

z 20 Cooling Fan ECU , Cooling Fan Motor

C 36
Gray

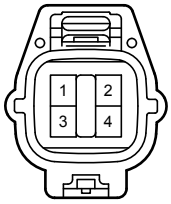

C 37
Gray

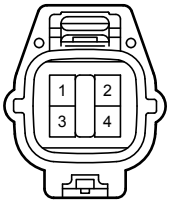

C 38
Blue

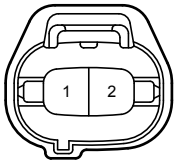

C 39
Black

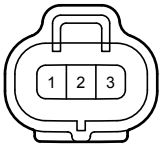

C 40
Black



C 41
Gray

C 42
Black



C 43
Gray

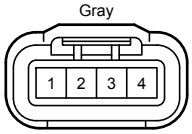

C 44
Black

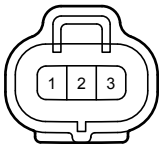

C 45
Black

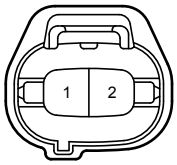

C 46
Black

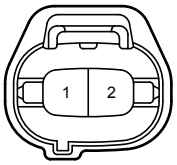

C 49
Gray

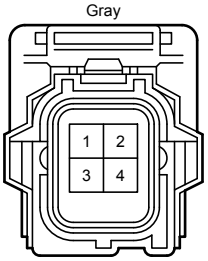

C 50
Black

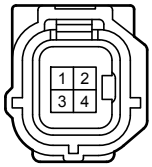

C 68
Black

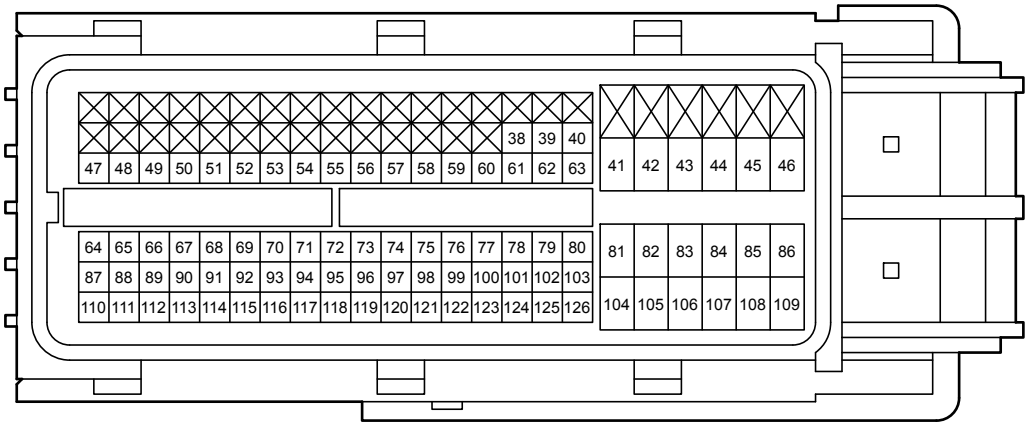

C102
Black

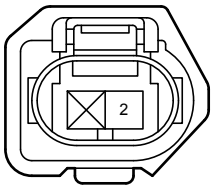

C103
Black

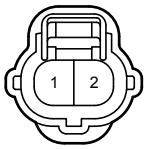

C104
Gray

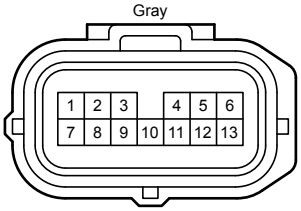

C105
Black

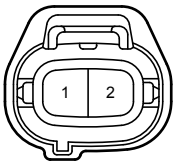

C106
Blue

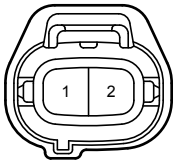

C107
Black

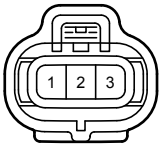

C108
Black

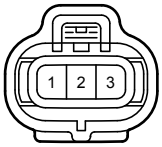

C109
Black

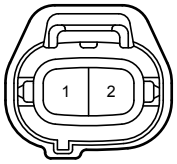

C110
Black

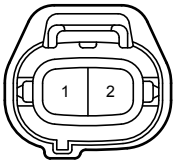

C111
Black

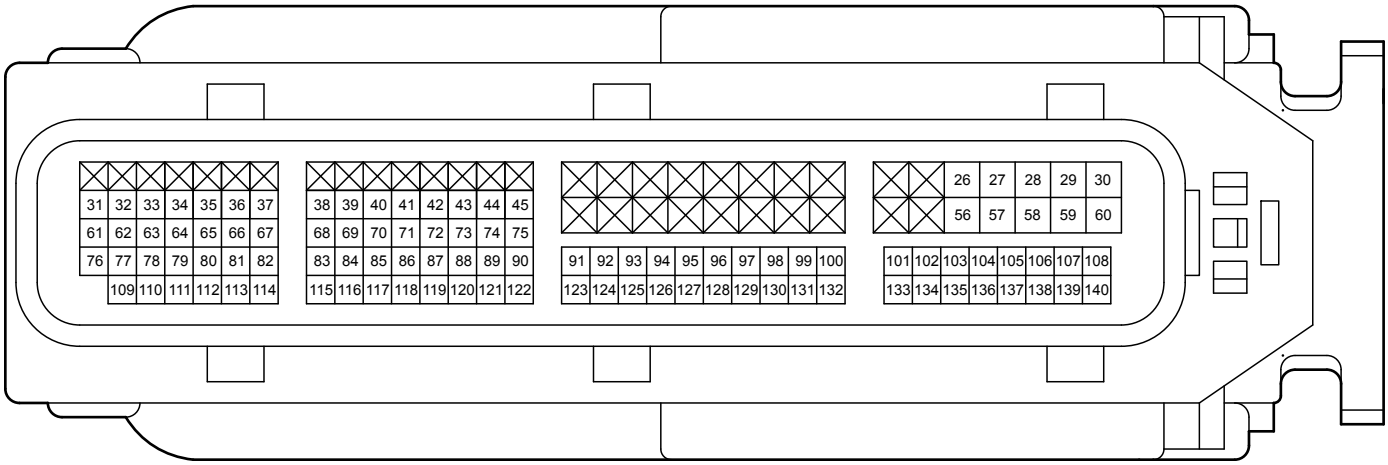

F 1
Black


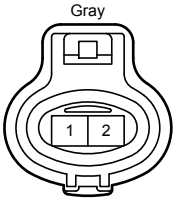
z 20
Gray