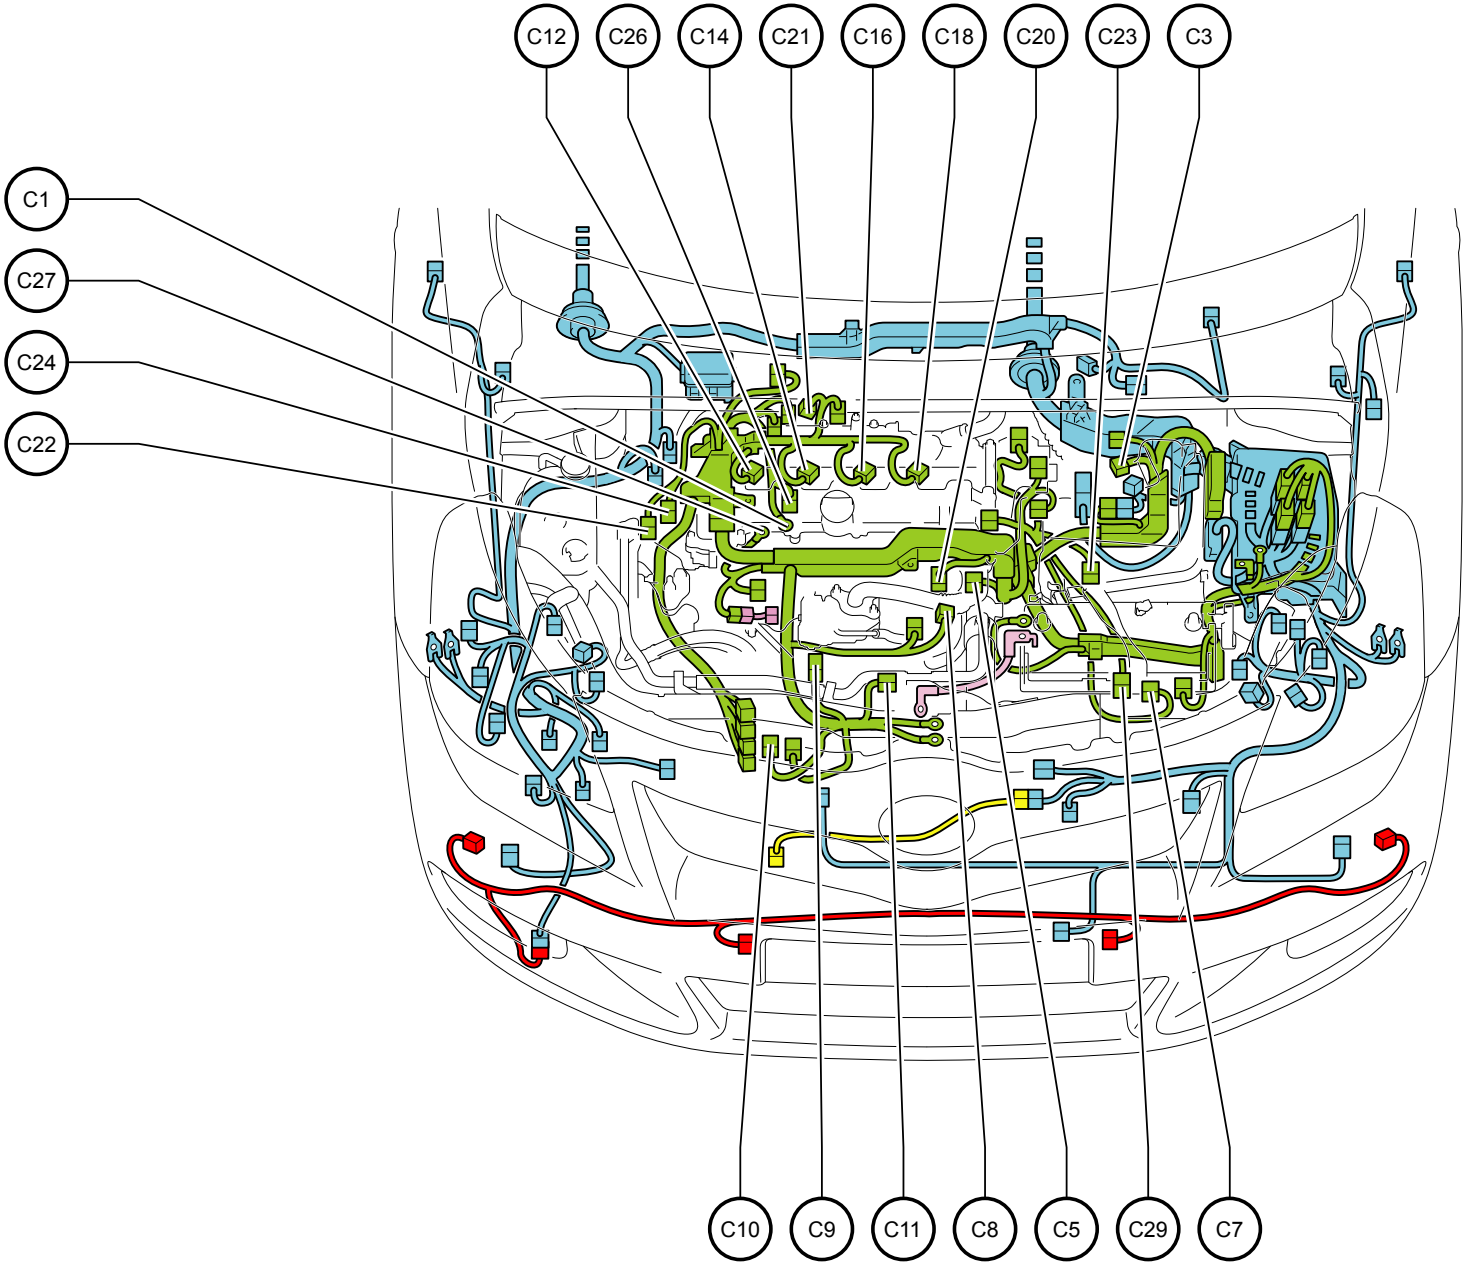
C12
C26
C14
C21
C16
C18
C20
C23
C3
C1
C27
C24
C22
C10
C9
C11
C8
C5
C29
C7

C 1 Generator Assembly
C 3 Mass Air Flow Meter
C 5 E.F.I. Engine Coolant Temperature Sensor
C 7 Back-Up Light Switch Assembly
C 8 Engine Oil Pressure Switch Assembly
C 9 Throttle Body Assembly
C 10 Cooler Compressor Assembly
C 11 Starter Assembly
C 12 Fuel Injector Assembly No. 1
C 14 Fuel Injector Assembly No. 2
C 16 Fuel Injector Assembly No. 3
C 18 Fuel Injector Assembly No. 4
C 20 Pressure Discharge Valve Assembly
C 21 VSV (EGR)
C 22 Cam Position Sensor
C 23 Park/Neutral Position Switch
C 24 Crank Position Sensor
C 26 Generator Assembly
C 27 Glow Plug Assembly
C 29 Transmission Control ECU Assembly

C 1



C 3
Black

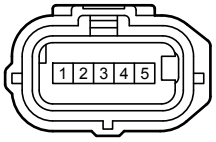

C 5
Gray

C 7
Gray

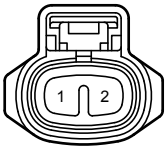

C 8
Gray

C 9
Black

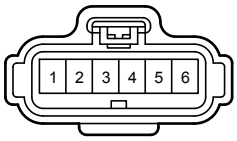

C 10
Black

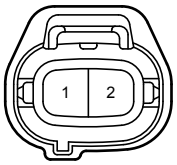

C 11
Black

C 12
Black

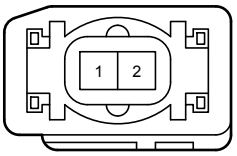

C 14
Gray

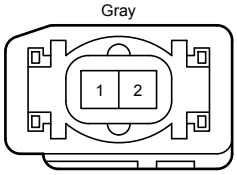

C 16
Black

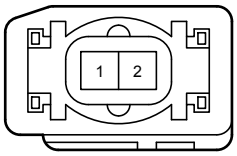

C 18
Gray

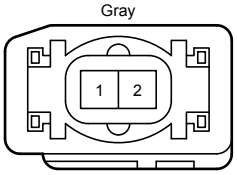

C 20
Gray

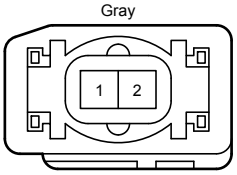

C 21
Black

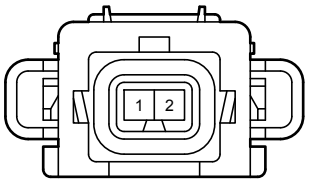

C 22
Black

C 23
Gray

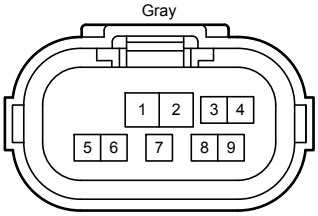

C 24
Gray

C 26
Black

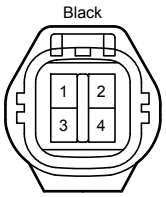

C 27


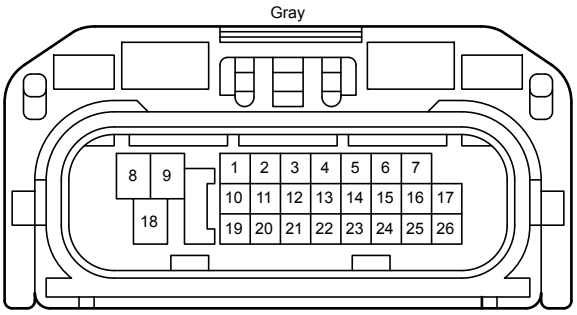
C 29
Gray