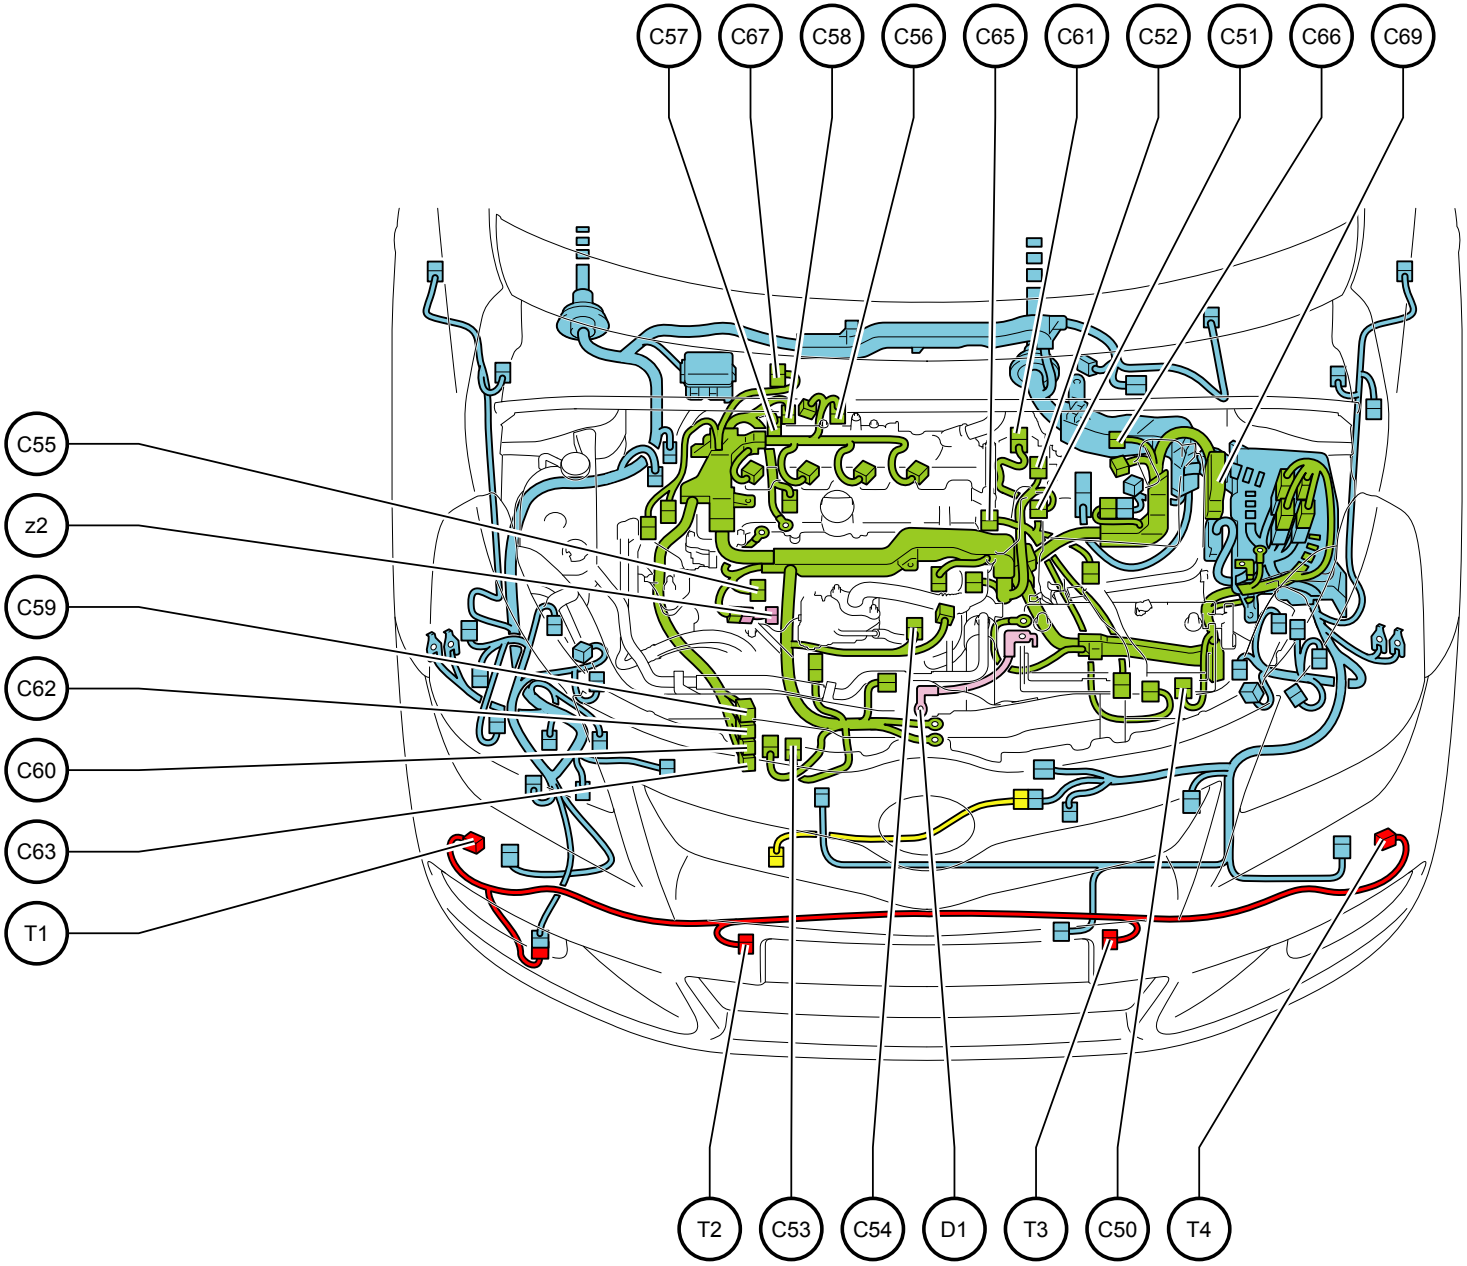
C57
C67
C58
C56
C65
C61
C52
C51
C66
C69
C55
z2
C59
C62
C60
C63
T1
T2
C53
C54
D1
T3
C50
T4

C 50 Battery Current Sensor Assembly
C 51 Fuel Temperature Sensor
C 52 Suction Control Valve
C 53 Engine Oil Level Sensor
C 54 Turbo Pressure Sensor
C 55 Fuel Pressure Sensor
C 56 VRV (EGR)
C 57 No. 2 Exhaust Gas Temperature Sensor
C 58 Exhaust Gas Temperature Sensor
C 59 Injector Driver
C 60 Injector Driver
C 61 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 62 Injector Driver
C 63 Injector Driver
C 65 Exhaust Fuel Addition Injector Assembly
C 66 Fuel Sedimentary Level Warning Switch
C 67 Differential Pressure Sensor
C 69 ECM

D 1 Starter Assembly

T 1 Front No. 1 Ultrasonic Sensor RH
T 2 Front No. 1 Ultrasonic Sensor Center RH
T 3 Front No. 1 Ultrasonic Sensor Center LH
T 4 Front No. 1 Ultrasonic Sensor LH

z 2 Electric EGR Control Valve Assembly

C 50
Black

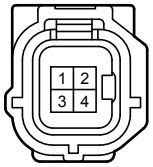

C 51
Gray

C 52
Gray

C 53
Gray

C 54
Black

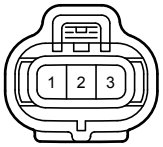

C 55
Black

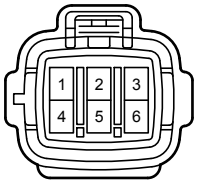

C 56
Black

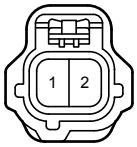

C 57
Dark Gray

C 58
Gray

C 59
Gray

C 60
Gray

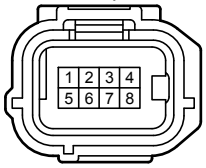

C 61
Gray

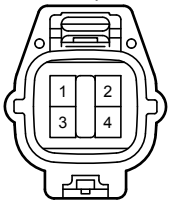

C 62
Black

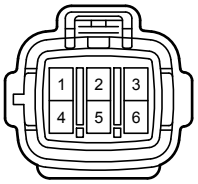

C 63
Black

C 65
Black

C 66
Gray

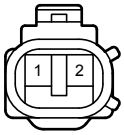

C 67
Black

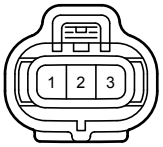

C 69
Black

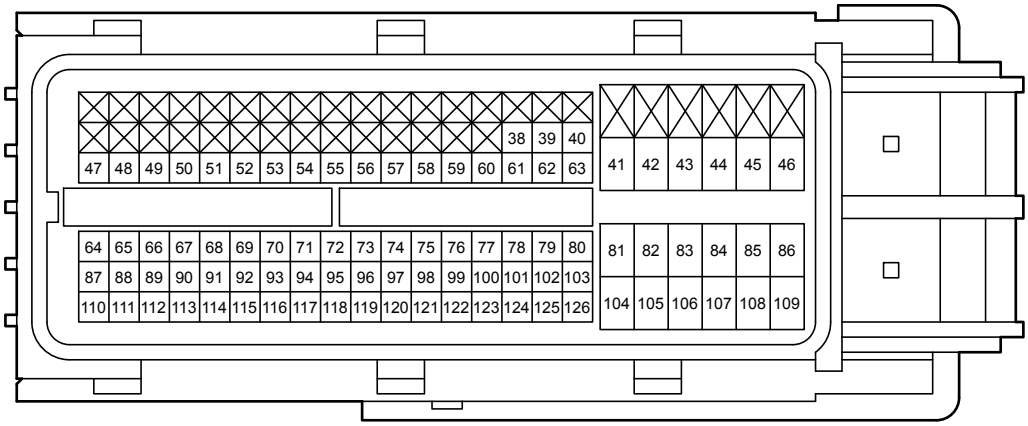

D 1



T 1
Black



T 2
Black



T 3
Black



T 4
Black



z 2
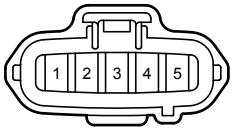
Black