Key Reminder <w/o Entry & Start System>

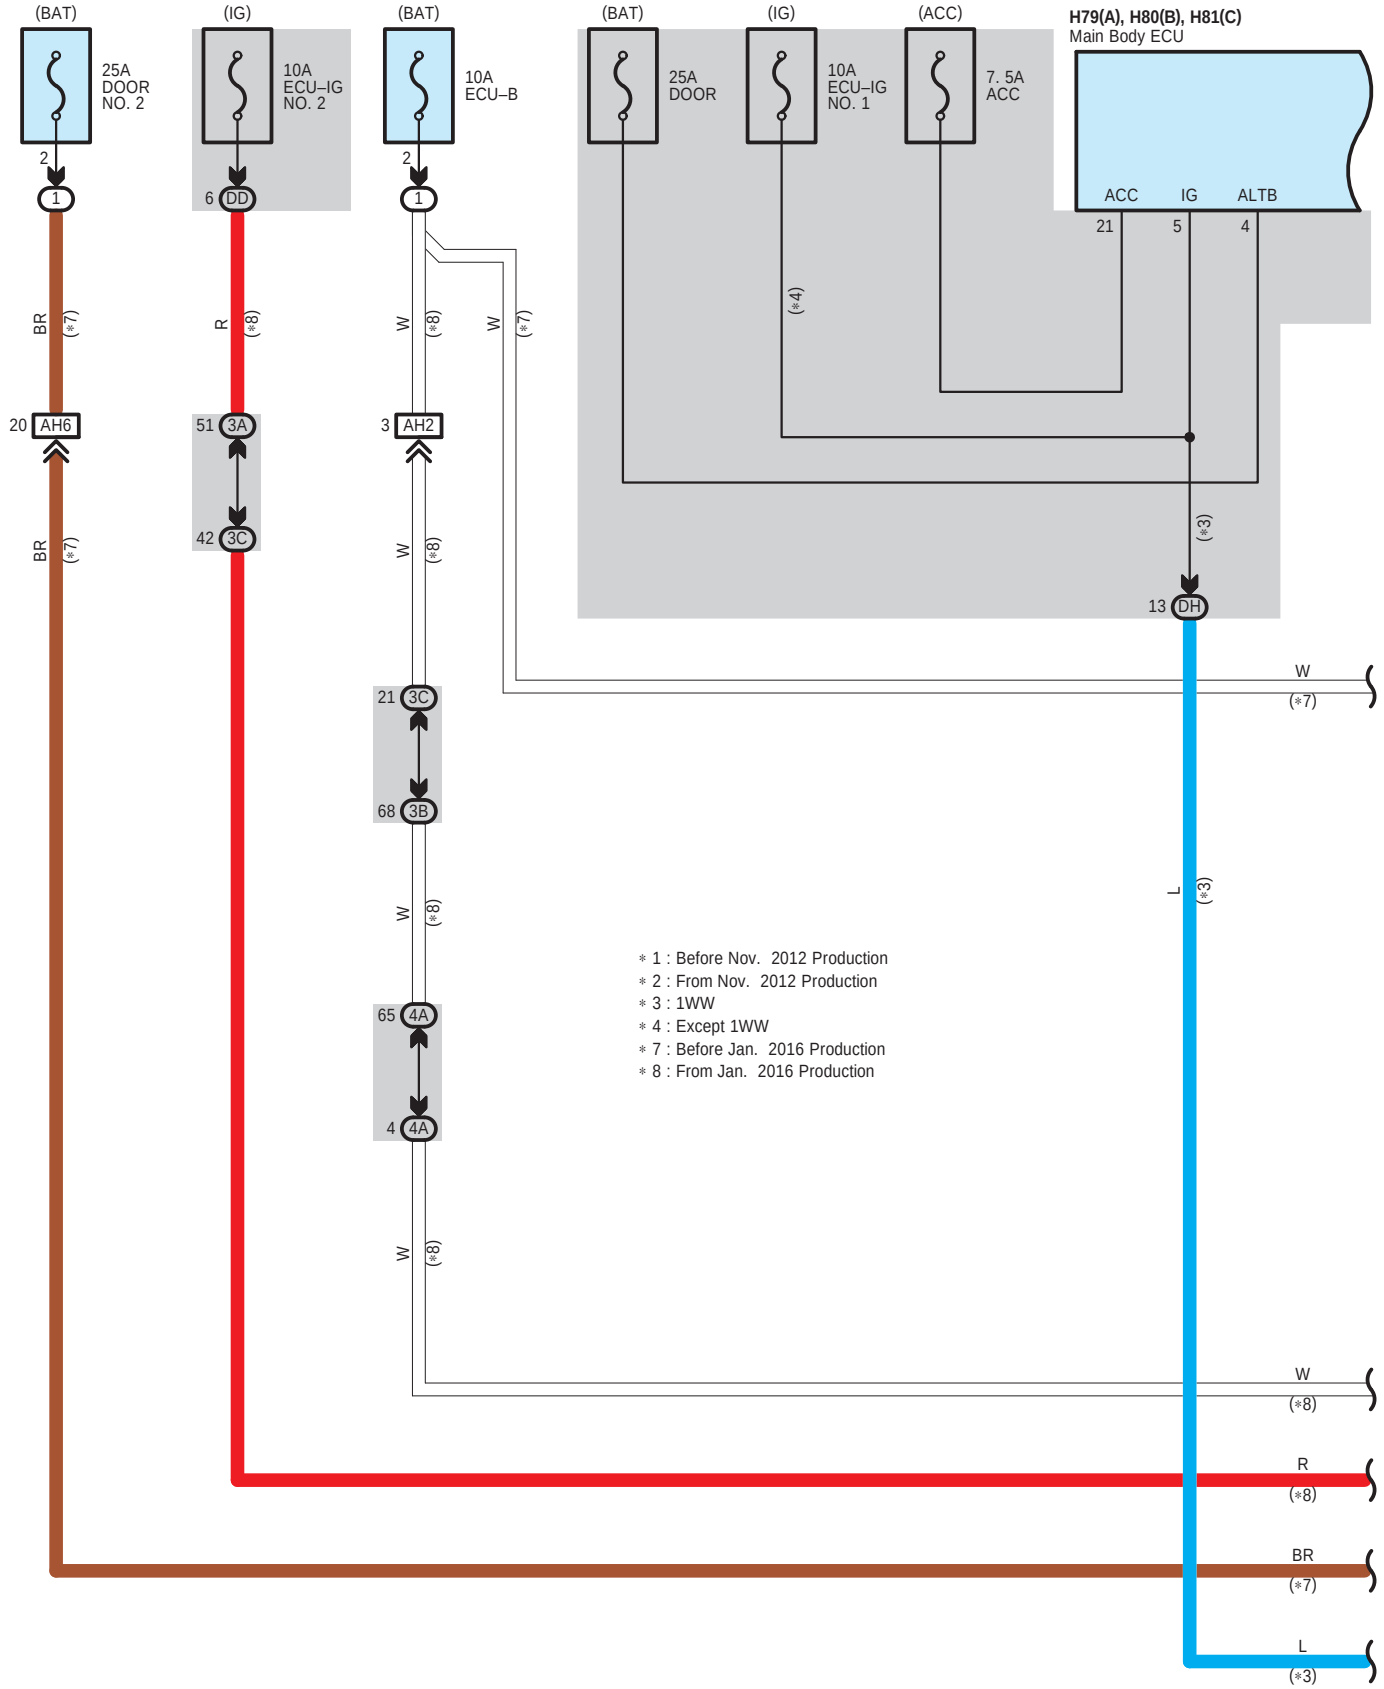

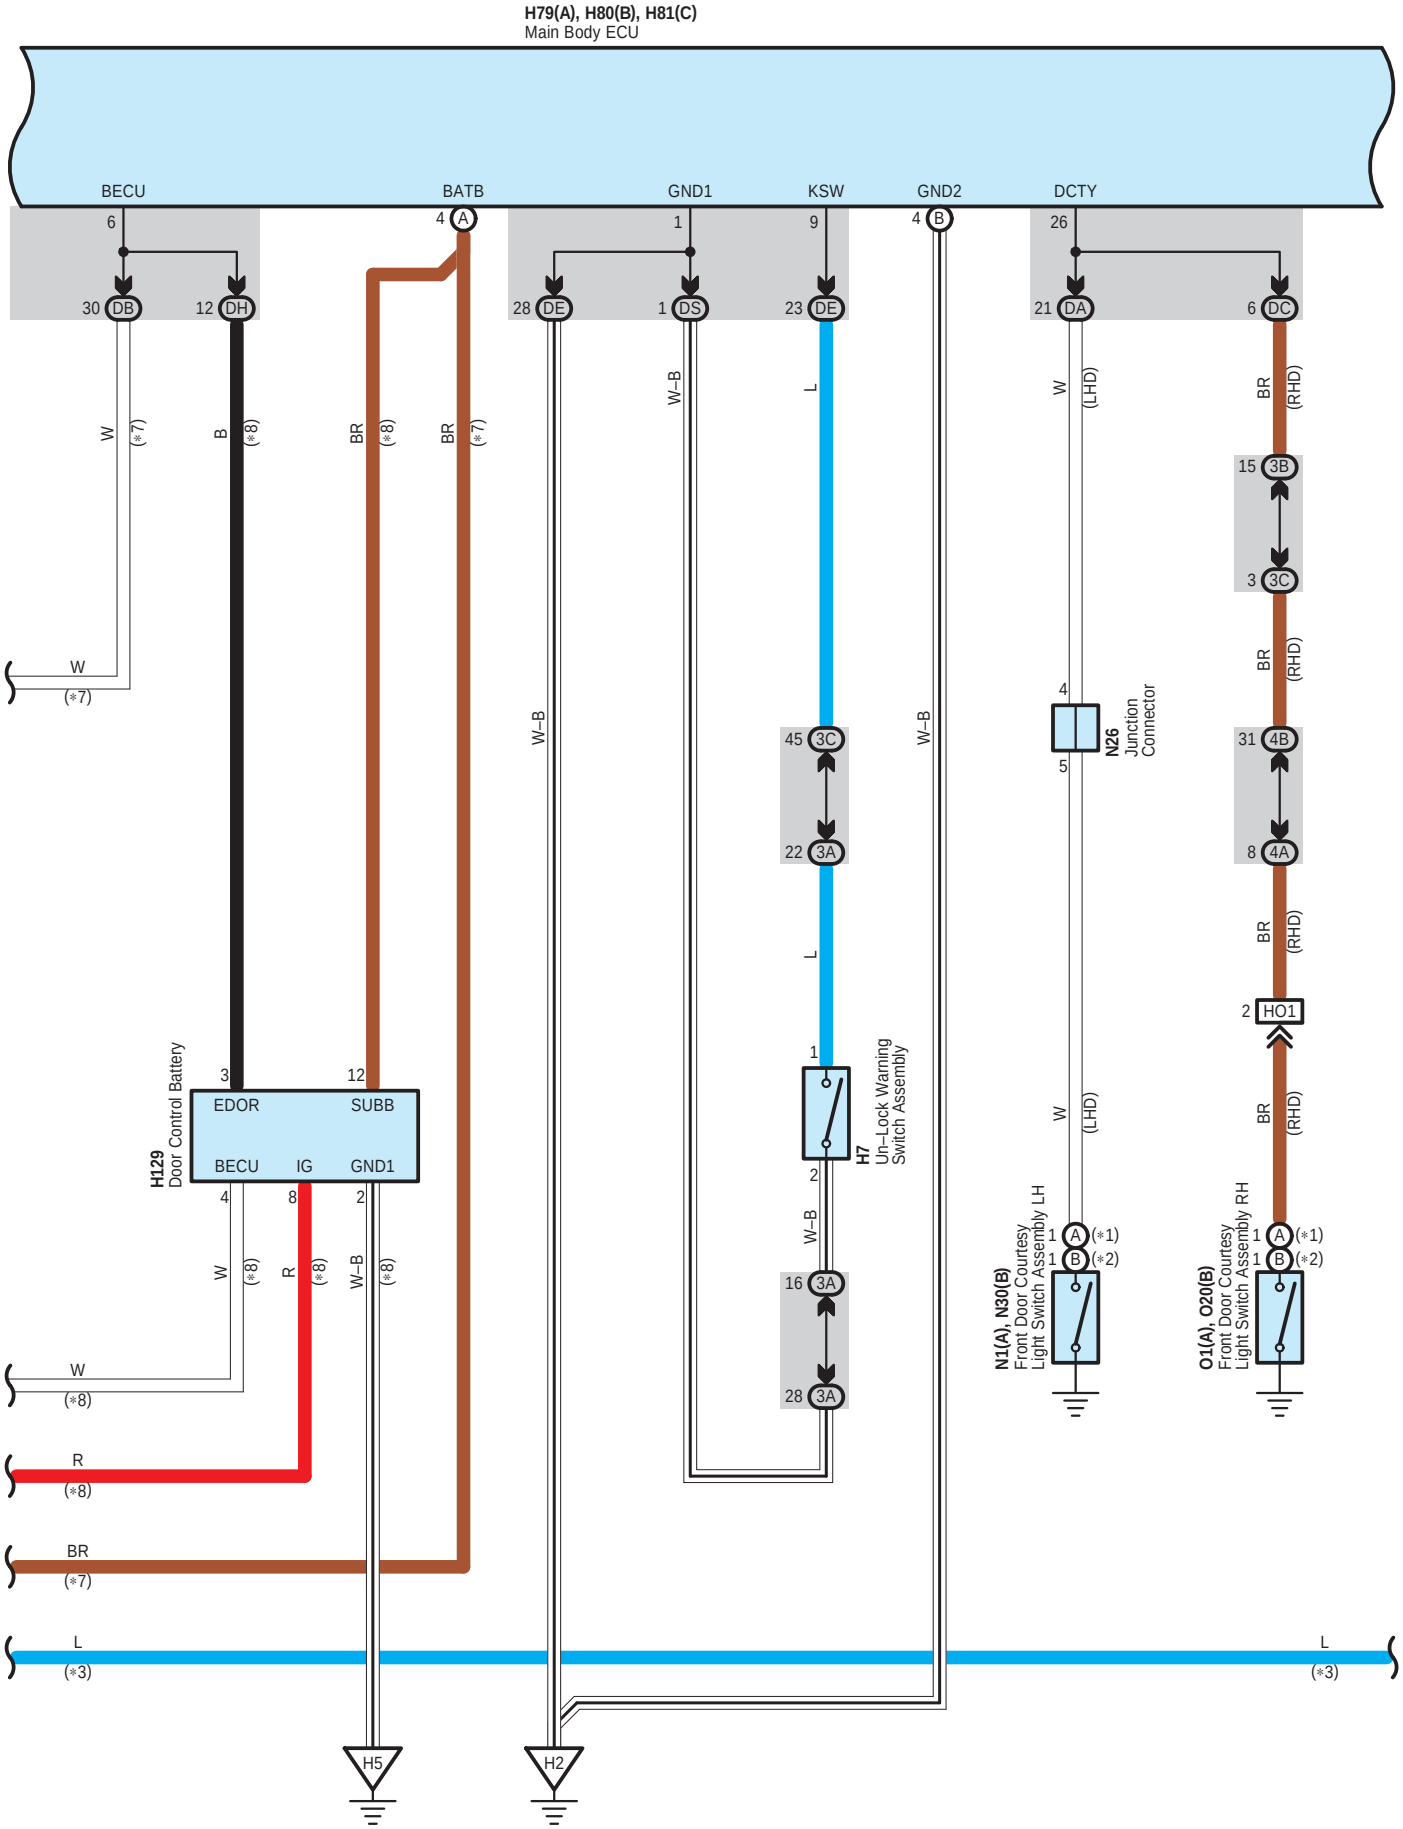
H79(A), H80(B), H81(C)
Main Body ECU
BECU
BATB
GND1
KSW
GND2
DCTY
H129
Door Control Battery
EDOR
SUBB
BECU
IG
GND1
H7
Un–Lock Warning
Switch Assembly
N26
Junction
Connector
N1(A), N30(B)
Front Door Courtesy
Light Switch Assembly LH
O1(A), O20(B)
Front Door Courtesy
Light Switch Assembly RH
H5
H2

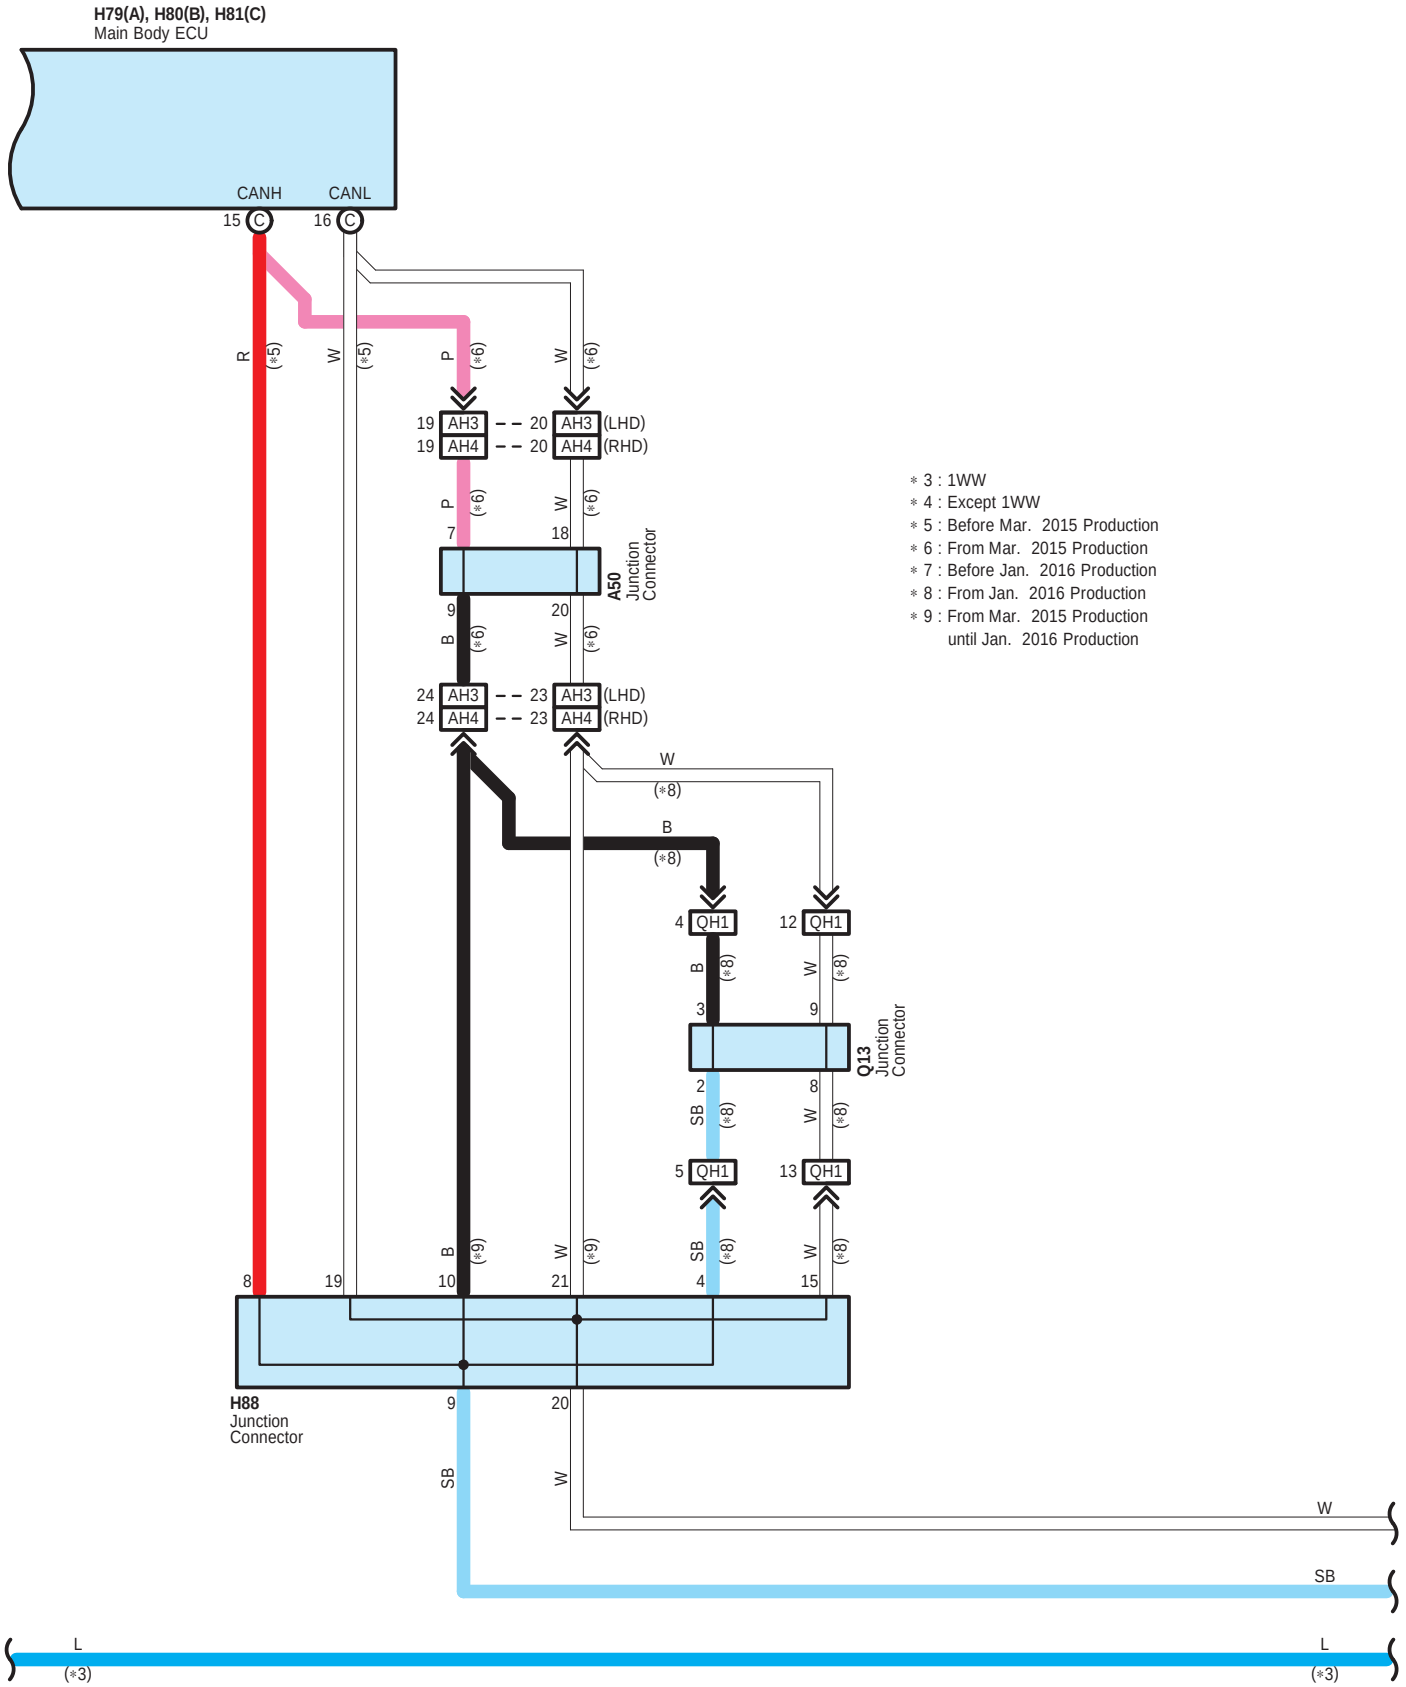

* 3 : 1WW
* 4 : Except 1WW
* 5 : Before Mar. 2015 Production
* 6 : From Mar. 2015 Production
* 7 : Before Jan. 2016 Production
* 8 : From Jan. 2016 Production
* 9 : From Mar. 2015 Production until Jan. 2016 Production

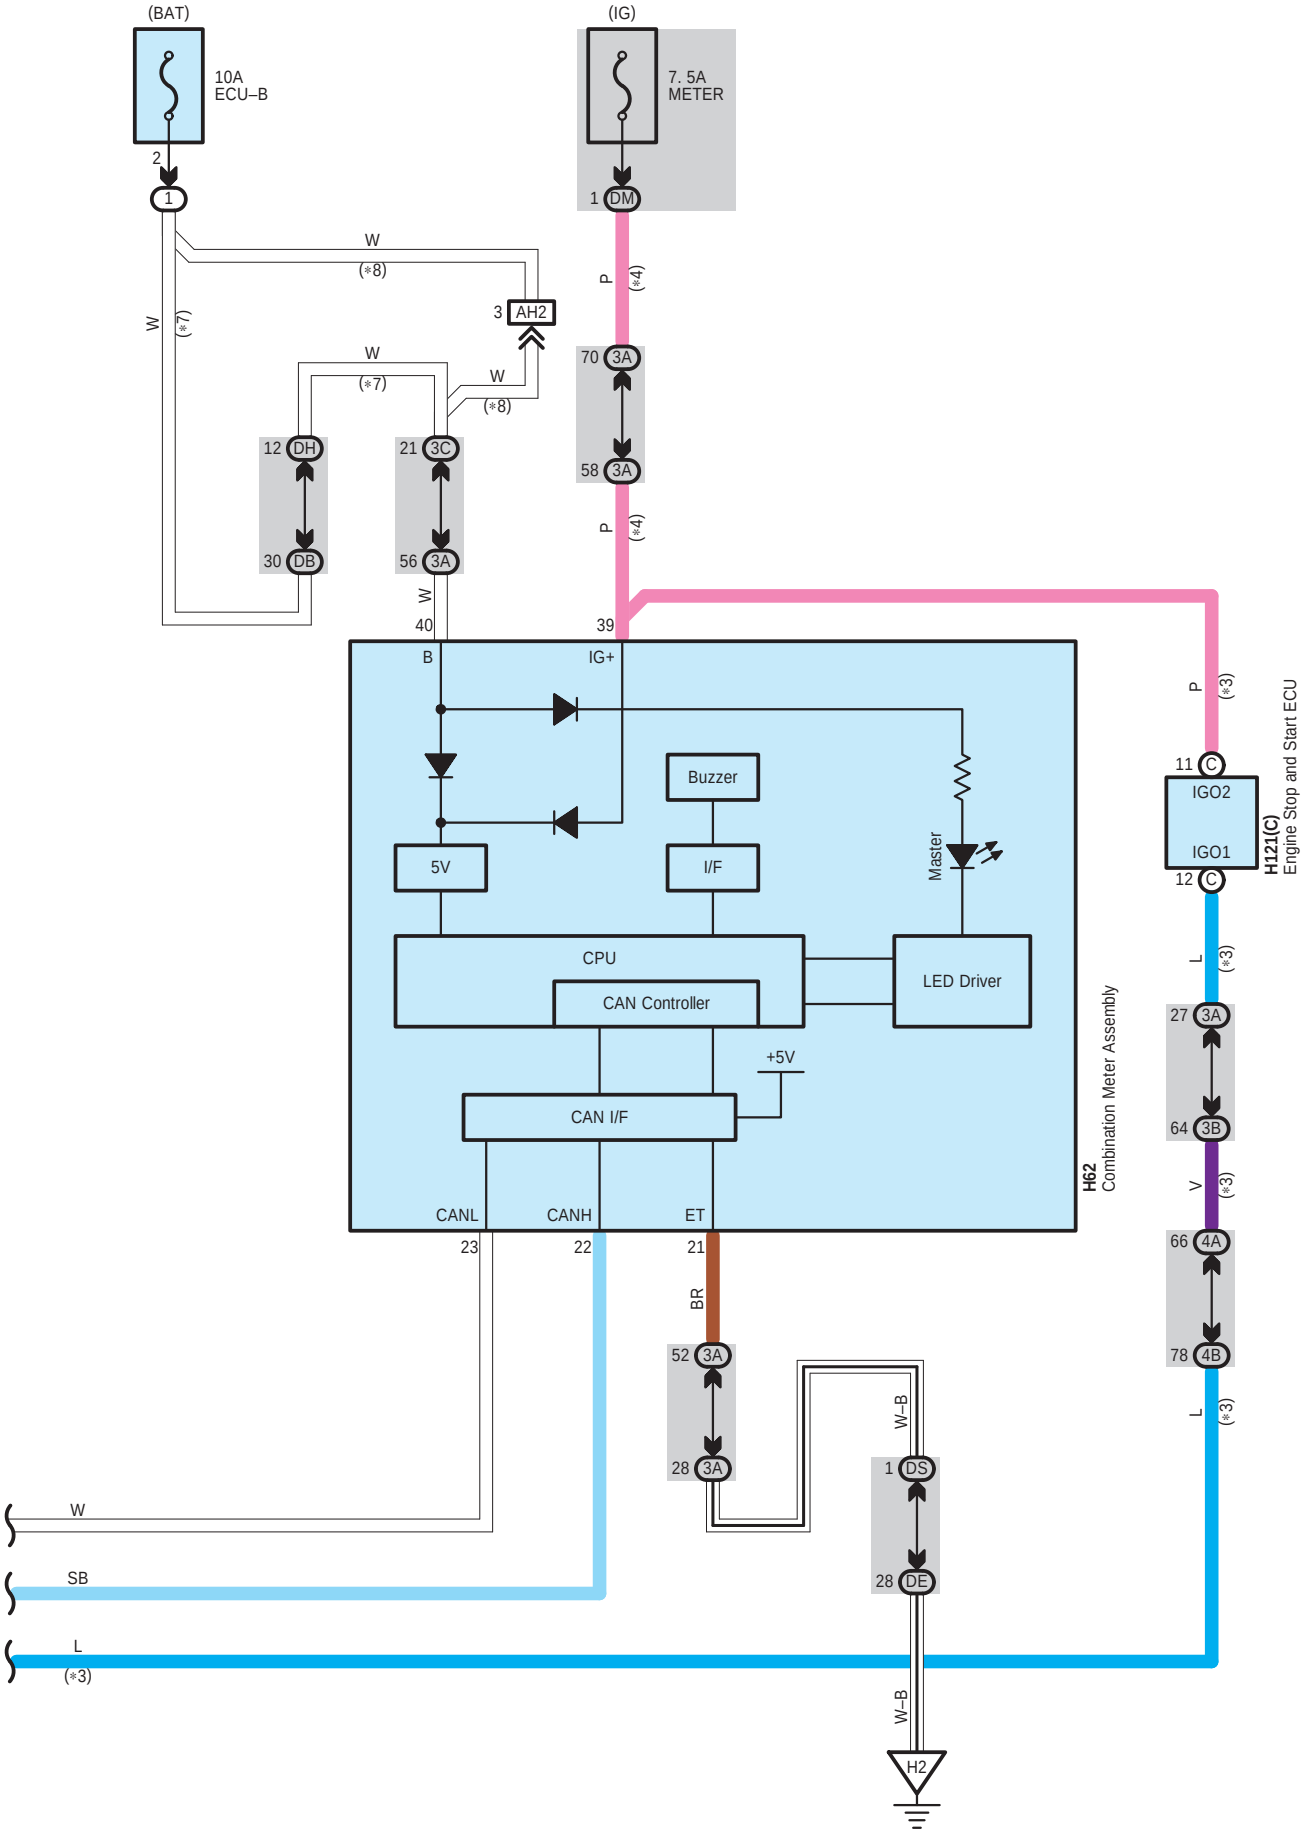
(BAT)
10A
ECU–B
2
1
W
(*8)
W
(*7)
3
AH2
W
(*7)
W
(*8)
12
DH
30
DB
21
3C
56
3A
W
40
(IG)
7. 5A
METER
1
DM
P
(*4)
70
3A
58
3A
P
(*4)
39
B
IG+
Buzzer
5V
I/F
Master
CPU
CAN Controller
LED Driver
+5V
CAN I/F
CANL
CANH
ET
23
22
21
H62
Combination Meter Assembly
P
(*3)
11
C
IGO2
IGO1
12
C
H121(C)
Engine Stop and Start ECU
L
(*3)
27
3A
64
3B
V
(*3)
66
4A
78
4B
L
(*3)
BR
52
3A
28
3A
W–B
1
DS
28
DE
W–B
H2
W
SB
L
(*3)

A 50
White

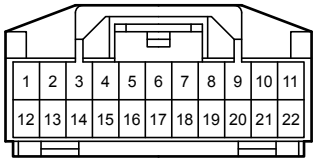

H 7
White

H 62
Black

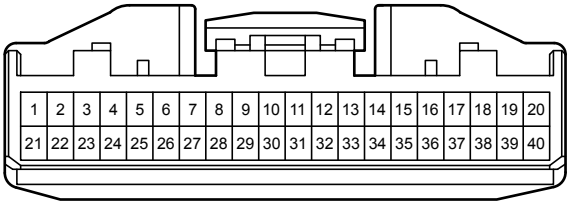

H 79
White

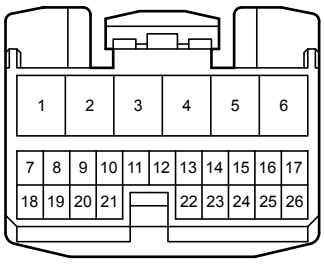

H 80
White

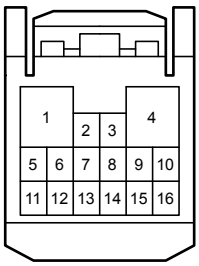

H 81
White

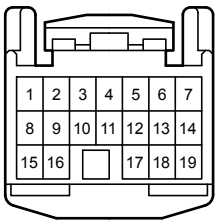

H 88
White

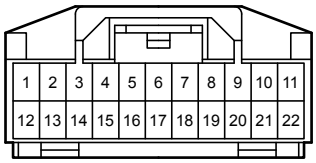

H121
Black

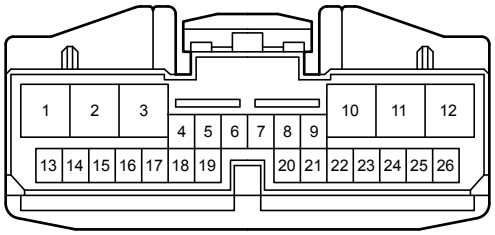

H129
Gray

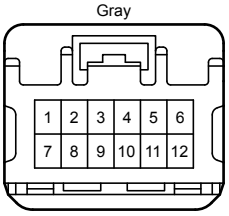

N 1
Gray

N 26
White

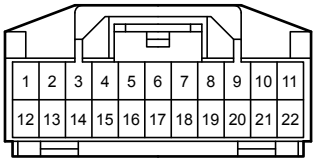

N 30
Black

O 1
Gray

O 20
Black

Q 13
White

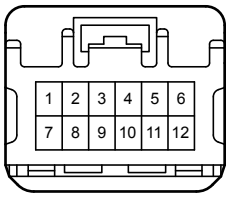

3A
White

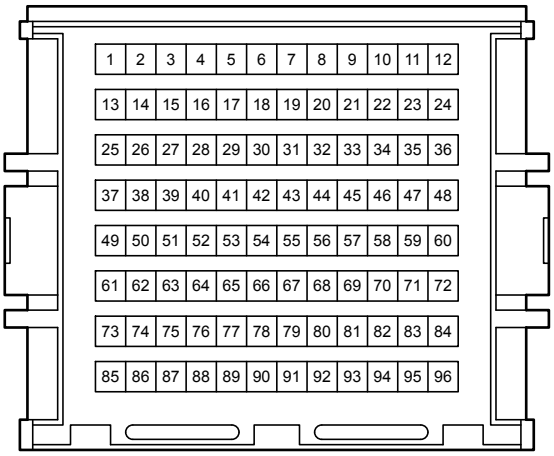

3B
White

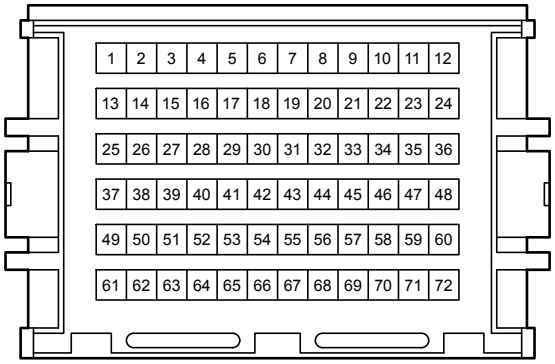

3C
White

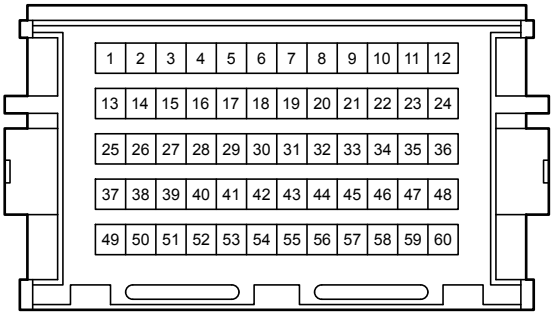

4A
White

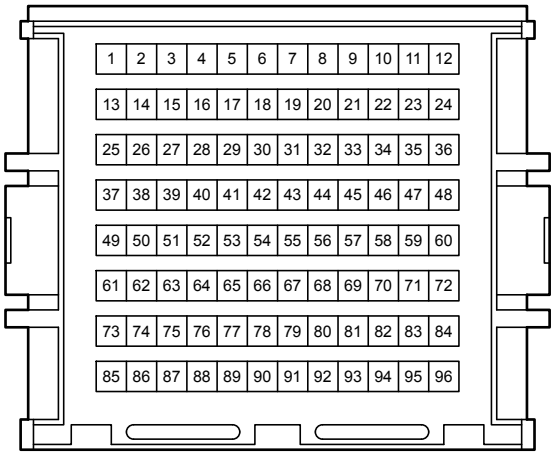

4B
White

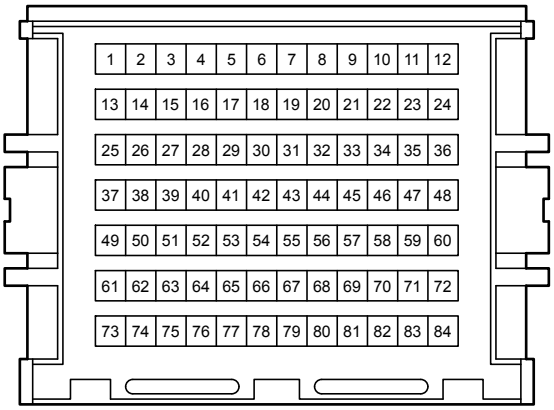

DA
White

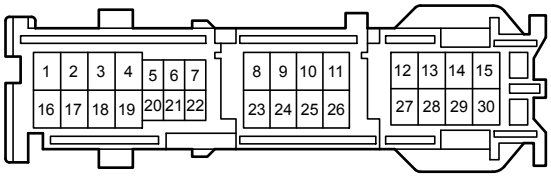

DB
White

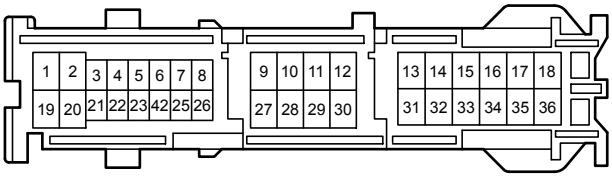

DC
White

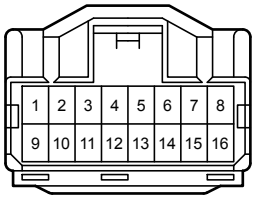

DD
White

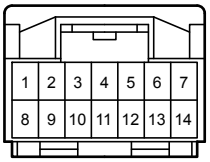

DE
White

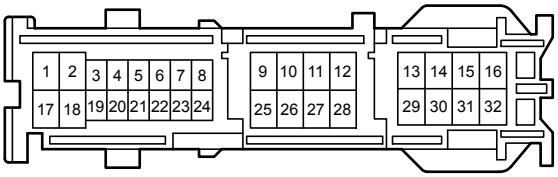

DH
White

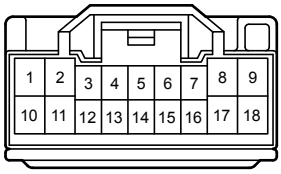

DM
White

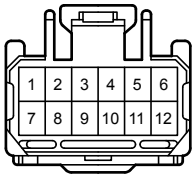

DS
White

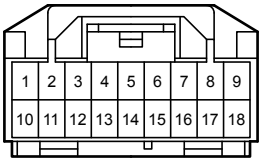

AH2
Gray

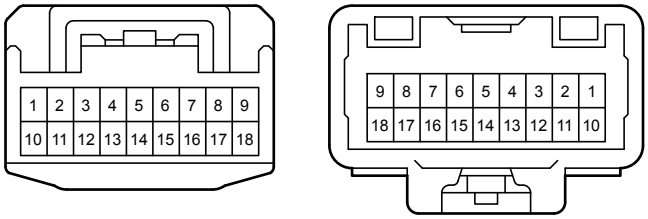

AH3
White

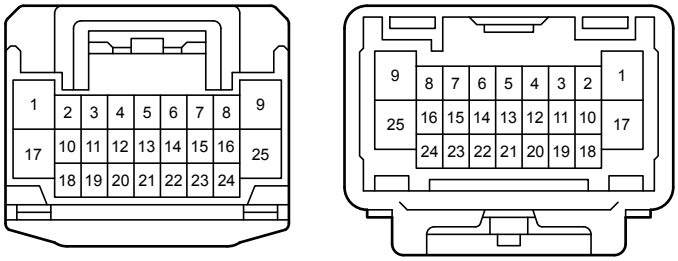

AH4
Gray

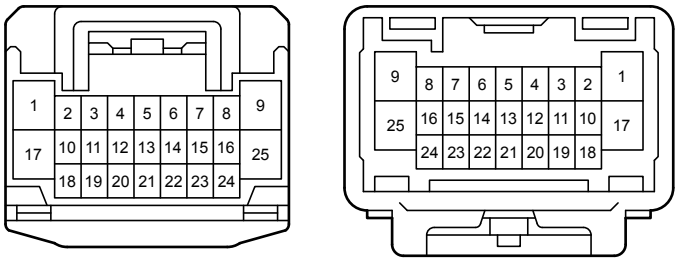

AH6
White

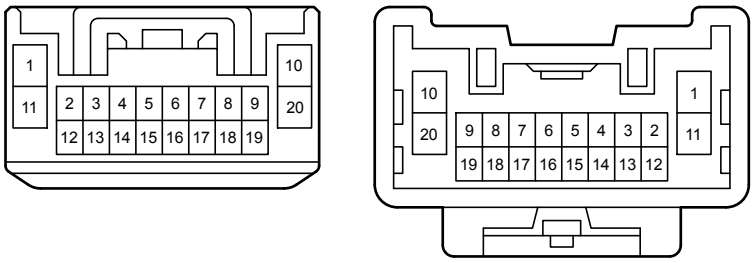

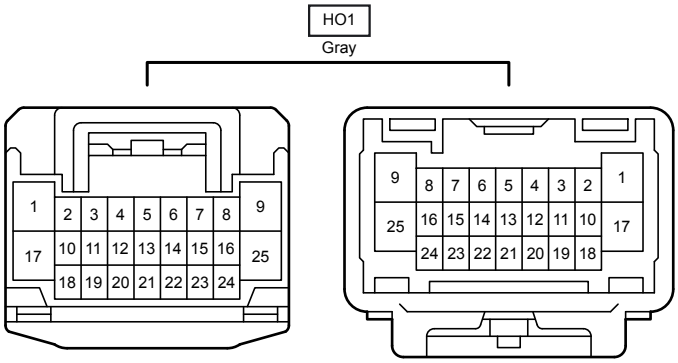
HO1
Gray
1
2
3
4
5
6
7
8
9
17
10
11
12
13
14
15
16
25
18
19
20
21
22
23
24

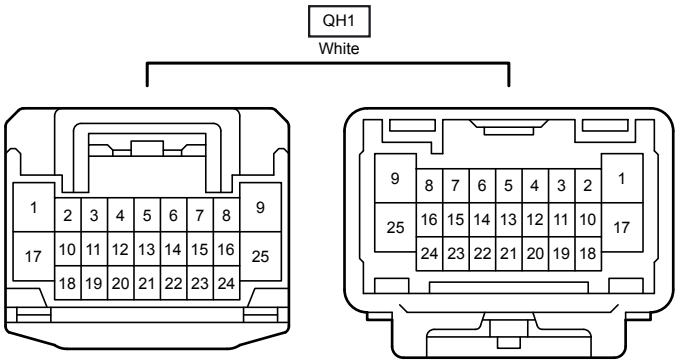
QH1
White
1
2
3
4
5
6
7
8
9
17
10
11
12
13
14
15
16
25
18
19
20
21
22
23
24