4 YARIS (TMC Made)

(Cont. next page)

Stop & Start System

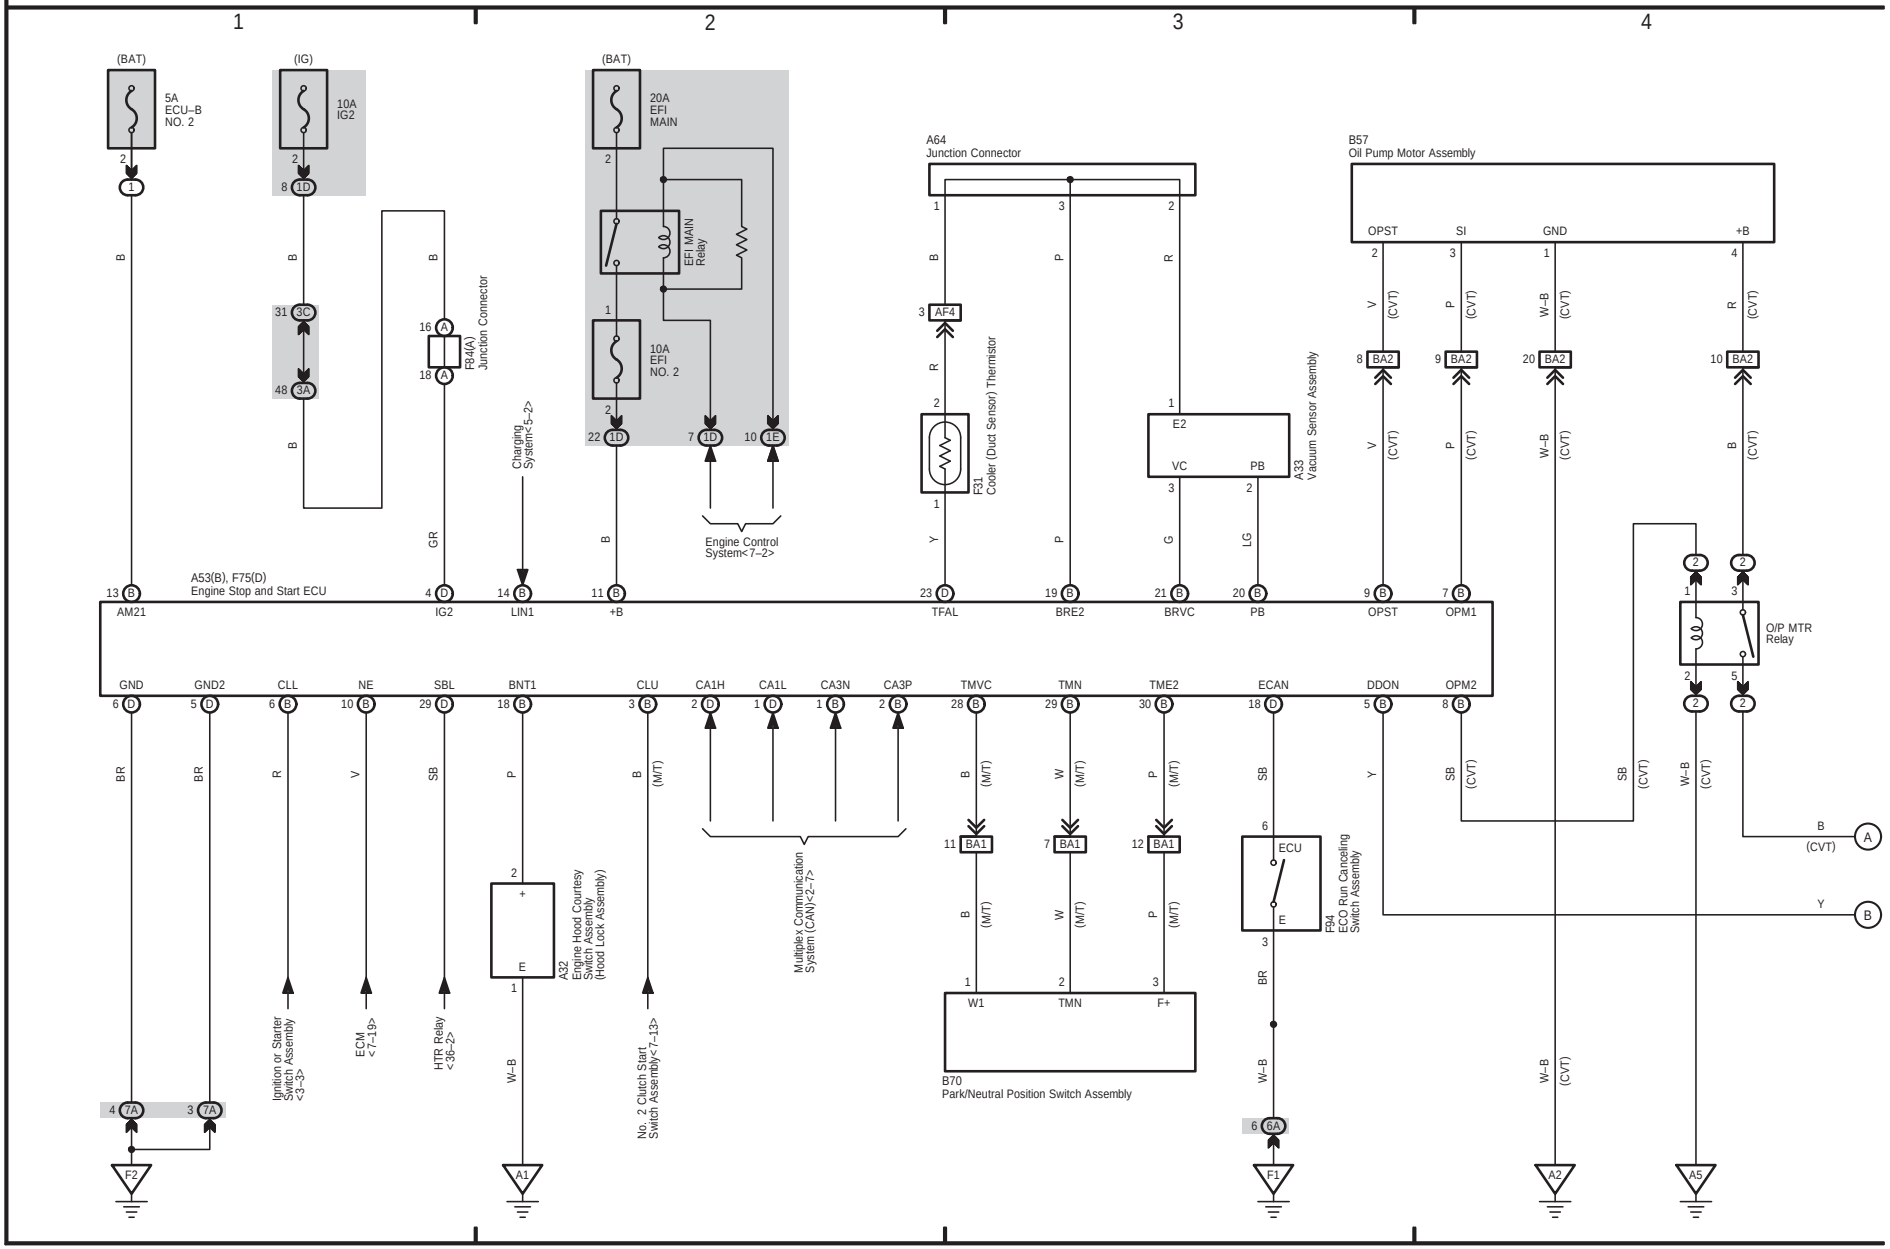

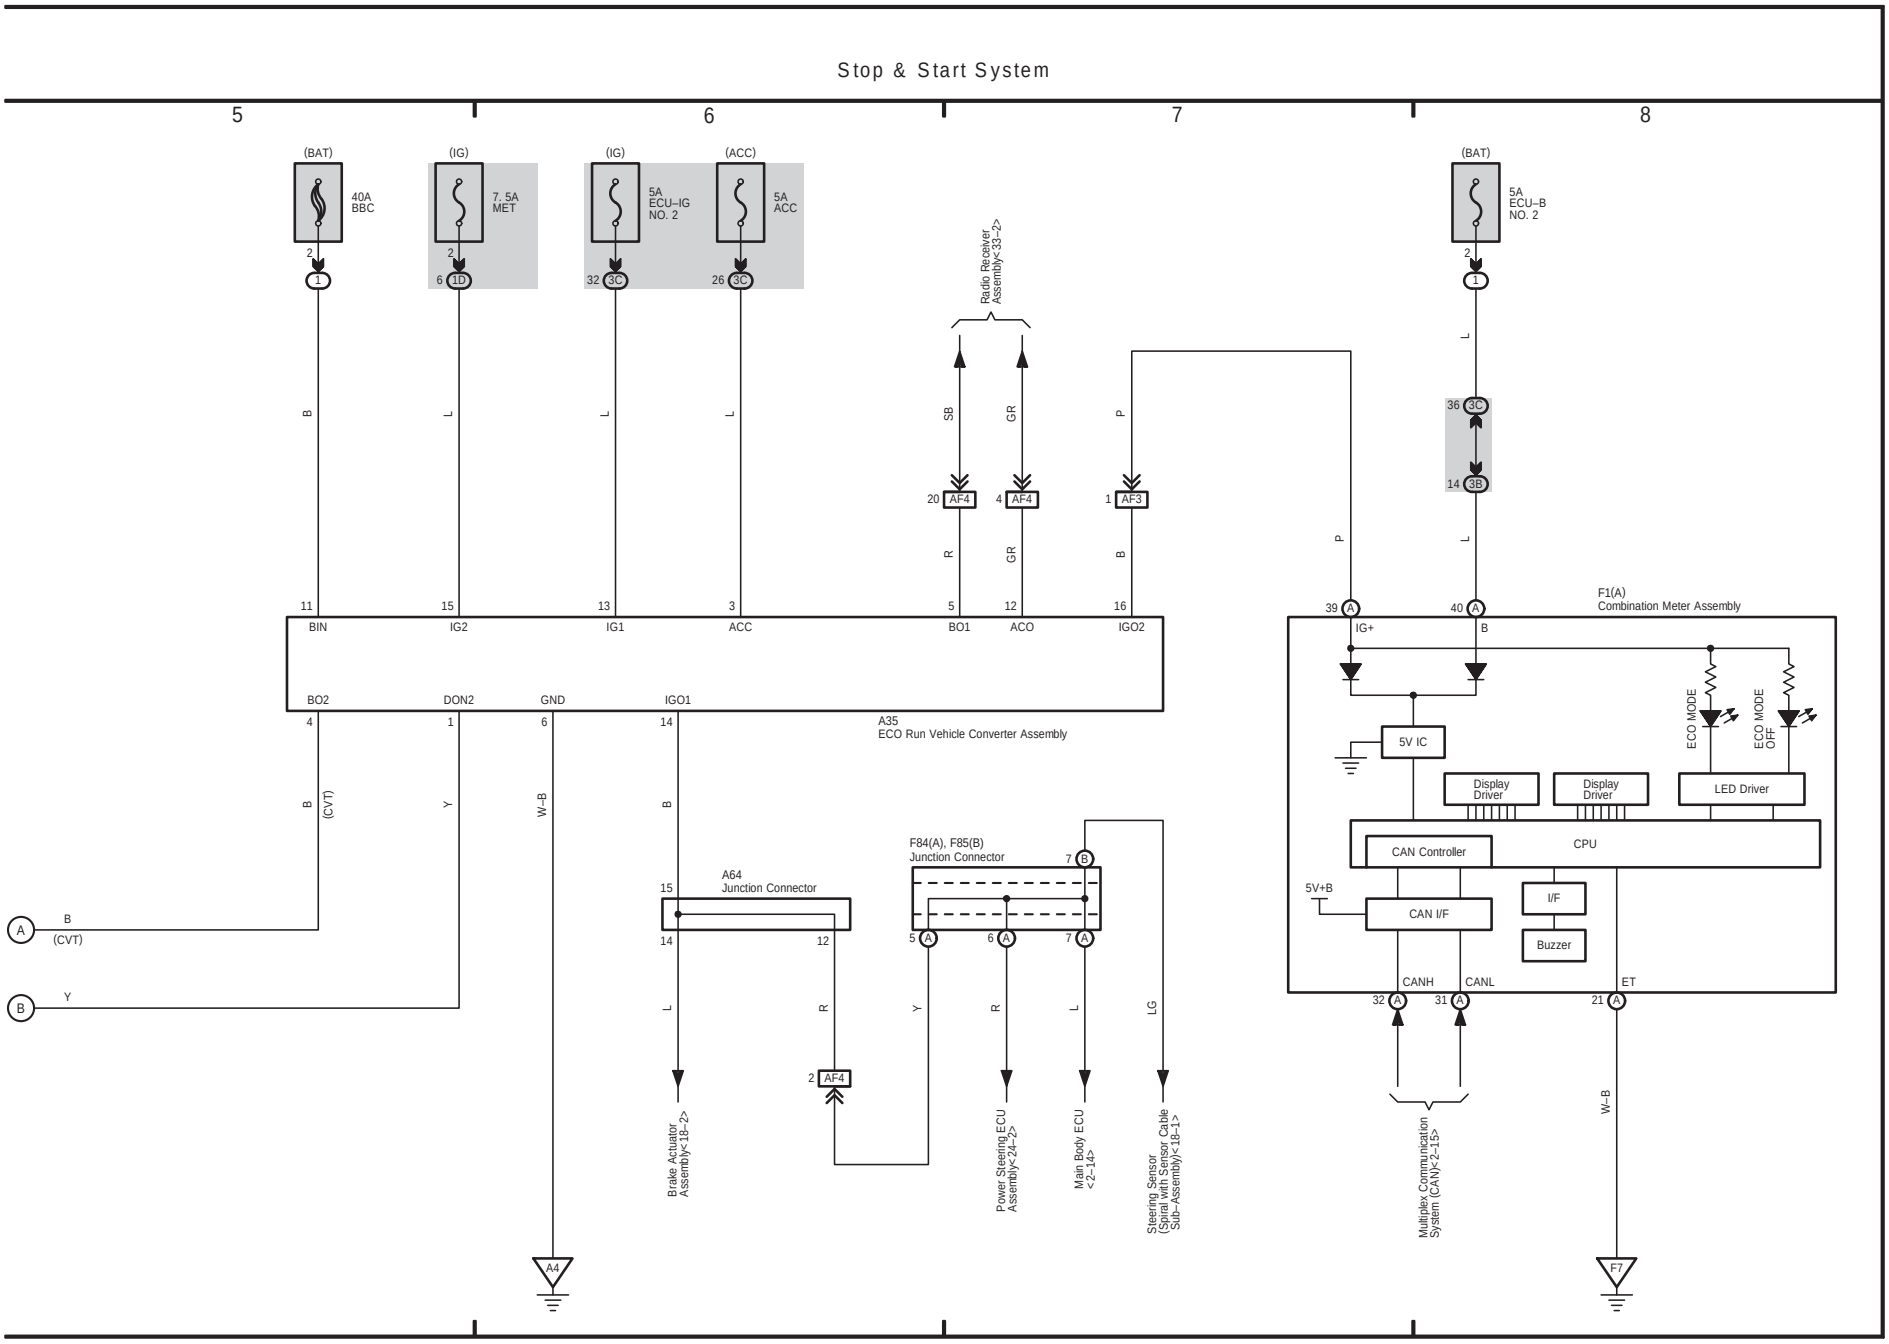
Stop & Start System
5
6
7
8
(BAT)
40A
BBC
(IG)
7. 5A
MET
(IG)
5A
ECU–IG
NO. 2
(ACC)
5A
ACC
(BAT)
5A
ECU–B
NO. 2
Radio Receiver
Assembly<33–2>
AF4
AF4
AF3
BIN
IG2
IG1
ACC
BO1
ACO
IGO2
BO2
DON2
GND
IGO1
A35
ECO Run Vehicle Converter Assembly
F1(A)
Combination Meter Assembly
IG+
B
ECO MODE
ECO MODE
OFF
5V IC
Display
Driver
Display
Driver
LED Driver
CAN Controller
CPU
5V+B
CAN I/F
I/F
Buzzer
CANH
CANL
ET
A64
Junction Connector
F84(A), F85(B)
Junction Connector
AF4
Brake Actuator
Assembly<18–2>
Power Steering ECU
Assembly<24–2>
Main Body ECU
<2–14>
Steering Sensor
(Spiral With Sensor Cable
Sub–Assembly)<18–1>
Multiplex Communication
System (CAN)<2–15>
A4
F7