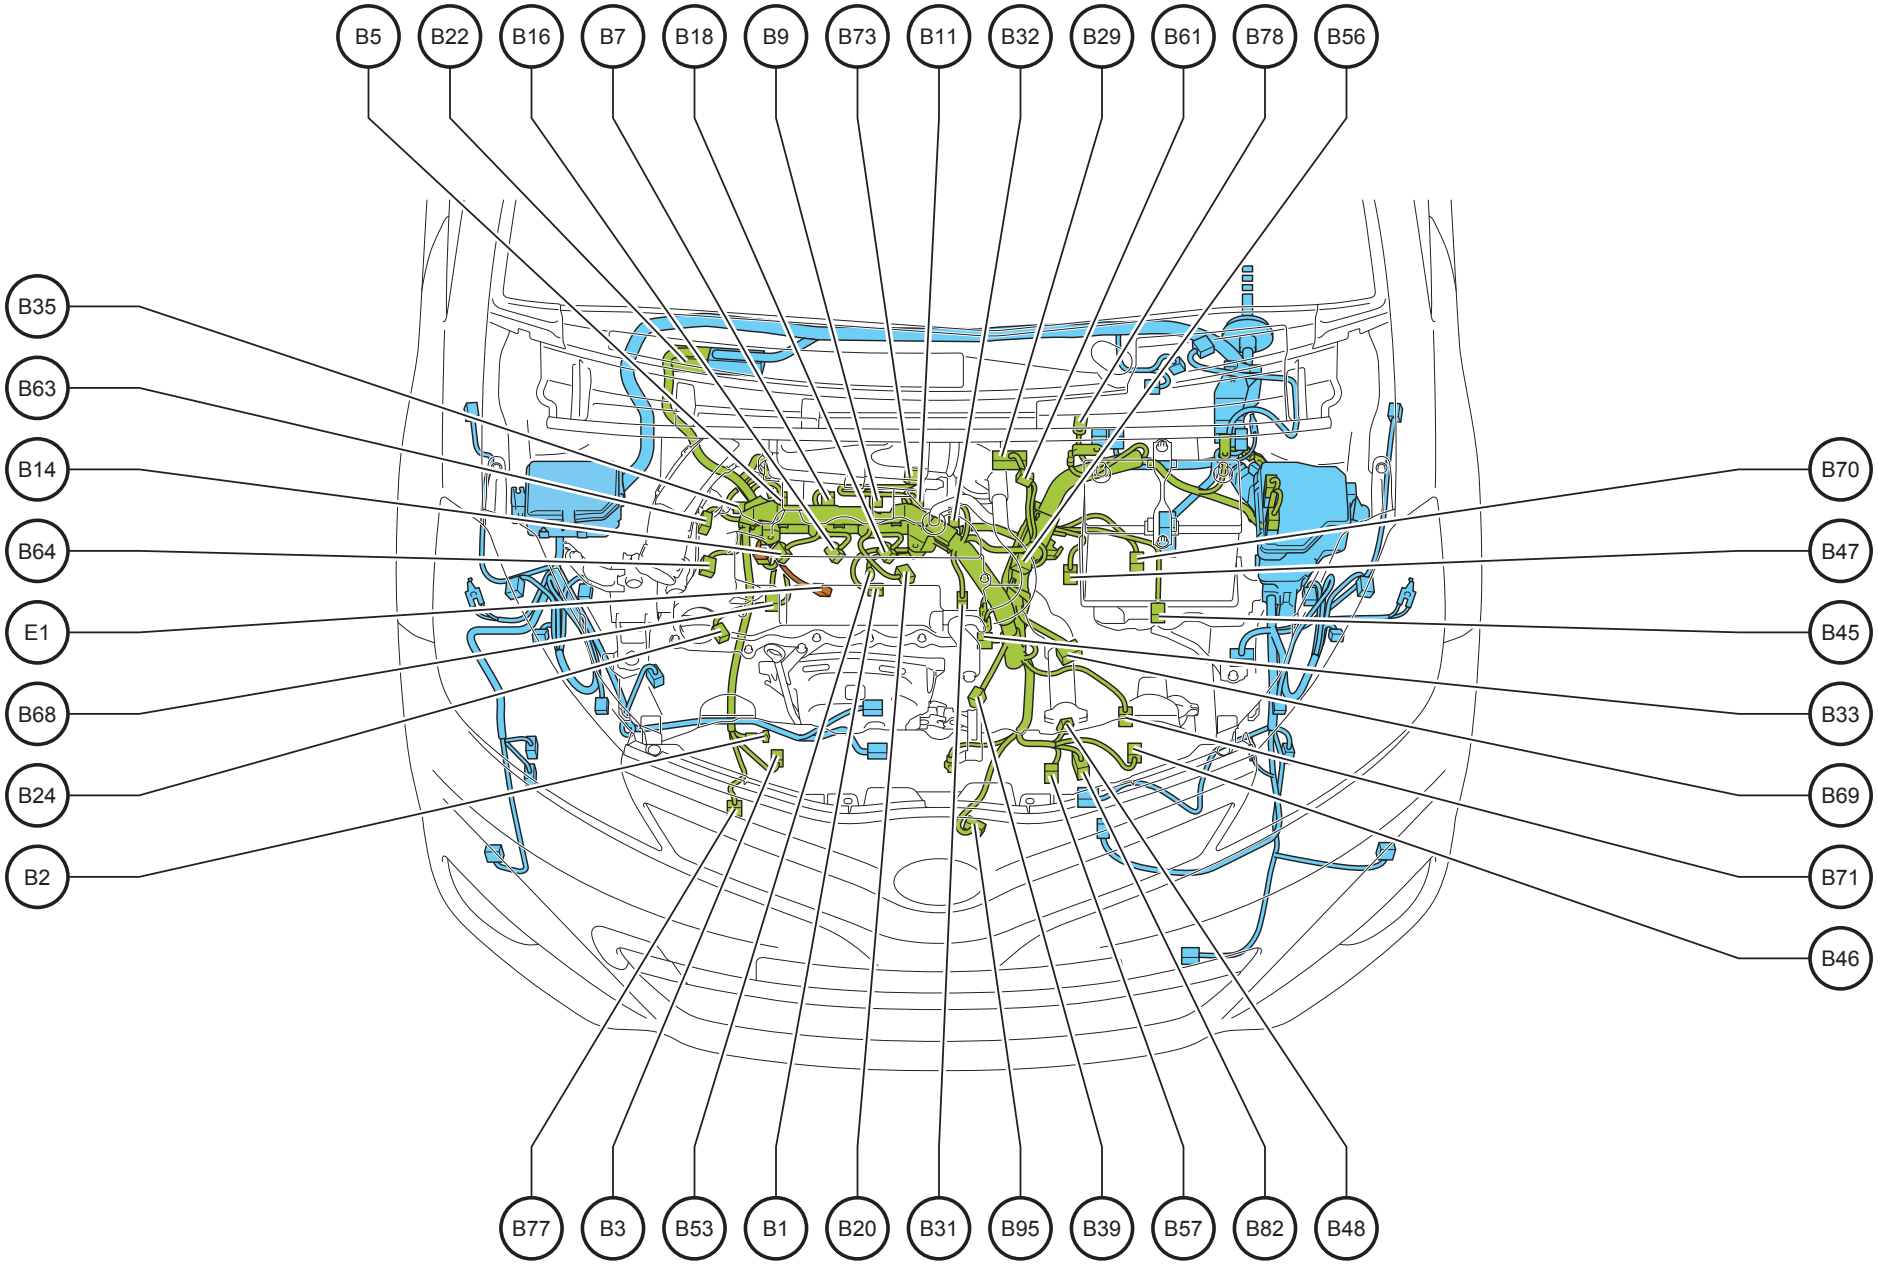
B5
B22
B16
B7
B18
B9
B73
B11
B32
B29
B61
B78
B56
B35
B63
B14
B64
E1
B68
B24
B2
B70
B47
B45
B33
B69
B71
B46
B77
B3
B53
B1
B20
B31
B95
B39
B57
B82
B48

B	1	Starter Assembly
B	2	Generator Assembly
B	3	Generator Assembly
B	5	Fuel Injector Assembly No. 1
B	7	Fuel Injector Assembly No. 2
B	9	Fuel Injector Assembly No. 3
B	11	Fuel Injector Assembly No. 4
B	14	Ignition Coil No. 1
B	16	Ignition Coil No. 2
B	18	Ignition Coil No. 3
B	20	Ignition Coil No. 4
B	22	ECM
B	24	No. 1 Crank Position Sensor
B	29	Throttle with Motor Body Assembly
B	31	VVT Sensor (Bank 1 Exhaust Side)
B	32	VVT Sensor (Bank 1 Intake Side)
B	33	E.F.I. Engine Coolant Temperature Sensor
B	35	E.F.I. Vacuum Sensor Assembly
B	39	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B	45	Oil Pressure Sensor
B	46	Transmission Revolution Sensor (Primary)
B	47	Transmission Revolution Sensor (Secondary)
B	48	Transmission Revolution Sensor (Turbine)
B	53	Starter Assembly
B	56	EGR Valve Assembly
B	57	Oil Pump Motor Assembly
B	61	Purge VSV
B	63	Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
B	64	Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
B	68	Engine Oil Pressure Switch Assembly
B	69	Park/Neutral Position Switch Assembly
B	70	Park/Neutral Position Switch Assembly
B	71	Back-Up Light Switch Assembly
B	73	Intake Mass Air Flow Meter Sub-Assembly
B	77	With Pulley Compressor Assembly
B	78	Fusible Link Block Assembly
B	82	CVT Solenoid
B	95	Oxygen Sensor (Bank 1 Sensor 2)
E	1	Knock Control Sensor (Bank 1)

B 1
Black

B 2



B 3
Black

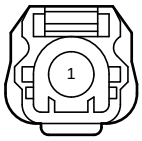

B 5
Black



B 7
Gray

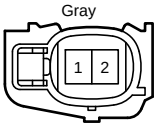

B 9
Black



B 11
Gray

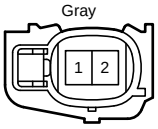

B 14
Black



B 16
Gray

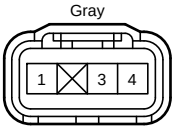

B 18
Black



B 20
Gray

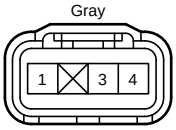

B 22
Black

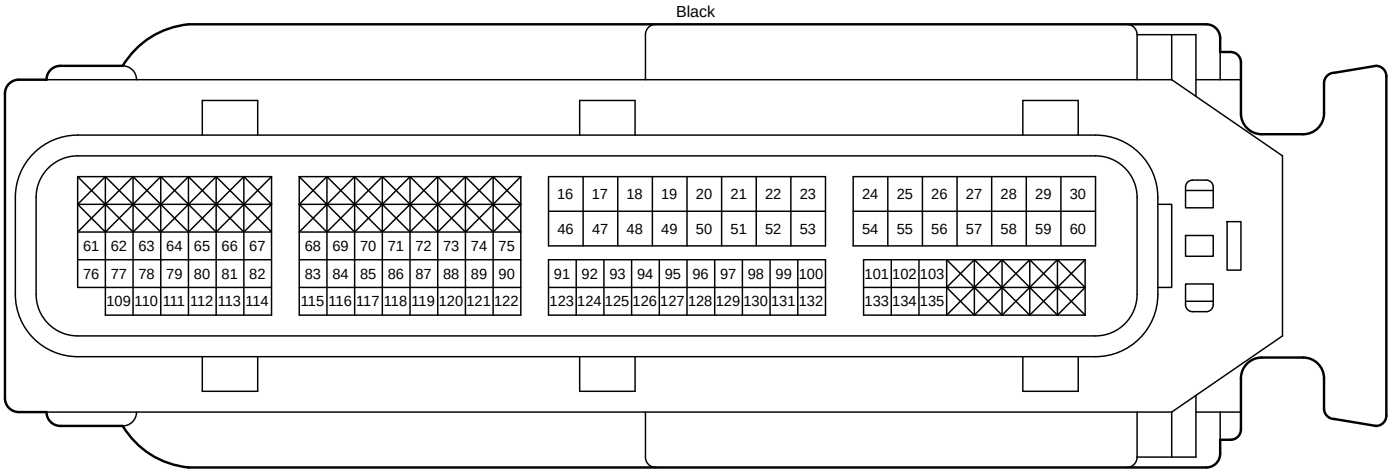

B 24
Black

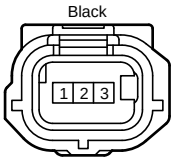

B 29
Black

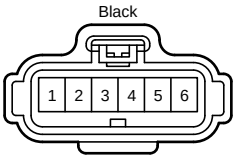

B 31
Gray

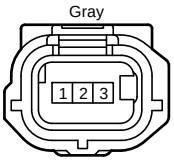

B 32
Black

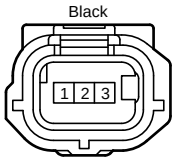

B 33
Black

B 35
Black

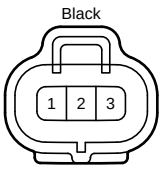

B 39
Gray

B 45
Black

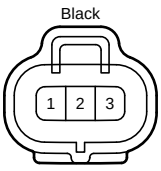

B 46
Black

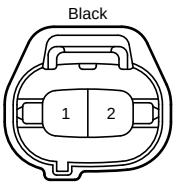

B 47
Black

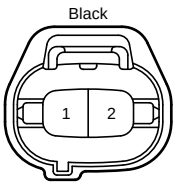

B 48
Black

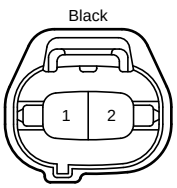

B 53



B 56
Black

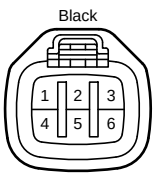

B 57
Black

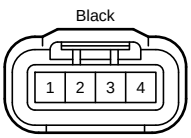

B 61
Blue

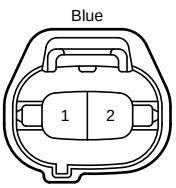

B 63
Black

B 64
Gray

B 68
Gray

B 69
Gray

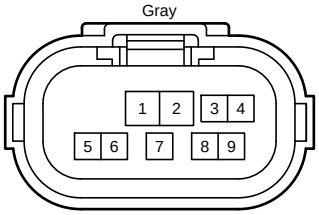

B 70
Gray

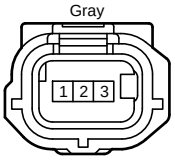

B 71
Gray

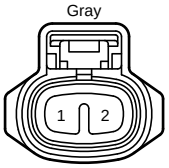

B 73
Black

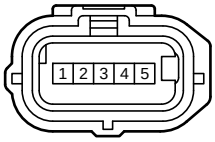

B 77
Gray

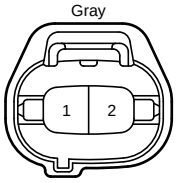

(Except 2ZR-FE)

B 77
Black

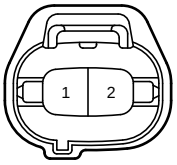

(2ZR-FE)

B 78



B 82
Gray

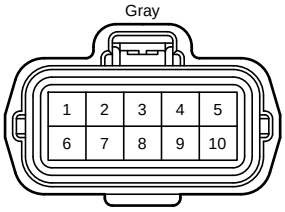

B 95
Gray

E 1
Black