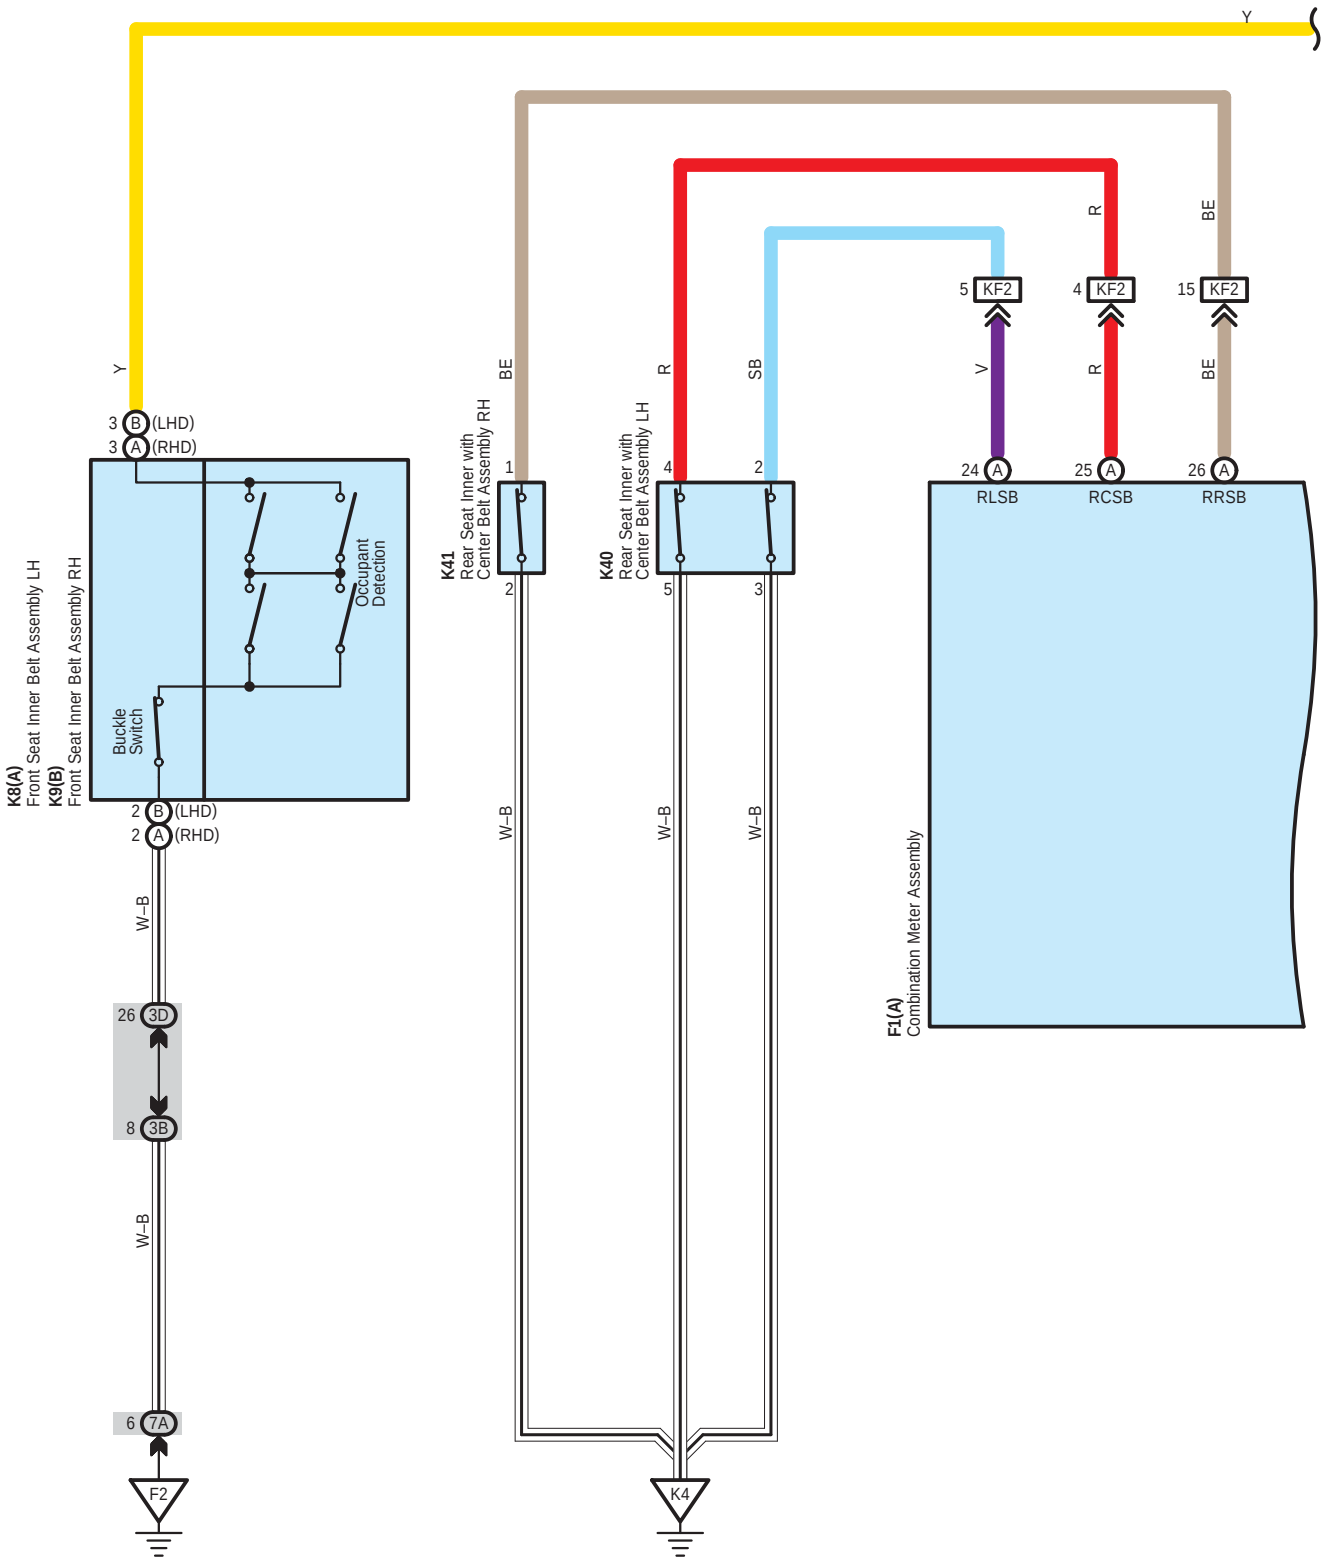
K8(A)
Front Seat Inner Belt Assembly LH
K9(B)
Front Seat Inner Belt Assembly RH
Buckle Switch
Occupant Detection
3 B (LHD)
3 A (RHD)
2 B (LHD)
2 A (RHD)
Y
W–B
26 3D
8 3B
6 7A
F2
K41
Rear Seat Inner with Center Belt Assembly RH
1
2
BE
K40
Rear Seat Inner with Center Belt Assembly LH
4
5
2
3
R
SB
5 KF2
4 KF2
15 KF2
V
24 A
25 A
26 A
RLSB
RCSB
RRSB
F1(A)
Combination Meter Assembly
K4

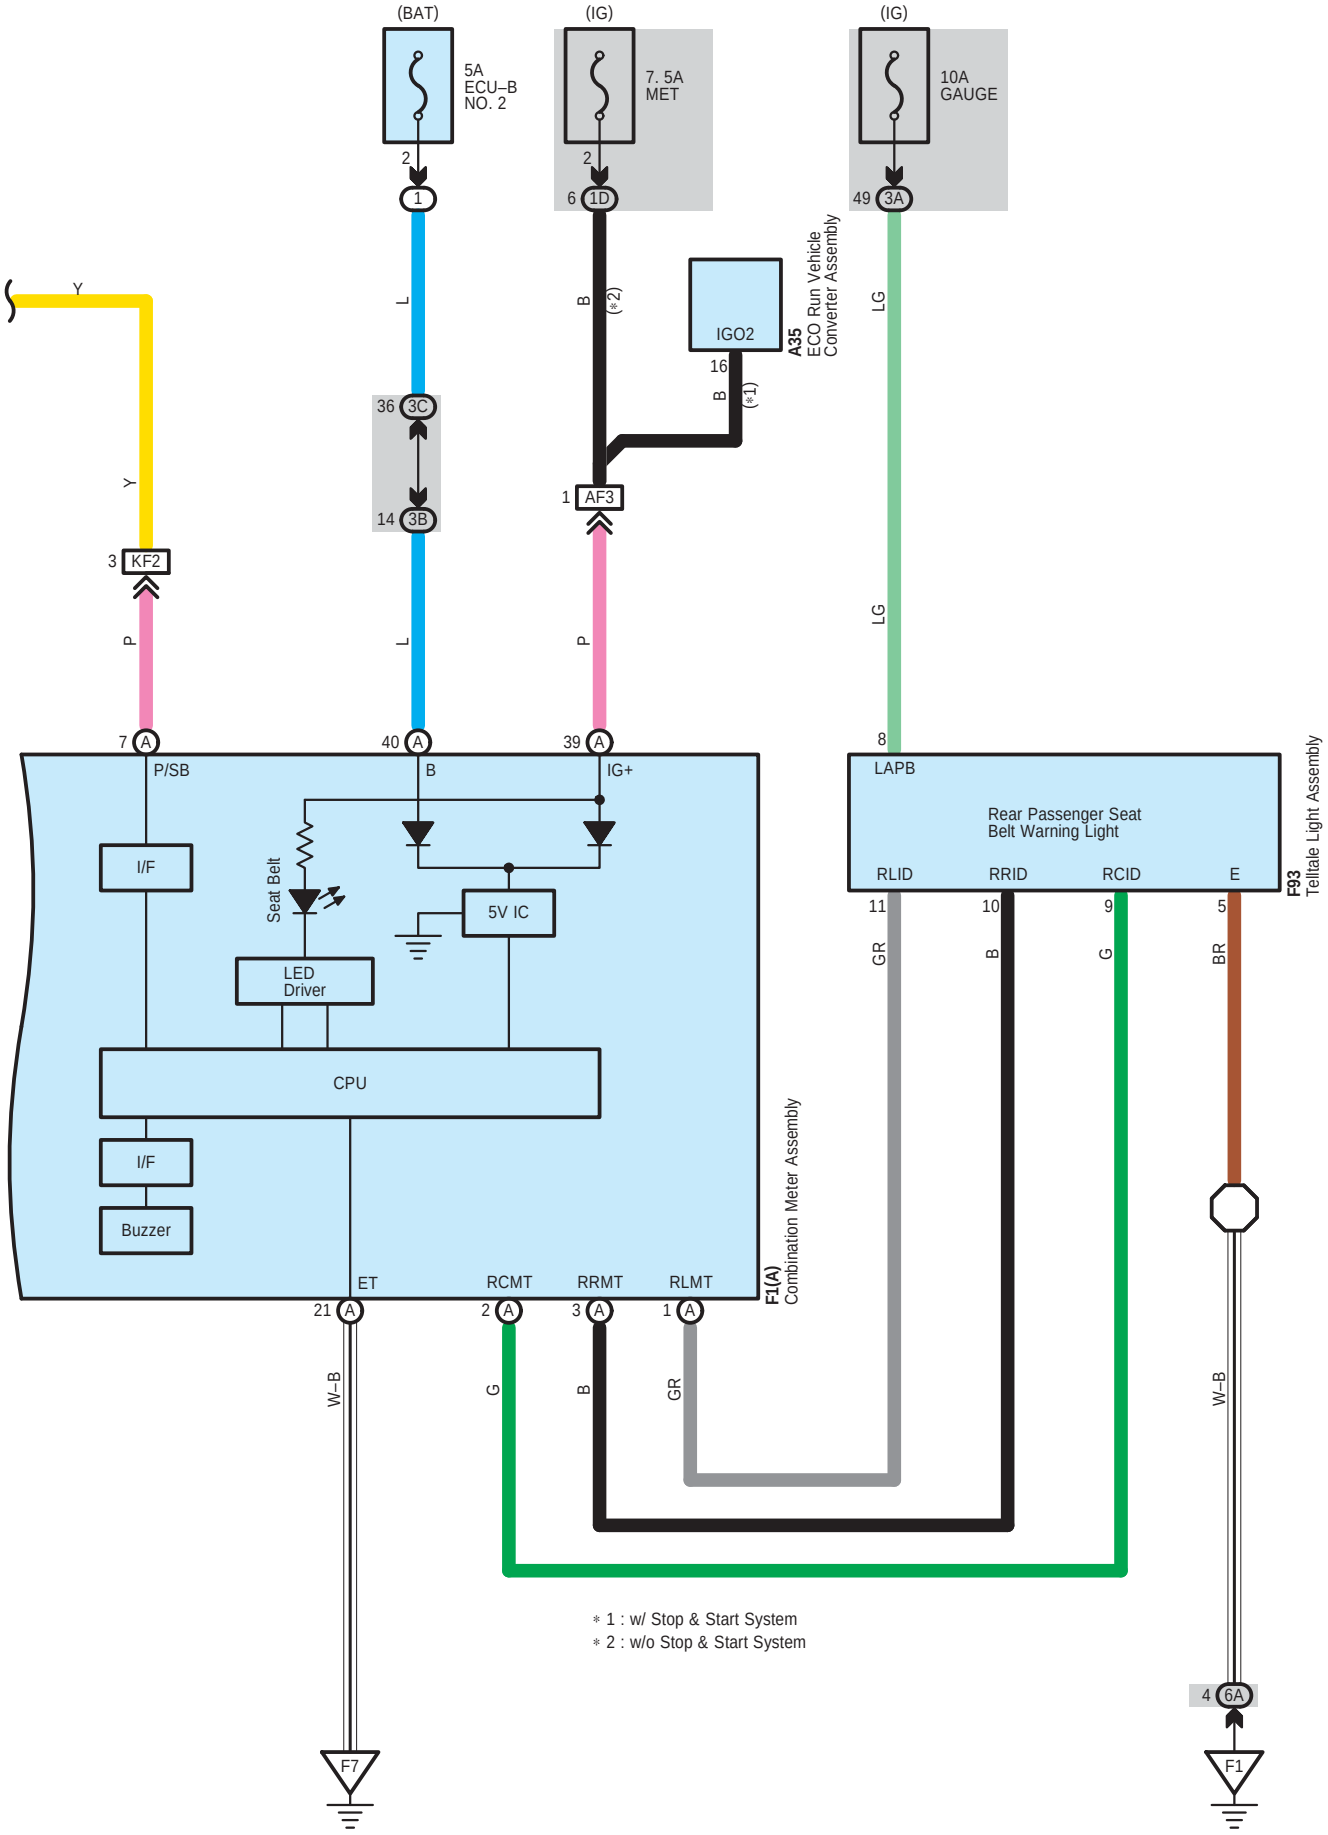
(BAT)
5A
ECU–B
NO. 2
(IG)
7. 5A
MET
(IG)
10A
GAUGE
IGO2
A35
ECO Run Vehicle
Converter Assembly
KF2
AF3
3C
3B
1D
3A
6A
P/SB
B
IG+
I/F
Seat Belt
LED
Driver
5V IC
CPU
I/F
Buzzer
ET
RCMT
RRMT
RLMT
F1(A)
Combination Meter Assembly
LAPB
Rear Passenger Seat
Belt Warning Light
RLID
RRID
RCID
E
F93
Telltale Light Assembly
F7
F1
＊1 : w/ Stop & Start System
＊2 : w/o Stop & Start System

A 35
Black

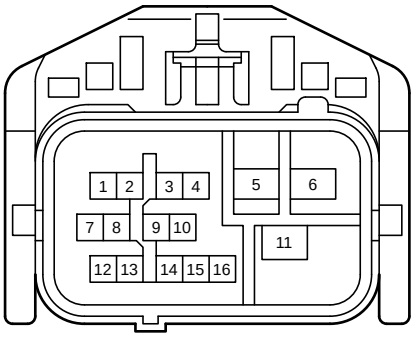

F 1
Black

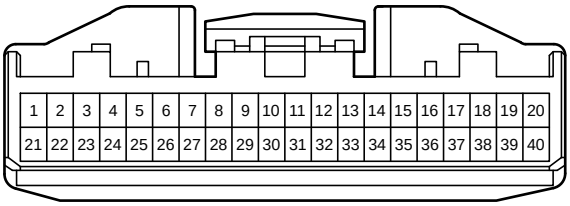

F 93
Black

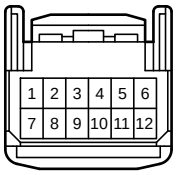

K 8
White

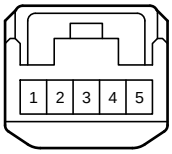

K 9
White

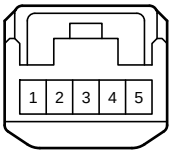

K 40
White

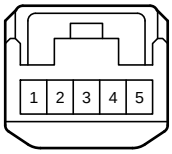

K 41
Black



1D
White

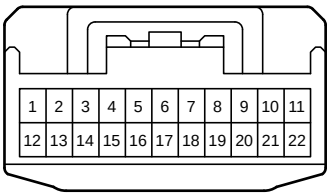

3A
White

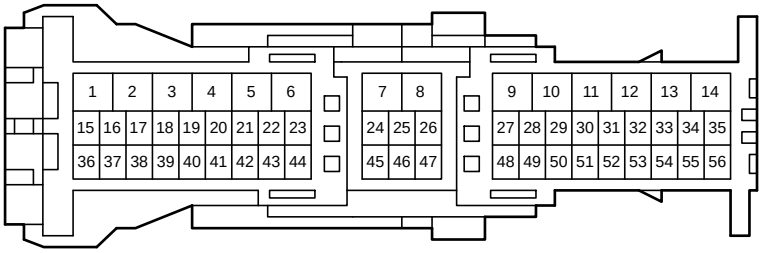

3B
White

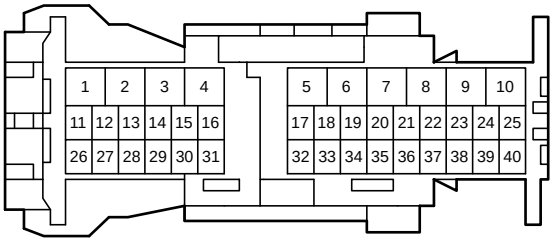

3C
White

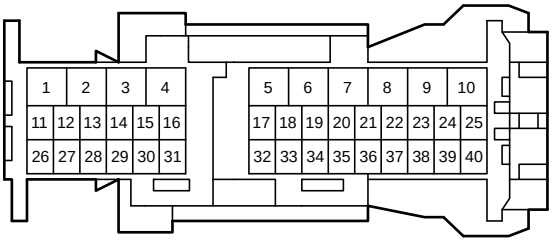

3D
White

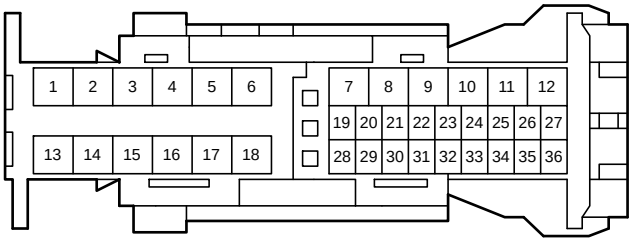

6A
White

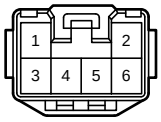

7A
White

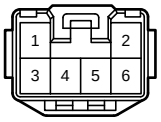

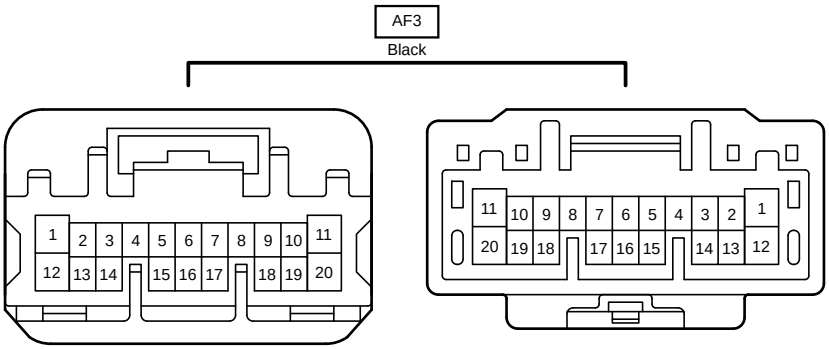
AF3
Black
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

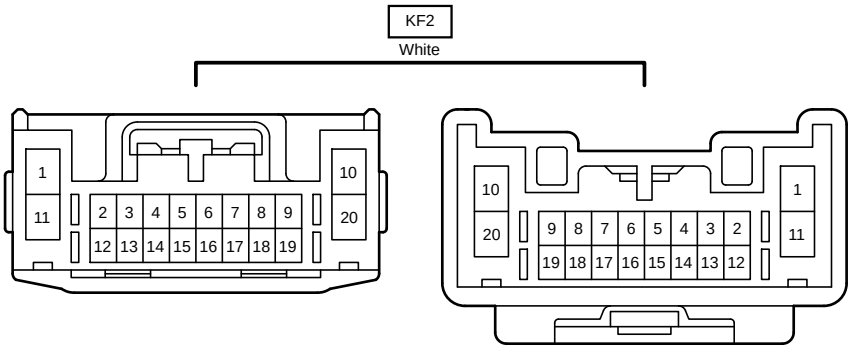
KF2
White
1 10
11 20
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10 1
20 11
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12