Position of Parts in Engine Compartment <RHD H/B 1NZ-FE, 2NZ-FE>

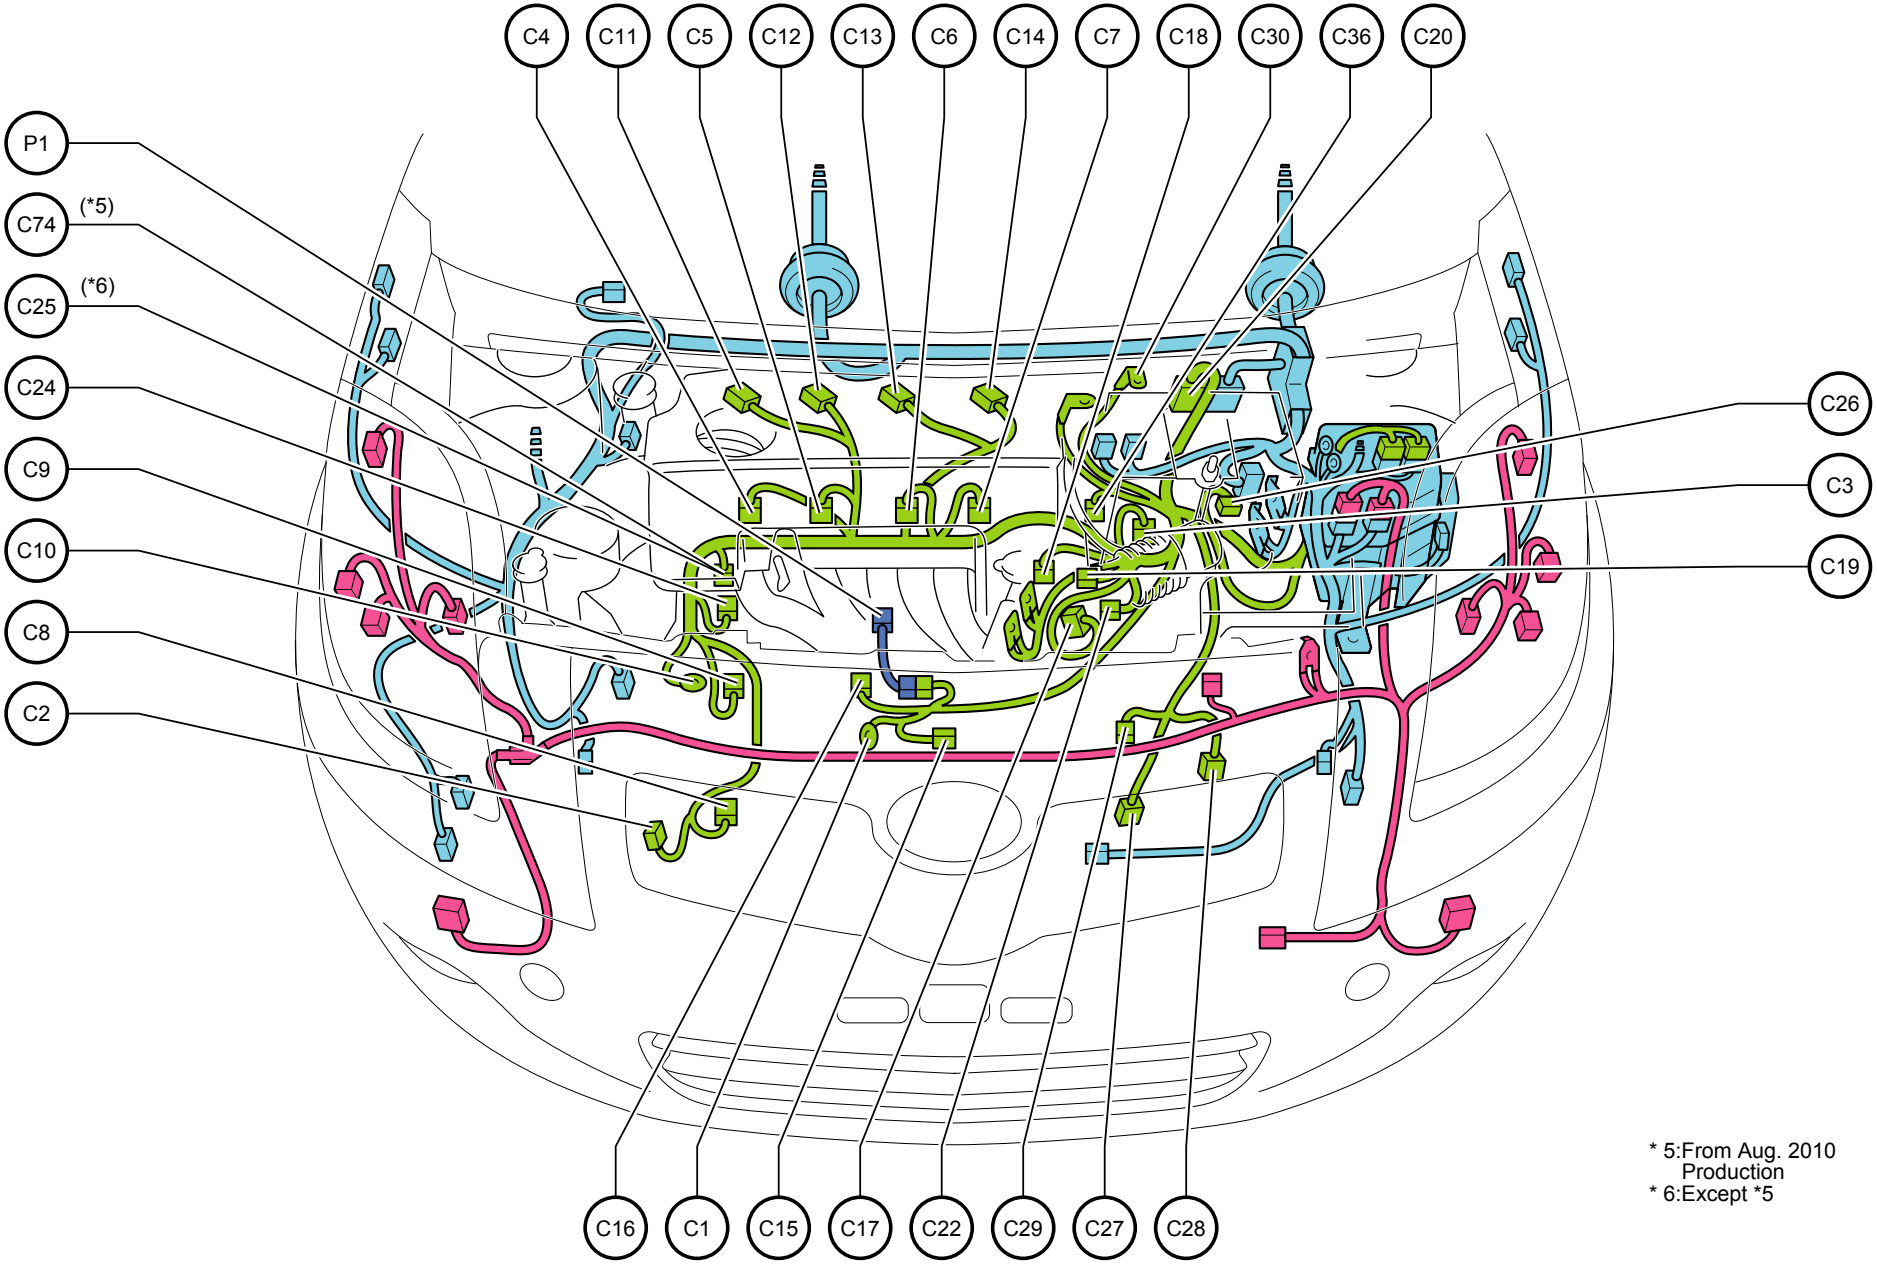

* 5:From Aug. 2010 Production
* 6:Except *5

C	1	Starter
C	2	Crankshaft Position Sensor
C	3	VSV (Purge)
C	4	Fuel Injector (No.1)
C	5	Fuel Injector (No.2)
C	6	Fuel Injector (No.3)
C	7	Fuel Injector (No.4)
C	8	A/C Compressor
C	9	Alternator
C	10	Alternator
C	11	Ignition Coil (No.1)
C	12	Ignition Coil (No.2)
C	13	Ignition Coil (No.3)
C	14	Ignition Coil (No.4)
C	15	Starter
C	16	Engine Oil Pressure SW
C	17	Throttle Body Assembly
C	18	Camshaft Position Sensor
C	19	Water Temp. Sensor
C	20	Engine ECU
C	22	Back-Up Lamp SW
C	24	Camshaft Timing Oil Control Valve
C	25	Noise Filter (Ignition)
C	26	Air Flow Meter
C	27	Park/Neutral Position SW
C	28	ECT Solenoid
C	29	Speed Sensor (Turbine)
C	30	Fusible Link Block
C	36	Oxygen Sensor (Bank 1 Sensor 1)
C	74	Noise Filter (Ignition)
P	1	Knock Control Sensor (Bank 1)

C 1



C 2
Black

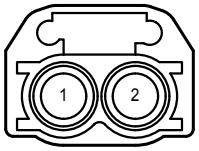

C 3
Blue

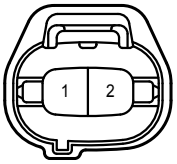

C 4
Black



C 5
Gray

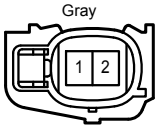

C 6
Black



C 7
Gray

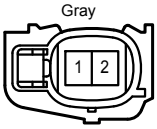

C 8
Gray

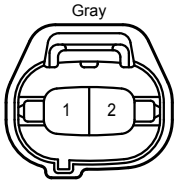

C 9
Black

C 10



(Except 2SZ-FE)

C 11
Black



C 12
Gray

C 13
Black



C 14
Gray

C 15
Black

C 16
Gray

C 17
Black

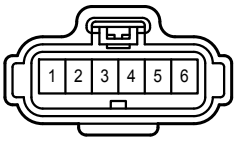

C 18
Black

C 19
Black

C 20
Black

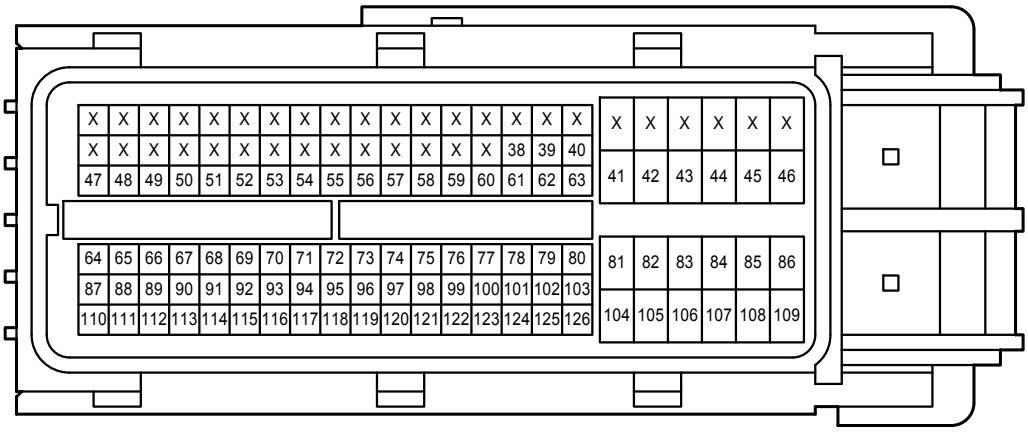

C 22
Gray

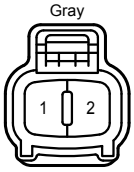

C 24
Black

C 25
Gray

C 26
Black

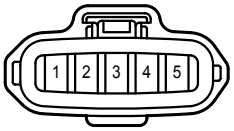

(Except 2ZR-FE From Aug. 2008 Production)

C 27
Gray

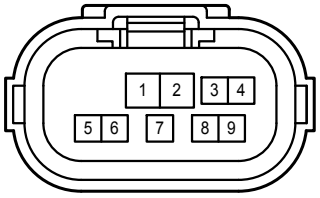

C 28
Gray

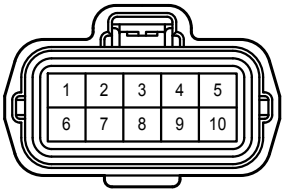

C 29
Black

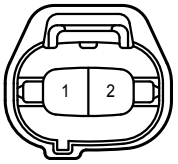

C 30



C 36
Dark Gray

C 74
Gray

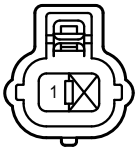

P 1
Black