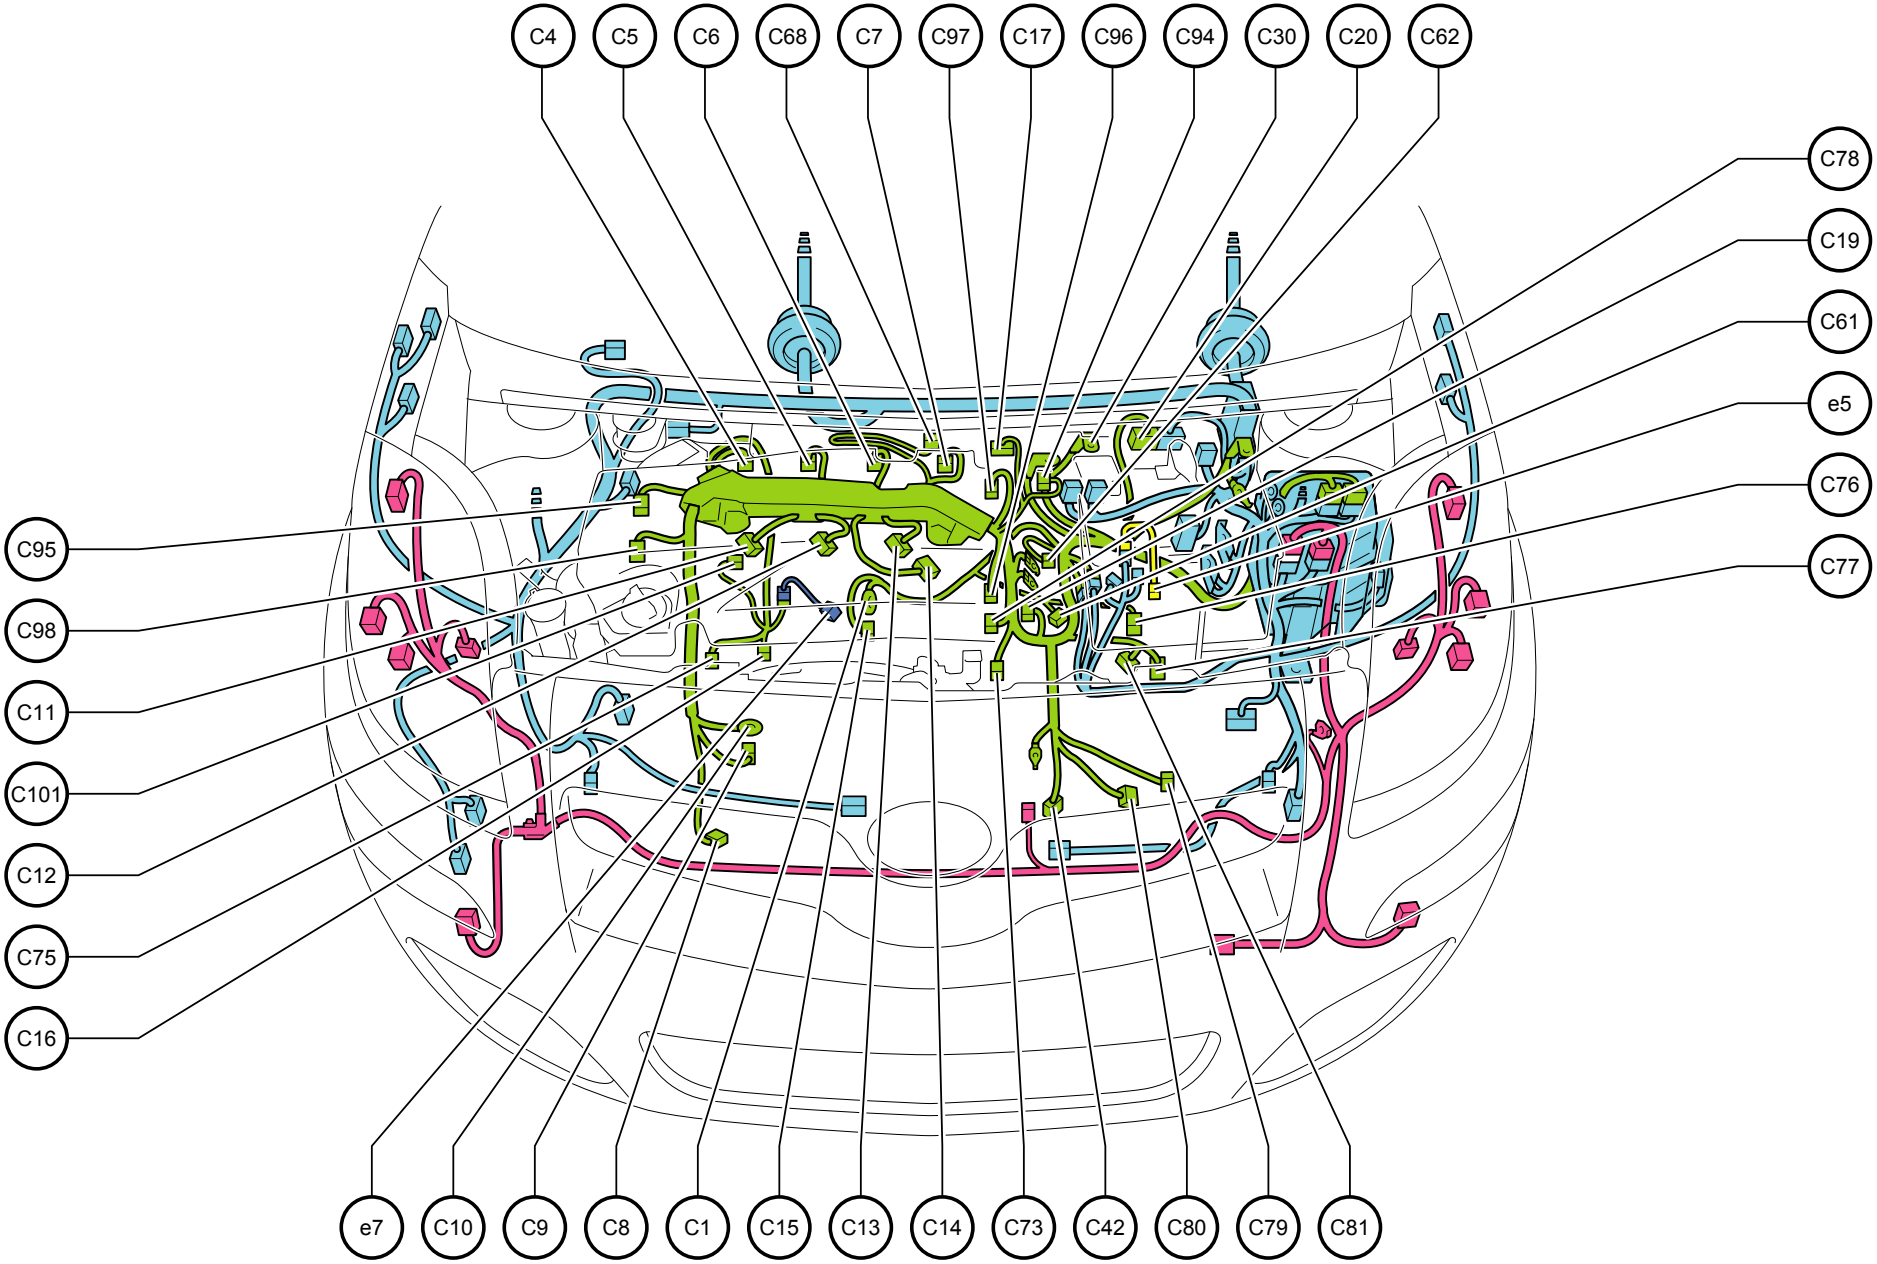
C4
C5
C6
C68
C7
C97
C17
C96
C94
C30
C20
C62
C78
C19
C61
e5
C76
C77
C95
C98
C11
C101
C12
C75
C16
e7
C10
C9
C8
C1
C15
C13
C14
C73
C42
C80
C79
C81

C 1 Starter
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 7 Fuel Injector (No.4)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 14 Ignition Coil (No.4)
C 15 Starter
C 16 Engine Oil Pressure SW
C 17 Throttle Body Assembly
C 19 Water Temp. Sensor
C 20 Engine ECU
C 30 Fusible Link Block
C 42 Oxygen Sensor (Bank 1 Sensor 2)
C 61 Shift Actuator
C 62 Select Actuator
C 68 Air Flow Meter
C 73 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 75 Crankshaft Position Sensor
C 76 Park/Neutral Position SW
C 77 Back-Up Lamp SW
C 78 EGR Valve Control Motor
C 79 Clutch Stroke Sensor
C 80 Clutch Actuator
C 81 Transmission Revolution Sensor
C 94 VSV (Purge)
C 95 Camshaft Timing Oil Control Valve (Intake Side)
C 96 VVT Sensor (Exhaust Side)
C 97 VVT Sensor (Intake Side)
C 98 Camshaft Timing Oil Control Valve (Exhaust Side)
C 101 E.F.I. Vacuum Sensor Assembly

e 5 Neutral Start SW
e 7 Knock Control Sensor (Bank 1)

C 1



C 4
Black



C 5
Gray



C 6
Black



C 7
Gray



C 8
Gray

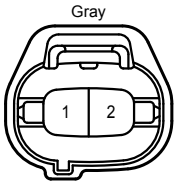

C 9
Black

C 10



(Except 2SZ-FE)

C 11
Black

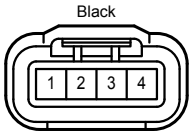

C 12
Gray

C 13
Black



C 14
Gray

C 15
Black

C 16
Gray

C 17
Black

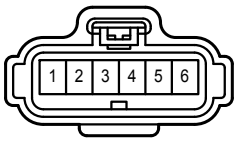

C 19
Black

C 20
Black

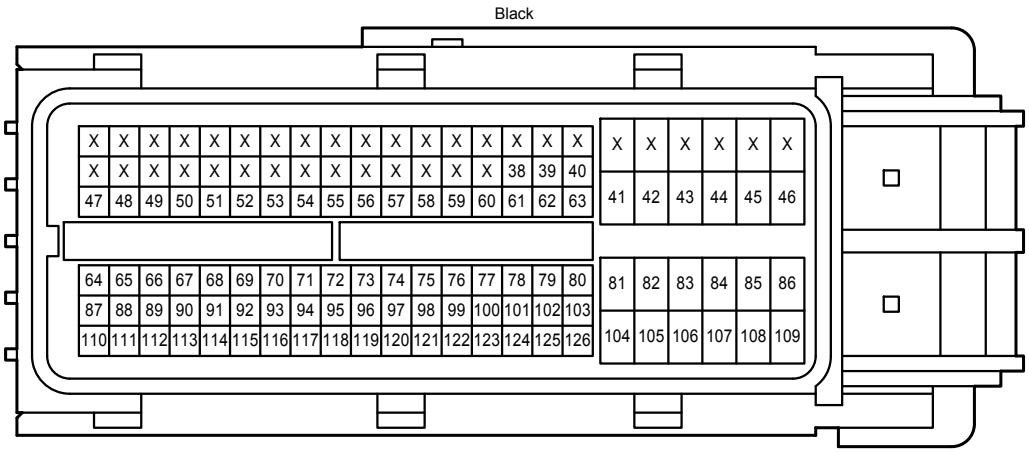

C 30



C 42
Dark Gray

C 61
Black

C 62
Black

C 68
Black

C 73
Dark Gray

C 75
Black

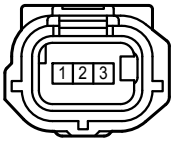

C 76
Black

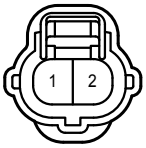

C 77
Gray

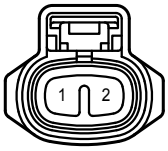

C 78
Black

C 79
Black

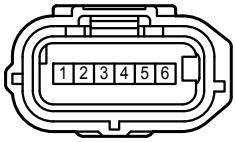

C 80
Black

C 81
Black

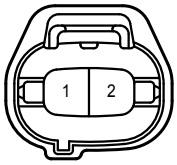

C 94
Black

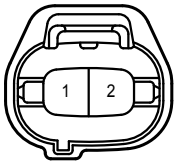

C 95
Black

C 96
Gray

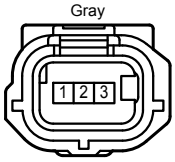

C 97
Black

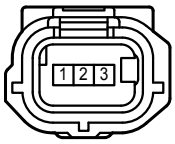

C 98
Gray

C101
Black

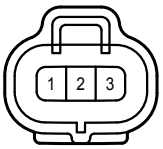

e 5
Black

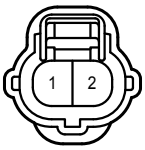

e 7
Black