



For JBS Units without On-board Door Lock Relays:

Requires
 (1) 778 or
 (2) 775's
 (1) 1000 Ohm Resistor

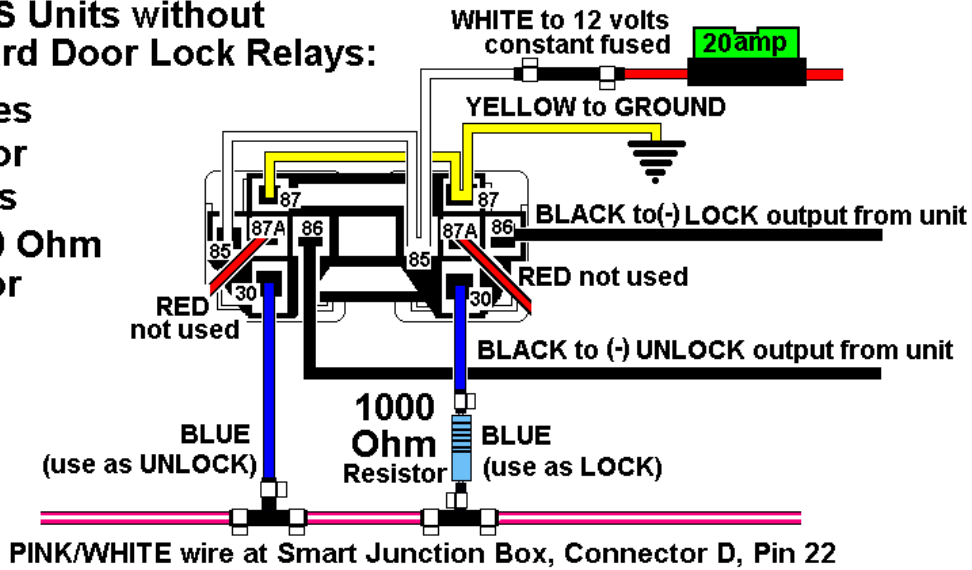

For JBS Units with On-board Door Lock Relays:
 Requires (1) 1000 Ohm Resistor

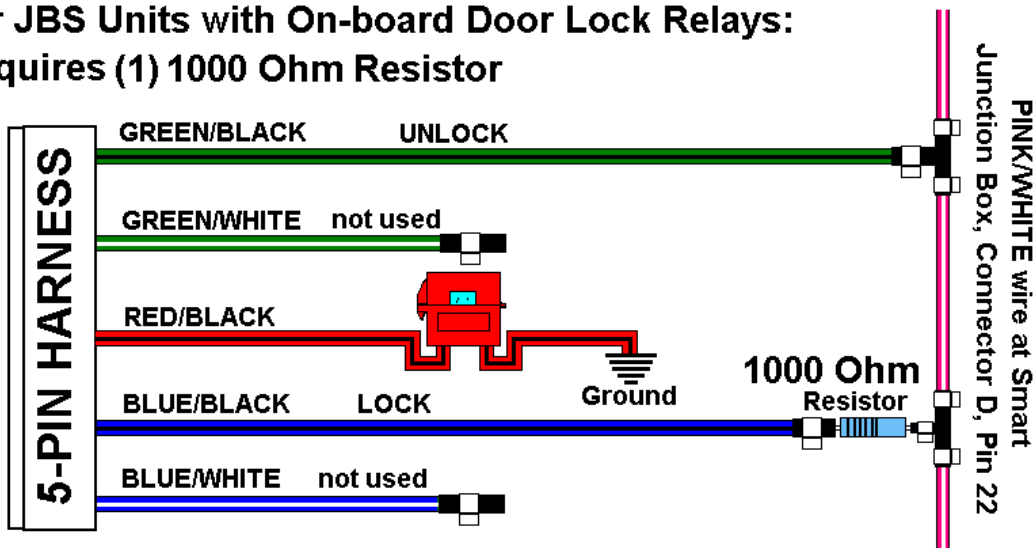

NOTE: Connect the RED WITH BLACK STRIPE wire to ground.

JBS KE-100, KE-150 and 1702
 Requires (1) 1000 Ohm Resistor

