
## CHRYSLER (+) Positive Factory Disarm wire Diagram and Resistor Value Chart:

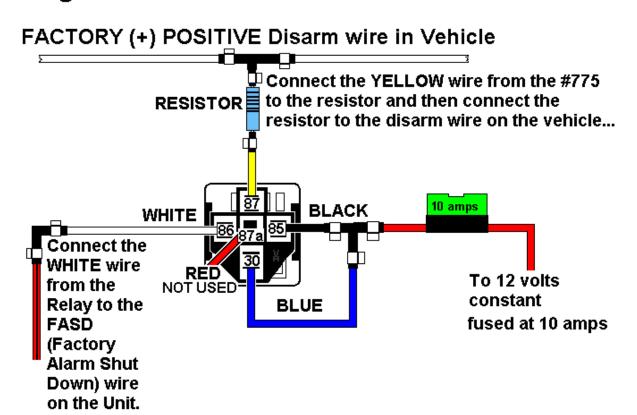

| YEAR and MODEL               | RESISTOR<br>VALUE | LOCATION  |
|------------------------------|-------------------|---|
| 99-04 Chrysler 300M          | 680 Ohm           | LIGHT GREEN/ORANGE in Drivers Kick, Door Har.               |
| 95-00 Chrysler Cirrus        | 470 Ohm           | GREEN/ORANGE in Kick Panel or at BCM                        |
| 99-Up Chrysler Concorde      | 680 Ohm           | LIGHT GREEN/ORANGE in Drivers Kick, Door Har.               |
| 99-01 Chrysler LHS           | 680 Ohm           | LIGHT GREEN/ORANGE in Drivers Kick                          |
| 01-Up Chrysler Sebring Sedan | 750 Ohm           | LIGHT GREEN/ORANGE @ BCM, Conn. C4, Pin 1                   |
| 96-00 Chrysler Sebring Conv. | 470 Ohm           | LIGHT GREEN/ORANGE in Drivers Kick Panel above hood release |
| 01-Up Chrysler Sebring Conv. | 750 Ohm           | LIGHT GREEN/ORANGE @ BCM, Conn. 4, Pin 4                    |
| 99-Up Dodge Intrepid         | 680 Ohm           | LIGHT GREEN/ORANGE in Drivers Kick, Door Har.               |
| 95-00 Dodge Stratus          | 470 Ohm           | GREEN/ORANGE in Kick Panel or at BCM                        |
| 01-Up Dodge Stratus Sedan    | 750 Ohm           | LIGHT GREEN/ORANGE @ BCM, Conn. 4, Pin 4                    |
| 96-00 Plymouth Breeze        | 470 Ohm           | GREEN/ORANGE in Kick Panel or at BCM                        |