

## FRONT FENDER FRONT APRON (ASSY)

**REMOVAL** (With the radiator side support removed.)

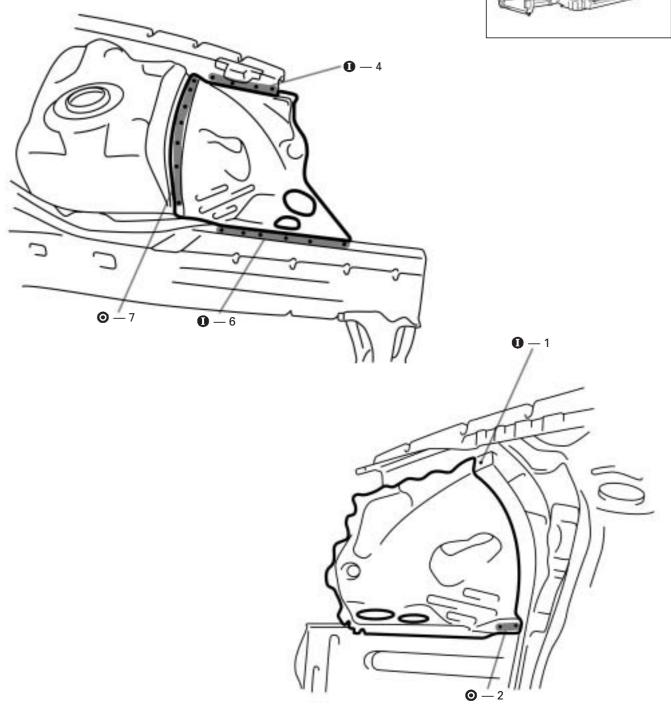



## **INSTALLATION**

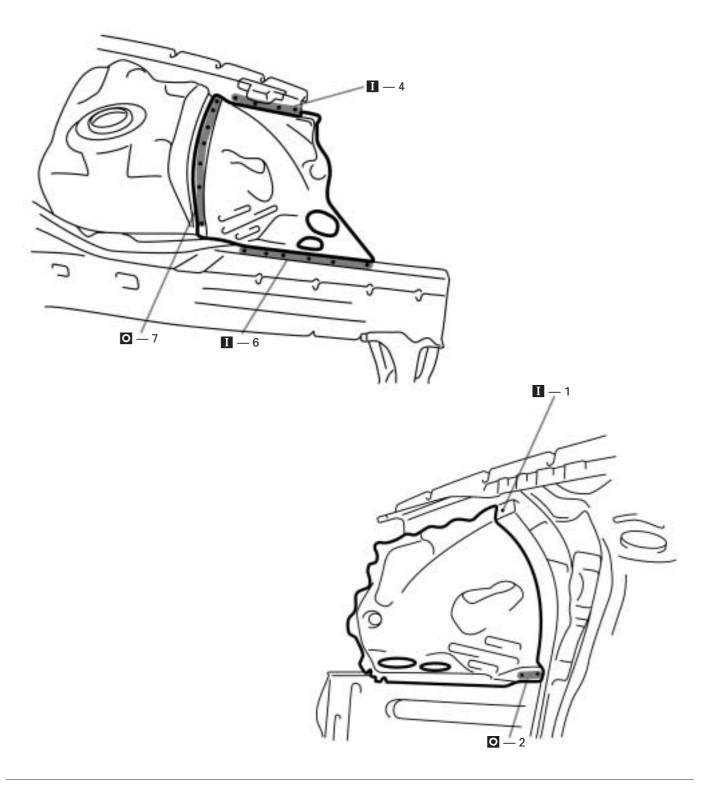

 Temporarily install the new parts and measure each part in accordance with the body dimension diagram.