
BOOCH OF

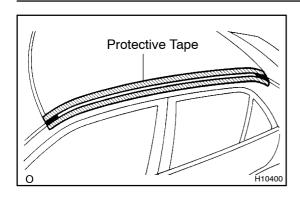


REMOVAL

1. REMOVE ENDS OF MOULDING

- Apply protective tape to the outer surface as shown in the illustration to keep the surface from being scratched.
- (b) Using a heat light heat the moulding to 20 30 °C (68 86 °F).

NOTICE:


Do not heat the moulding excessively.

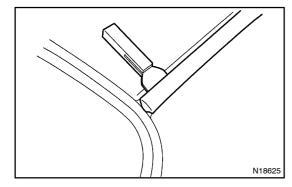

(c) Using a scraper, pull off the roof drip side finish moulding from the front end and rear end.

HINT:

Tape the scraper tip before use.

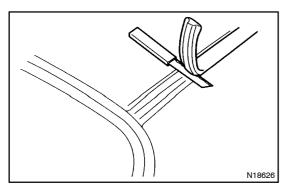

2. REMOVE MOULDING AND ADHESIVE

- (a) Pull off the moulding by cutting the adhesive with a knife at the front and rear ends.
- (b) Remove the moulding.

NOTICE:

Do not damage the body with the knife.