
FI0LO-01

INSTALLATION

- 1. INSTALL THROTTLE BODY
- (a) Place a new gasket on the intake manifold.
- (b) Install the throttle body to the intake manifold.

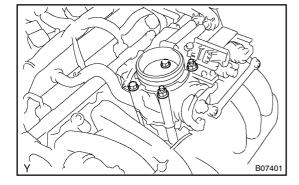

(c) Install the 2 bolts and 2 nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

- (d) Connect the 2 No.3 water bypass hoses to the throttle body.
- (e) Connect the accelerator pedal position sensor connector.
- (f) Connect the throttle control motor connector.
- (g) Connect the throttle position sensor.
- (h) Connect the accelerator cable.
- 2. INSTALL VSV AND BRACKET ASSEMBLY

Install the VSV and bracket assembly with the 3 bolts.

Torque: 7.5 N·m (75 kgf·cm, 66 in.·lbf)

- 3. INSTALL AIR CLEANER ASSEMBLY
- 4. INSTALL AIR CLEANER INLET
- 5. FILL WITH ENGINE COOLANT