
SA0SN-03

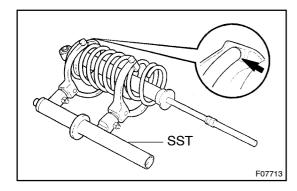

# **REASSEMBLY**

## **INSTALL SUSPENSION SUPPORT AND COIL SPRING**

(a) Using SST, compress the coil spring. SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)


#### NOTICE:

### Do not use an impact wrench. It will damage the SST.

(b) Install the coil spring to the shock absorber. HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

(c) Install the spring bumper, cushion, collar, upper insulator, suspension support, cushion and washer to the shock absorber and temporarily tighten a new nut.

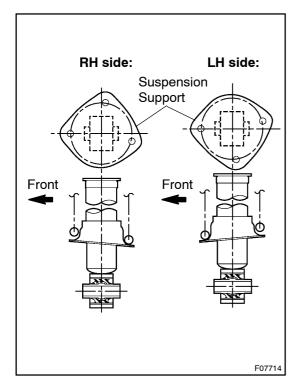

- (d) Rotate the suspension support, as shown in the illustration.
- (e) Remove the SST.

SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

#### HINT:

After removing the SST, recheck the direction of the suspension support.