


REAR SHOCK ABSORBER (Wagon)

COMPONENTS

SA051-09

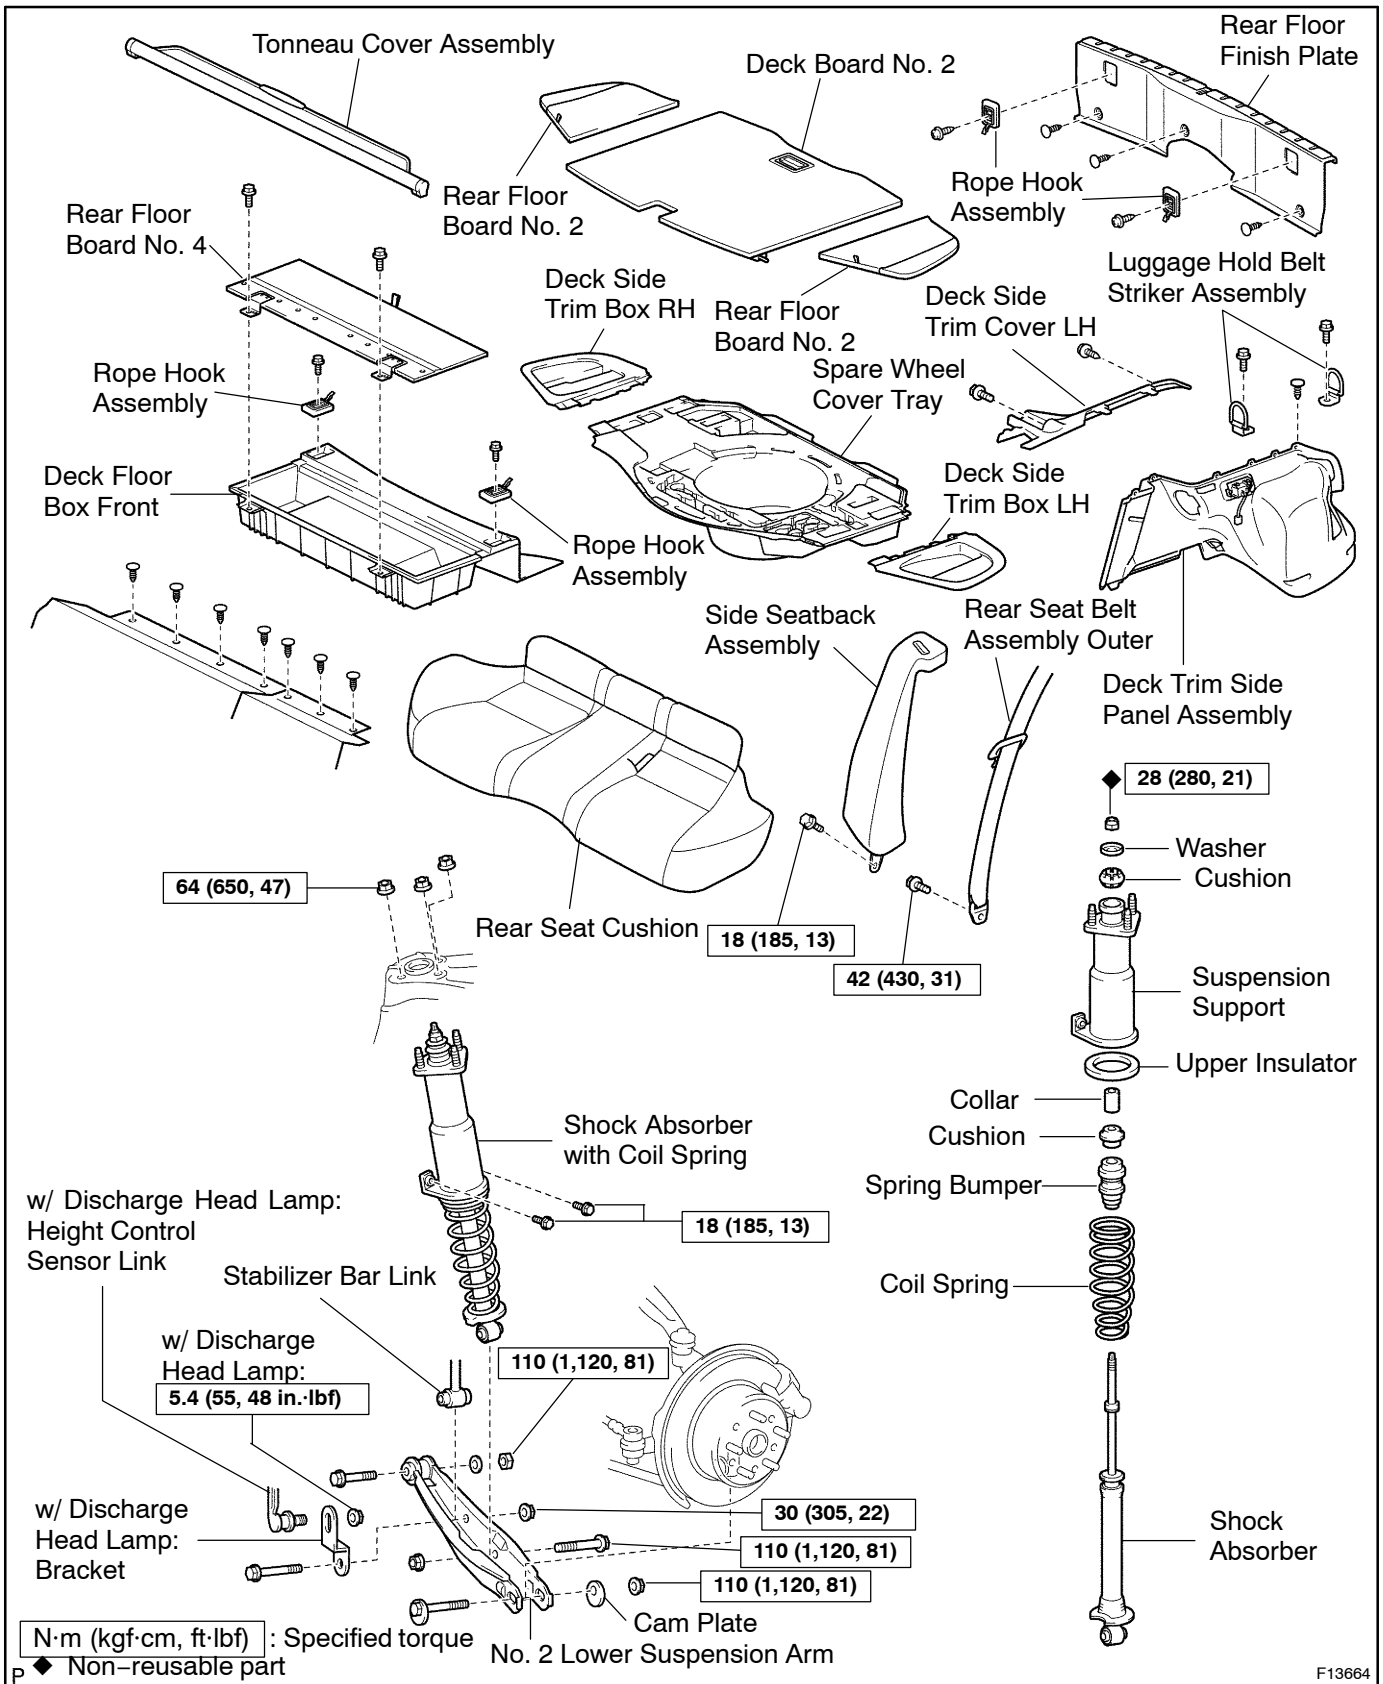

F13664