

INSTALLATION

1. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP NO.1

NOTICE:

Only when replacing the clips.

- Remove the tape that remains on the mounting surface of the body and then clean the surface with white gasoline.
- Using a heat light, heat up the clip installation surfaces of the body and moulding.

Heating temperature

Body	Moulding
40 - 60°C (104 - 140°F)	20 - 30°C (68 - 86°F)


NOTICE:

Do not heat them excessively.

- Set the new clips into the positions as shown in the illustration, and press-fit those clips by hands to install them.
- The installation of the moulding should be carried out when 30 minutes or more have passed after press-fitting the clips.

HINT:

- Initial hardening time is 30 minutes
- Hardening completes after 24 hours

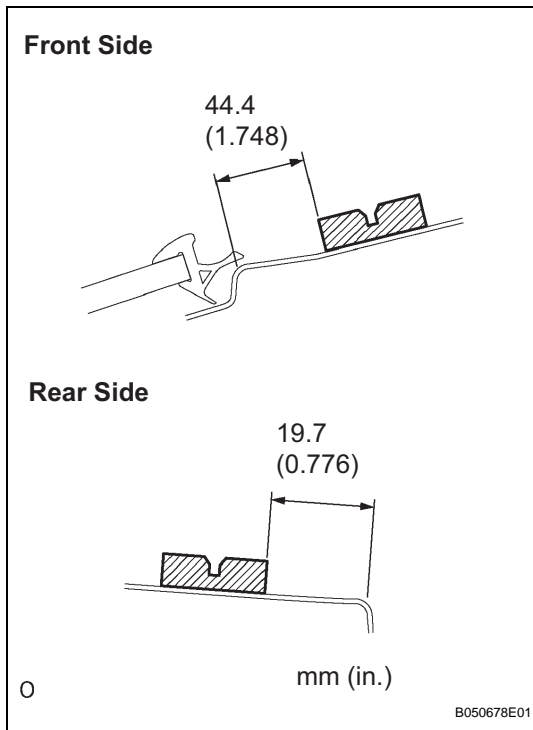

- INSTALL ROOF DRIP SIDE FINISH MOULDING REAR
- INSTALL ROOF DRIP SIDE FINISH MOULDING CENTER
- INSTALL ROOF DRIP SIDE FINISH MOULDING
- INSTALL ROOF DRIP SIDE MOULDING COVER FRONT