
SERVICE PROCEDURE

22. Airdam Skirt A: REMOVAL AND INSTALLATION


1) Remove airdam skirt mounting bolts and clips.

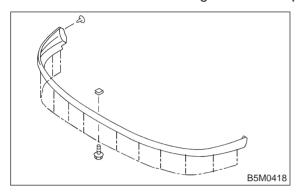

2) Installation is in the reverse order of removal.

23. Rear Under Spoiler A: REMOVAL AND INSTALLATION

1) Remove tapping screws and clips.

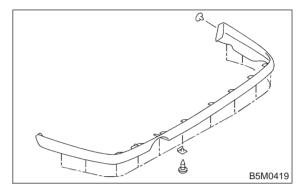

- 2) Installation is in the reverse order of removal. NOTE:
- 12 tapping screws are used for Sedan.
- 14 tapping screws are used for Wagon.