


19. Upper Inner Trim S911384

A: REMOVAL S911384A18

- 1) Remove front mole (A).
- 2) Remove front pillar upper trim (B).
- 3) Detach front seat belt shoulder anchor, then remove center pillar upper trim (C).

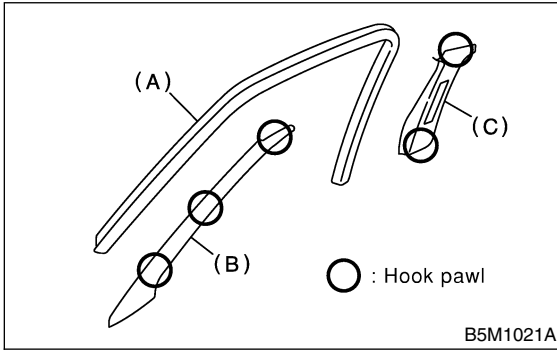

B: INSTALLATION S911384A11

Install in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel to body flange.

NOTE:

When installing center pillar upper trim and front pillar upper trim, be sure to set front mole as shown in figure.

