# 5. Under Coat

## A: SPECIFICATION


### Repair material:

## THREE BOND 6115

- 1) Take care that under coat does not attach to the locations other than shown in the figures and to the following locations.
- High-temperature parts related to the exhaust pipe
- Hoses, tubes, and harness parts
- Installation surfaces of rear suspension, transmission, subframe, etc.
- 2) Application area and application thickness


	300 μm or more
	600 um or moro
	600 μm or more

#### · Side view

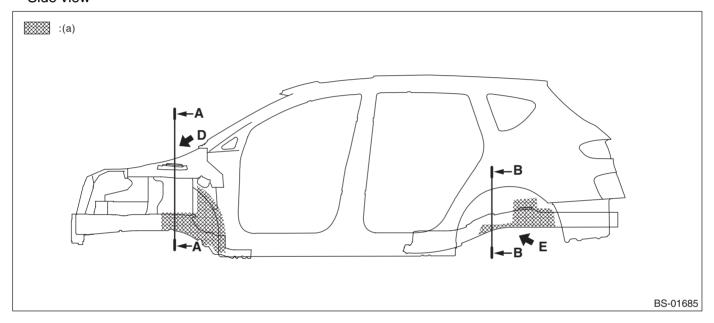


(a) 600 µm or more


#### · Bottom view

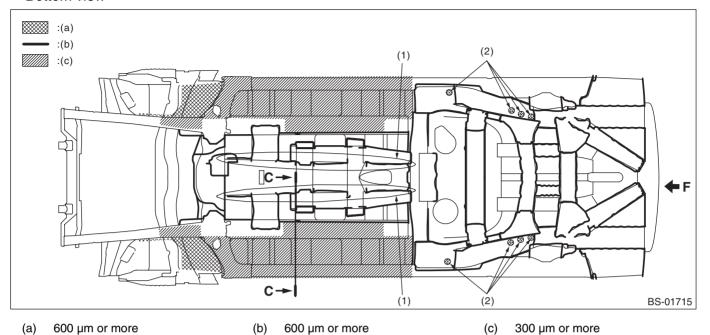

- (1) Film thickness in this area should be 200 µm or more.
- (2) Apply to the grommet.

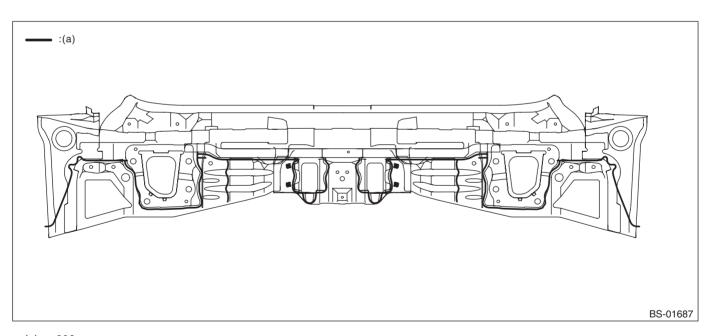


(a) 600 µm or more

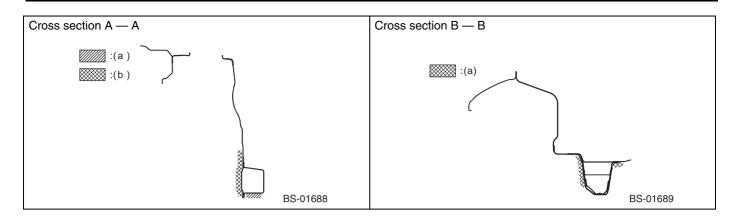


- (a) 300 µm or more
- (b) 600 µm or more

(a) 600 µm or more

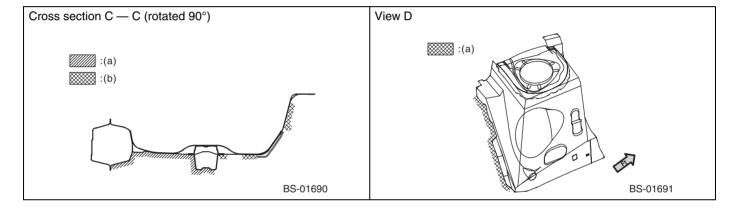


- (a) 300 µm or more
- (b) 600 µm or more

(a) 600 µm or more

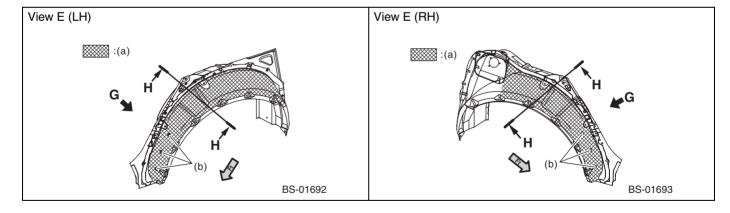

- (a) 600 µm or more
- (b) Also apply to the grommets.

- (a) 600 µm or more
- (b) Also apply to the grommets.

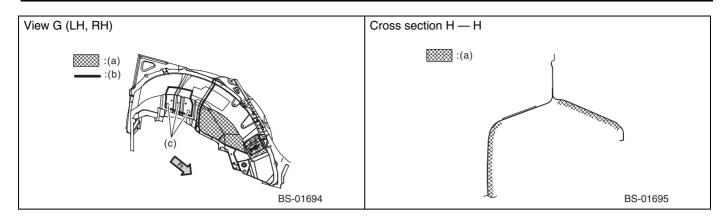

- (a) 600 µm or more
- (b) 600 µm or more
- (c) The holes shall be blocked.

(a) 600 µm or more