


CHRYSLER's Starter #2 and Accessory #2 Diagram: Requires (2) #775 Relays

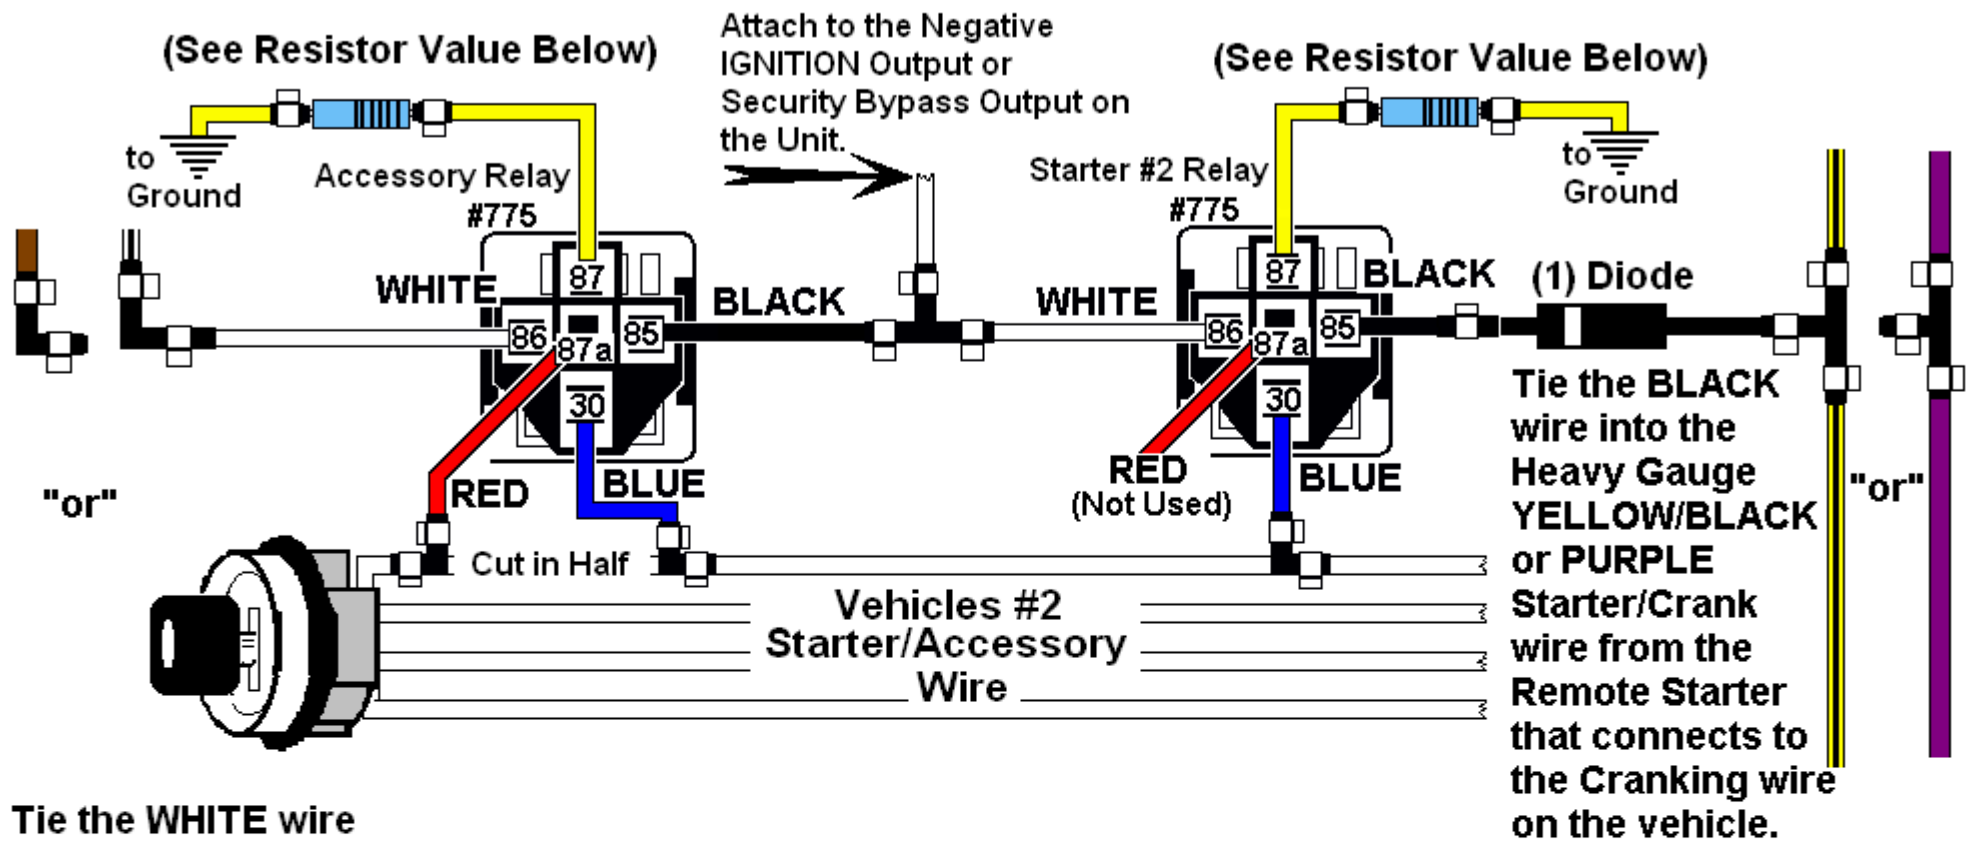

Tie the WHITE wire into the Heavy Gauge WHITE/BLACK or BROWN Accessory wire from the Remote Starter

Vehicle	Acc/Resistor Value	Starter #2/Resistor Value	Starter/Acc Wire Color
05-Up Dodge Magnum	610 Ohms	180 Ohms	Purple/Brown
05-Up Chrysler 300	610 Ohms	180 Ohms	Purple/Brown
05-Up Jeep Grand Cherokee	560 Ohms	180 Ohms	Purple/Brown
06-UP Jeep Commander	560 Ohms	180 Ohms	Purple/Brown
06-UP Dodge Ram	610 Ohms	180 Ohms	Purple/Brown
06-Up Chrysler PT Cruiser	610 Ohms	180 Ohms	Purple/Brown
06-UP Dodge Charger	610 Ohms	180 Ohms	Purple/Brown
07 Dodge Caliber	610 Ohms	180 Ohms	Purple/Brown